

TOPFIELD®
LEADER OF MULTIMEDIA HOME

Digital Satellite Receiver
Total Media Solution
SRP-2100
User Guide

TMS

DVB
Digital Video
Broadcasting



Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- The mains plug, which is used as a disconnect device, shall remain readily operable.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to a person.



The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Contents

Contents	iv
1 Introduction	1
1.1 Features	2
1.2 Controlling the digital receiver	3
1.2.1 The front panel	4
1.2.2 The remote control	5
1.3 What is the common interface?	8
2 Setup	10
2.1 Unpacking	10
2.2 Safety precautions	11
2.3 Rear panel connections	13
2.4 Connecting up your digital receiver	15
2.4.1 Connecting the antenna	15
2.4.2 Connecting to your television set	16
2.4.3 Connecting to your video cassette recorder	19
2.5 Inserting batteries in the remote control	19
2.6 Switching on for the first time	20
3 Service Search	21
3.1 Searching broadcasting services	21
3.1.1 Configuring LNB settings	22
3.1.2 Configuring DiSEqC 1.2 settings	24
3.1.3 Configuring USALS settings	25

3.1.4	Searching services	27
3.2	Copying services	30
3.3	Editing the transponder list	31
3.4	Resetting to factory settings	32
3.5	Resetting to user settings	32
3.6	Clearing the services list	33
4	Preference Settings	34
4.1	Language settings	34
4.1.1	Menu language	34
4.1.2	Subtitle language	35
4.1.3	Audio language	35
4.2	Video and audio settings	36
4.2.1	High definition television	36
4.2.2	Colour model	37
4.2.3	Video cassette recorder	37
4.2.4	Television aspect ratio	38
4.2.5	Audio mode	39
4.3	Local time setting	39
4.4	Parental control	42
4.5	Recording Settings	43
4.6	Playback Settings	44
4.7	Adjusting the On-Screen Display	45
4.8	Front Display Settings	46
4.9	To use MediaHighway programme guide	47
4.10	Adjusting a size of picture in picture	47
4.11	Slideshow Settings	47
5	Daily Usage	49
5.1	Volume control	49
5.2	Watching television	49
5.2.1	The services list	49
5.2.2	The favourite services list	52
5.2.3	Viewing programme information	53
5.2.4	Selecting audio tracks	54
5.2.5	Selecting subtitle tracks	54

5.2.6	Viewing teletext	54
5.3	Viewing electronic programme guide	55
5.4	Watching multifeed programme	55
5.5	Using time shift	56
5.6	Using picture in picture	57
6	Editing Services	59
6.1	Editing the services list	59
6.2	Editing the favourite list	61
6.3	How to use the on-screen keyboard	63
7	Recording and Playing	64
7.1	Recording a programme	65
7.1.1	Instant recording	66
7.1.2	Recording Reservation	67
7.1.3	Scheduling recordings using the programme guide	70
7.1.4	Recording a time-shifted programme	70
7.1.5	Recording a pay service programme	71
7.2	File archive	72
7.2.1	To delete a recording	72
7.2.2	To sort recordings	73
7.2.3	To lock a recording	73
7.2.4	To rename a recording	73
7.2.5	To make a new folder	74
7.2.6	To move a recording to another folder	74
7.3	Playing back a recording	74
7.3.1	To navigate using the progress bar	75
7.3.2	To play in slow motion	76
7.3.3	To play in fast motion	76
7.3.4	To make a bookmark	76
7.3.5	To play back a recording repeatedly	77
7.3.6	To play back recordings in sequence	77
7.3.7	To play back a scrambled recording	78
7.4	Editing a recording	78
7.5	Copying a recording	79
7.6	Formatting the hard disk	80

8	Special Features	81
8.1	Playing back MP3 files	81
8.2	Playing back video files	82
8.3	Viewing graphic files	82
8.4	Copying files	83
8.4.1	To copy a file to an external hard disk drive	83
8.4.2	To copy a file from an external hard disk drive	84
8.5	Playing back contents of YouTube	84
8.6	Sharing image files by Flickr	85
8.7	Weather	87
8.8	Network Game	87
8.8.1	To use the wireless keyboard	87
8.8.2	Battle Tank Single Mode	88
8.8.3	Battle Tank Network Mode	93
9	Accessing to The Digital Receiver via The Internet	94
9.1	Configuring the router	95
9.1.1	To access within the local area network	95
9.1.2	To access over the Internet	96
9.2	Configuring the network settings on the digital receiver	97
9.3	Accessing the web server	98
9.4	Accessing the FTP server	100
10	Firmware Update	103
10.1	Checking the firmware information	103
10.2	From a USB memory	104
10.3	From the firmware server via the network	104
10.4	Over the air	106
A	Universal Remote Control	107
A.1	TV codes list	110
A.2	DVD codes list	127
A.3	Audio system codes list	129
A.4	Additional codes list	131
	Index	132

Chapter 1

Introduction

Congratulations on buying a SRP - 2100. The SRP - 2100 allows you to view and record digital TV programmes easily.

And the SRP - 2100 digital receiver is fully compliant with the international Digital Video Broadcasting (DVB) standard, and thus able to receive digital broadcasts of that standard.

For its operation you need an antenna which must be installed appropriately.

NOTE

In general, we equate a channel with a frequency. However, unlike analogue broadcasts, digital broadcasts are not all assigned to their own frequencies; instead, multiple television broadcasts are transmitted through a single frequency. The frequency in digital broadcasting is usually called transponder. To reduce confusion in this manual, the word **service** is preferably used than **channel** as a term to indicate one television or radio broadcast.

1.1 Features

The SRP - 2100 has plenty of features as follows:

- Supports DiSEqC 1.0, DiSEqC 1.1, DiSEqC 1.2 and US-ALS.
- Can store up to 7,000 television and 3,000 radio services.
- You can edit the services list.
- You can create favourite lists of your favourite services.
- You can see information about the current television or radio programme.
- Have electronic programme guides that provide an overview of scheduled programmes.
- You can record one service while you are currently watching another.
- You can record many programmes using a hard disk drive with large storage capacity.
- The time shift is available on the SRP - 2100. You can pause the programme that you are watching and resume it again at a later time. Then you can quickly go to any part of the current programme by fast forward or backward search.
- If you have an external hard disk drive connected to the digital receiver via the USB or eSATA ports, you can record television programmes into it. You can use the external hard disk drive as fast as the built-in hard disk drive with eSATA port.
- You can play back DivX and MP3 files and view image files in JPG format.
- You can play a network game with other players.
- You can play back various contents of the YouTube via the network.

1.2 Controlling the digital receiver


You can operate the digital receiver with the remote control or the buttons on the front panel.

NOTE

When the digital receiver is off but plugged into a wall outlet, we say that it is in standby mode; on the other hand, when it is on, it is in operation mode. Even when you are not using the digital receiver, you should keep it plugged into a wall outlet to be in standby mode so that it can perform timer events at any time.

1.2.1 The front panel

The front panel of the digital receiver has buttons to control the digital receiver, specific lamps and a display to indicate its status. The following indicates what they mean.

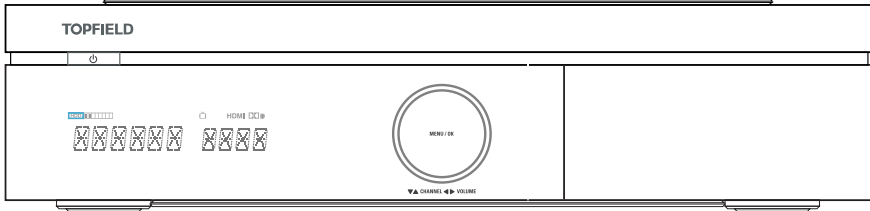


Power button switches the digital receiver between standby mode and operation mode.

Front display shows the current time in standby mode, and displays the current service in operation mode.

MENU / OK button displays the main menu. It is also used to return to the previous menu from a submenu.


CHANNEL **▼**, **▲** buttons switch to previous or next service. They are also used to navigate in menus and interactive screens.

VOLUME **◀**, **▶** buttons decrease or increase the volume. They are also used to change values for menu options.

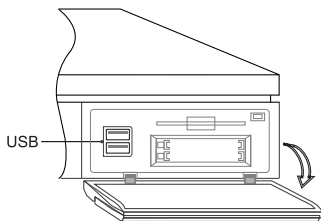

Pull the right edge of the front panel to open the flap. There are USB ports on the front panel to connect to an external hard disk drive or memory stick.

1.2.2 The remote control

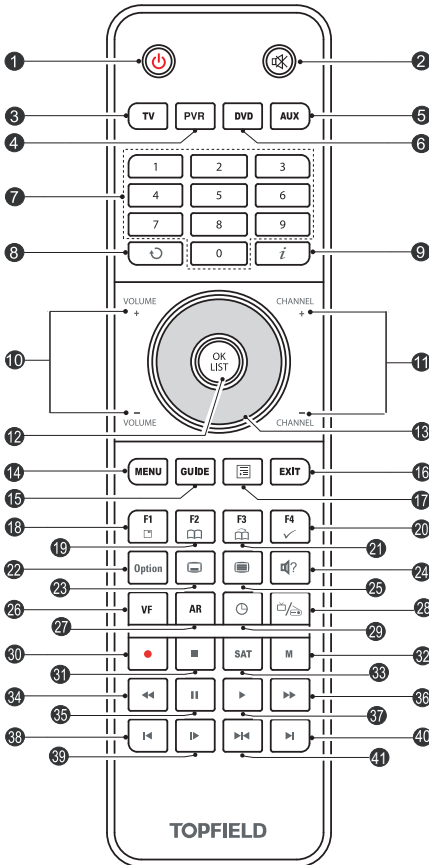

① button switches the digital receiver between standby mode and operation mode.

② mutes the sound. Press again to switch it back on.

③ switches the remote control to television mode to operate your television.

④ switches the remote control to receiver mode to operate the digital receiver.

⑤ switches the remote control to operate your audio system.






⑥ switches the remote control to DVD mode to operate your DVD player.














⑦ Numeric buttons are used to enter a service number for service change or to specify values for menu options.

⑧ switches between the current service and the previously viewed one.

⑨ displays the service information box. It is also used to display more information about a programme.


⑩ buttons decrease or increase the volume.

- ⑪ **CHANNEL+**, **CHANNEL-** buttons switch to previous or next service.
- ⑫ **OK** displays the services list. See § 5.2.1 for more details. It is also used to select a menu item.
- ⑬ Navigation buttons are used to navigate in menus or to change values for menu options.
- ⑭ **MENU** displays the main menu. It is also used to return to the previous menu from a submenu.
- ⑮ **GUIDE** displays the electronic programme guide.
- ⑯ **EXIT** is used to exit a menu or to hide on-screen info.
- ⑰  is used to display the list of recorded programmes that are stored on the built-in hard disk drive. See § 7.2 for more details.
- ⑱ **F1** is used to display or hide the sub-picture. See § 5.6 for information about picture-in-picture.
- ⑲ **F2** is used to make a bookmark during playback or time shift.
- ⑳ **F4** is used to edit a recording.
- ㉑ **F3** is used to jump to next bookmark position.
- ㉒ **Option** has different functions per menu.
- ㉓  is used to select a subtitle track.
- ㉔  is used to select an audio track and a sound mode, or a video track of multifeed programme.
- ㉕  displays teletext.
- ㉖ **VF** changes video resolution. See § 4.2.1 for more details.
- ㉗ **AR** changes aspect ratio. See § 4.2.4 for more details.
- ㉘  switches between television services and radio services.

- 29  is used to set a sleep timer in 10 minute increments.
- 30  is used to start recording.
- 31  is used to stop playback, to stop recording, or to jump back to live service from time-shifted service.
- 32  switches the output of the TV SCART socket between the digital receiver and the device connected to the VCR SCART socket. See § 4.2.3 for more details.
- 33  displays the satellites list with their services list. It is also used to swap the sub-picture with the main picture. See § 5.6 for more details.
- 34  is used to start reverse playback. Subsequent presses increase the rewind speed.
- 35  pauses live television or playback of a recorded programme.
- 36  is used to start fast motion playback. Subsequent presses increase the playback speed.
- 37  resumes normal playback speed, or displays the progress bar for navigation on playback or time shift. To play a recorded programme, see button 17.
- 38  changes the position of sub-picture counterclockwise. It is also used to jump back to beginning of recording during a playback.
- 39  is used to start slow motion playback. Subsequent presses change the playback speed.
- 40  changes the position of sub-picture clockwise. It is also used to jump to end of recording during a playback.
- 41  is used to specify a block for editing or for repeated playback.

The **F1**, **F2**, **F3**, **F4** and **Option** buttons have additional different functions per menu besides their own function. They will be guided by on-screen help.

1.3 What is the common interface?

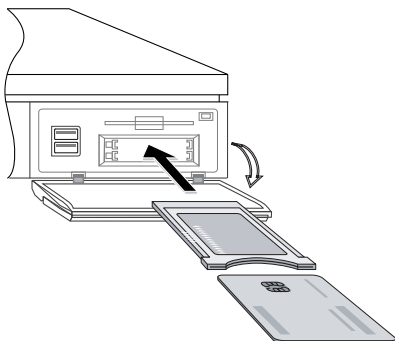


Some broadcasts are scrambled so that only paid subscribers can enjoy them. Scrambled services can only be viewed with a Conditional Access Module (CAM) and a subscription card belonging with the scrambling system.

Common Interface (CI) is the slot on a digital receiver into which a conditional access module may be inserted. The front of the digital receiver has two common interfaces.

To watch a pay service, you should take the following steps:

1. Purchase a conditional access module and a subscription card for the pay service you want to watch.
2. Insert the subscription card into the conditional access module.
3. Insert the conditional access module into a common interface on the front of the digital receiver.

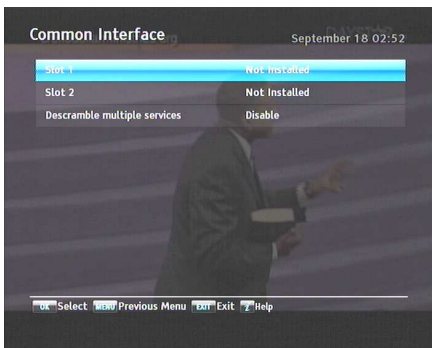

To view the information about the module and subscription card which is inserted into the digital receiver, select the information > Common Interface menu.

You should see a screen like the left figure.

NOTE

If you wish to watch two pay services using the picture-in-picture feature, you have to set the **Descramble Multiple Services** option to **Enable**, and then install the dedicated CAM which is able to descramble two pay services simultaneously. See § 5.6 for the picture-in-picture feature.

Chapter 2

Setup

2.1 Unpacking

Before going any further, check that you have received the following items with your digital receiver.

- Remote control unit
- Two batteries for the remote control (AAA 1.5 V)
- One HDMI cable
- Wireless keyboard
- A copy of this user guide

NOTE

The wireless keyboard is only for the Battle Tank. See § 8.8.

NOTE


These items may vary according to your local area.

2.2 Safety precautions

Please read carefully the following safety precautions.

- The mains power must be 90 to 250 volts. Check it before connecting the digital receiver to the mains socket. For the power consumption of the digital receiver, refer to Table 2.1.
- The mains outlet should be near the equipment. Do not run an extension lead to the unit.
- Do not expose the digital receiver to any moisture. The digital receiver is designed for use indoors only. Use dry cloth when cleaning the digital receiver.
- Place the digital receiver on a firm and level surface.
- Do not place the digital receiver close to heat emitting units or in direct sunlight, as this will impair cooling. Do not lay any objects such as magazines on the digital receiver. When placed in a cabinet, make sure there is a minimum space of 10 centimetres around it. For the physical specification of the digital receiver, refer to Table 2.2.
- Protect the power cord from being walked on or pinched. If the cord is damaged, stop using the digital receiver and replace the cord.
- Never open the digital receiver casing under any circumstances, the warranty will be void.
- Use only one USB port of the receiver while using a common interface. The receiver may not recognize all the devices because the power supply of the receiver cannot provide enough power for all the devices.
- Refer all servicing to a qualified service technician.

- The top and bottom panel come already assembled. If they become separated, see the following instructions how to reattach.

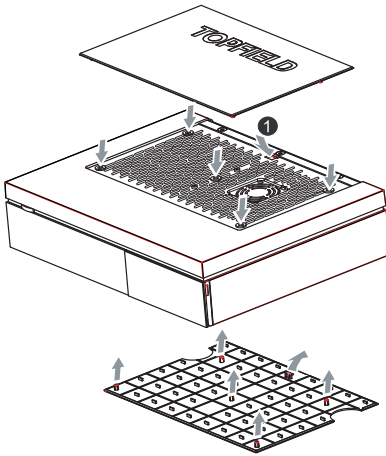

1. Hook the top panel in the direction shown ❶.
2. Push the top panel down so that it is completely fixed.
3. Turn the digital receiver upside down to attach the bottom panel.
4. Attach the bottom panel in the same way as the top panel.

Table 2.1: Power specifications


Input voltage	90 to 250 V AC, 50/60 Hz
Power consumption	60 W at maximum in operation 1 W in passive standby

Table 2.2: Physical specifications

Size	340 × 82 × 258 mm
Weight	3.8 kg
Operating temperature	0 to 45 °C
Storage relative humidity	5 to 90 %

2.3 Rear panel connections

The SRP - 2100 has a wide range of connections on the back.

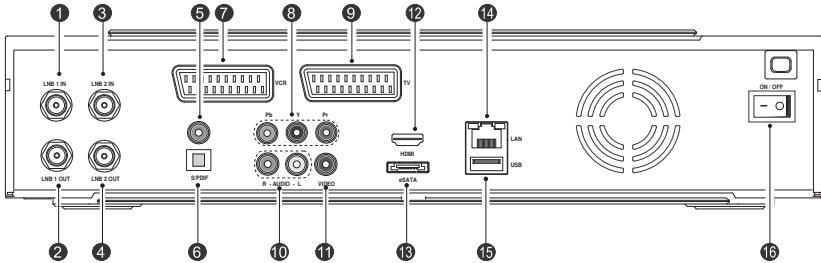

Check what connections your television set has in comparison with the digital receiver.

- ① LNB 1 IN Satellite broadcasting signal input socket for the first tuner.
- ② LNB 1 OUT Satellite broadcasting signal output socket through the first tuner.
- ③ LNB 2 IN Satellite broadcasting signal input socket for the second tuner.
- ④ LNB 2 OUT Satellite broadcasting signal output socket through the second tuner.
- ⑤ S/PDIF COAXIAL Coaxial type of Dolby Digital output socket for the audio system.
- ⑥ S/PDIF OPTICAL Optical type of Dolby Digital output socket for the audio system.
- ⑦ VCR Audio and video input/output socket for the video cassette recorder or suchlike.
- ⑧ Y/Pb/Pr Component video output sockets for the television set. (blue/green/red)
- ⑨ TV Audio and video output socket for the television set.

- ⑩ AUDIO L/R Stereo audio output sockets for the television set or the audio system. (white/red)
- ⑪ VIDEO Composite video output socket for the television set. (yellow)
- ⑫ HDMI Audio and video output socket for the high definition television set.
- ⑬ eSATA eSATA port for connecting to an external hard disk drive.
- ⑭ LAN Local area network port. See § 9.2.
- ⑮ USB USB port for firmware update and data transfer.
- ⑯ ON/OFF Power on/off switch. Before using this digital receiver, you have to turn on the switch first.


Table 2.3: Connectors specifications

HDMI	High definition video output Left & right audio output Dolby Digital audio output
TV	CVBS/YUV/RGB video output Left & right audio output
VCR	CVBS video output Left & right audio output CVBS/S-Video/RGB video input for bypass Left & right audio input for bypass
YPbPr	Component video (YUV) output
VIDEO	Composite video (CVBS) output
AUDIO	Left & right audio output
S/PDIF	Dolby Digital audio output
LAN	10/100 Ethernet
USB	2.0 Host (5 V DC, 500 mA)
eSATA	External hard disk drive connector

2.4 Connecting up your digital receiver

There are several ways to set up the digital receiver. Set up the digital receiver suitably to your television and other appliances. If you have any problem with your setup or need help, contact your dealer.

2.4.1 Connecting the antenna

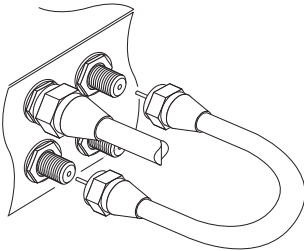

Whatever sort of connection you have between the digital receiver and the television, you need to connect the digital receiver to your television antenna so that it can receive digital television services.

Connect the antenna cable to the LNB 1 IN connector on the back panel of the digital receiver.

Also, you must ensure that there is a connection to both the LNB 1 IN and LNB 2 IN connectors on your digital receiver, so that both tuners work properly.

Normally you do that by using a loop cable to link from the LNB 1 OUT connector to the LNB 2 IN connector.

If you have two antennas without DiSEqC switch, then you have to connect a cable from the other antenna directly to the LNB 2 IN connector rather than using the loop cable. If you have another digital receiver, you may link it from the LNB 2 OUT connector.

NOTE

The digital receiver can supply a current of 500 milliamperes at maximum for antenna devices including LNB, DiSEqC switch and antenna rotor through each antenna input connection separately but not simultaneously. If there are too many antenna

devices to be supplied with power through antenna input connections simultaneously for a long time, your LNBS may lack power to operate. So it is recommended linking the LNB 1 OUT connector to the LNB 2 IN connector with a loop cable even though the digital receiver is designed to operate over two antennas alternatively.

NOTE

Perhaps you are expecting that the satellite antenna could simultaneously catch all frequencies coming from a satellite and send them to the digital receiver. However, the satellite antenna only sends the frequencies that it can catch with the LNB frequency and polarisation specified by the digital receiver. So if you have linked from the LNB 1 OUT connector to the LNB 2 IN connector, you would have some limitations in using some features such as dual recording. Likewise, if you have another digital receiver linked from the LNB 2 OUT connector, you can only use it limitedly. See § 3.1 for more details.


2.4.2 Connecting to your television set

For all the following connections of the digital receiver, we recommend you use the first connector to get the best picture quality. If your television does not have a matching connector, then use the next connector in the following order for a better picture quality.

1. HDMI connector (HDMI)
2. SCART connector (TV)
3. Component connector (YPbPr)
4. Composite connector (VIDEO)


You should configure audio and video settings after connecting up the digital receiver. See § 4.2 for a detailed description.

To use the HDMI connector

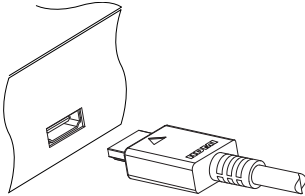

If you have a high definition television set, you should use a HDMI cable for the best results. Plug one end of the cable into the HDMI socket on the digital receiver, and plug the other end into the matching socket on your television. In this case, you do not have to make audio connection because the HDMI connector can output stereo audio or Dolby Digital audio.

To use the SCART connector

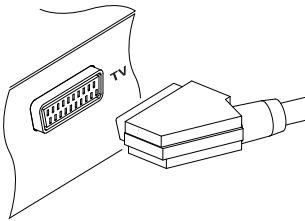

For the best results with a standard television set, you should use a SCART cable. Plug one end of the cable into the TV socket on the digital receiver, and plug the other end into a free SCART socket on your television.

Some televisions have inputs via S-Video or Component connectors rather than SCART.


If you have such a television, use an appropriate conversion cable to link the TV socket on the digital receiver to the matching socket on your television.

If you connect with a standard SCART cable, you do not have to make audio connection because the SCART connector can output stereo audio. But if you use a conversion cable, such as SCART-to-Component, you have to make audio connection.

NOTE


You cannot view high definition video with a SCART connector.

To use the component video connector

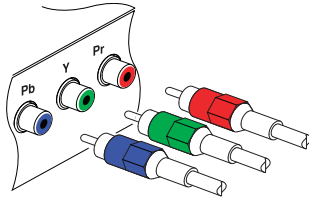

You need to obtain a component video cable (RCA cable) to use the component video connector. Plug one ends of the cable into the Y (green), Pb (blue) and Pr (red) sockets on the digital receiver, and plug the other ends into the matching sockets on your television.

To use the composite video connector

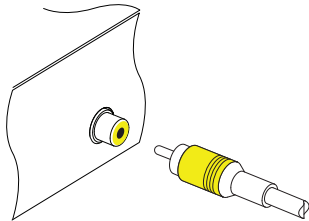


NOTE


You cannot view high definition video with a composite video connector.

You need to obtain a composite video cable (RCA cable) to use the composite video connector. Plug one end of the cable into the VIDEO (yellow) socket on the digital receiver, and plug the other end into the matching socket on your television.

To make the audio connection

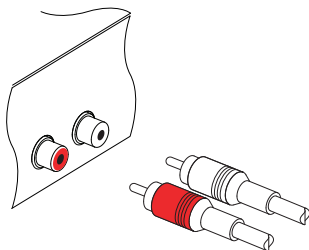


You need to obtain an audio cable (RCA cable) to connect the audio connectors. Plug one end of the cable into the AUDIO L (white) and AUDIO R (red) sockets on the digital receiver, and plug the other end into the matching sockets on your television or audio system.

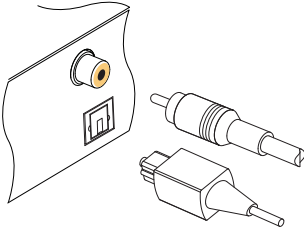

To enjoy Dolby Digital audio, your television or audio system must be able to decode Dolby Digital audio, and you need to obtain a S/PDIF cable. If you want to use the COAXIAL connector, prepare a coaxial S/PDIF cable (RCA cable); otherwise, to use the OPTICAL connector, prepare an optical S/PDIF cable. Plug one end of the cable into the S/PDIF socket on the digital receiver, and plug the other end into the matching socket on your audio system.

2.4.3 Connecting to your video cassette recorder

The digital receiver can also output video to another appliance such as a video cassette recorder through an auxiliary SCART connector.

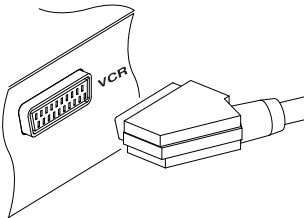

You need to obtain a SCART cable to use the auxiliary SCART connector. Plug one end of the cable into the VCR socket on the digital receiver, and plug the other end into the matching socket on your video cassette recorder or suchlike.

2.5 Inserting batteries in the remote control

Open the battery compartment by removing the lid, and then insert the batteries observing the polarity, which is marked on the base of the battery compartment.



If the digital receiver no longer reacts properly to remote control commands, the batteries may be flat. Be sure to remove used batteries. The manufacturer accepts no liability for the damage resulting from leaking batteries.

NOTE

Batteries, including those which contain no heavy metals, may not be disposed with other household wastes. Please dispose of used batteries in an environmentally sound manner. Find out the legal regulations which apply in your area.

2.6 Switching on for the first time

Now that you have your digital receiver connected, you should plug it into a mains socket. Ensure that your television set is turned on and on the correct AV channel, so that you will be able to see the display from the digital receiver.

And press the  button on top left corner on the remote control. After about 10 seconds you may see a picture displaying a menu. If you cannot see a picture, try pressing the  button on the remote control. If after several tries you still get no picture, check that the television is set to the correct input.

If you still cannot see a picture, you may need to temporarily connect the composite video connector (VIDEO) to your television set so that you can see the on-screen menus in order to configure the video settings.

Chapter 3

Service Search

After connecting up your digital receiver, you need to search for the available TV and radio services.

NOTE

If there are no services stored, you will be unable to access some menu options.

3.1 Searching broadcasting services

You can use this digital receiver with both fixed antenna and motorized antenna. When using a antenna, you have to configure antenna settings according to your antenna system in the following order:

1. Configure LNB settings. (Refer to § 3.1.1.)
2. Set the position of your desired satellites if you have a motorized antenna. You can control the antenna in DiSEqC 1.2 mode or USALS mode. Refer to § 3.1.2 for DiSEqC 1.2, and refer to § 3.1.3 for USALS.
3. Perform a service search.


3.1.1 Configuring LNB settings

There are two large frequency bands for satellite broadcasts. One is C band which ranges approximately from 4 to 6 GHz. The other is K_u band which ranges approximately from 12 to 18 GHz.



The LNB (Low Noise Block converter) is used to take a wide band of relatively high frequencies, amplify and convert them to similar signals that is carried at a much lower frequency, which is called Intermediate Frequency (IF).

High frequencies from satellites are converted into 950 to 2150 MHz by a LNB.

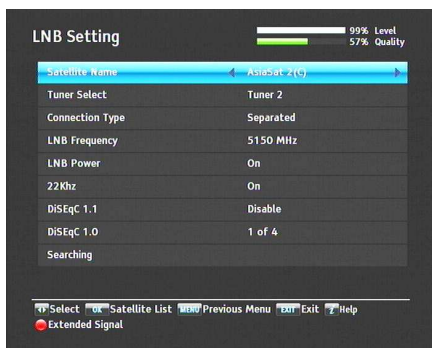

Select the Installation > LNB Setting menu to configure the LNB settings. You should see a screen like the left figure.

Pressing the **[OK]** button on the Satellite Name option displays the satellite list in alphabetic order. Select the satellite toward which your antenna is set to face.

You have to specify which tuner is connected to your selected satellite. If it is LNB 1 IN, set the Tuner Select option to Tuner 1; otherwise, set this option to Tuner 2.

If you have connected the LNB 1 OUT and LNB 2 IN with a loop-through cable, then set the Connection Type option to Loop Through; otherwise, set this option to Separated.

NOTE

Both the LNB 1 IN and LNB 2 IN sockets should be connected to your antennas either directly or via the loop-through cable. If you have connected only one socket, some functions such as dual recording may not work.


The digital receiver has a database of broadcasting satellites and their transponders, including the following information: satellite position, frequency range, symbol rate, polarization and LNB frequency corresponding to the frequency range. So you might not have to specify the LNB Frequency option. However, if you have selected the Other entry at the Satellite Name option to specify a satellite that is not in the satellite list, you might have to fill in the correct LNB frequency. The absolute difference between a broadcasting frequency and its LNB frequency must be within 950 to 2150 MHz. For example, if the frequency band of your desired satellite ranges from 3660 to 4118 MHz, you have to set the LNB Frequency option to 5150 MHz.

The LNB has to be supplied with electric power to operate. Set the LNB Power option to On if it does not have any other power supply.

If you use a dual LNB or two antennas which is connected to the 22 kHz tone switch box, set the 22 kHz option to ON.

The digital receiver is designed to be compatible with DiSEqC (Digital Satellite Equipment Control) switches. It is possible to connect several antennas to one digital receiver by using DiSEqC switches. A DiSEqC 1.0 switch allows switching up to four satellite sources and a DiSEqC 1.1 switch allows switching up to 16 satellite sources.

Set the DiSEqC 1.0 option and the DiSEqC 1.1 option according to your antenna configuration.

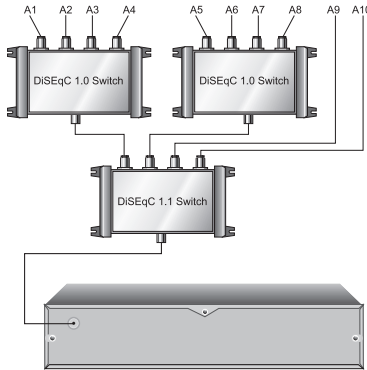


For example, to select the antenna connected to the A5 input in the left figure, set the DiSEqC 1.1 option to 2 of 4 and the DiSEqC 1.0 option to 1 of 4. If you have a mini DiSEqC 1.0 switch which has only two inputs, you should set the DiSEqC 1.0 option to Mini A instead of 1 of 4.

3.1.2 Configuring DiSEqC 1.2 settings

Your motorized antenna will turn toward your desired satellites horizontally by DiSEqC 1.2.



When you switch to an service, if the service is provided by a satellite other than current one, it will take longer time than usual because the antenna has to turn to its position.

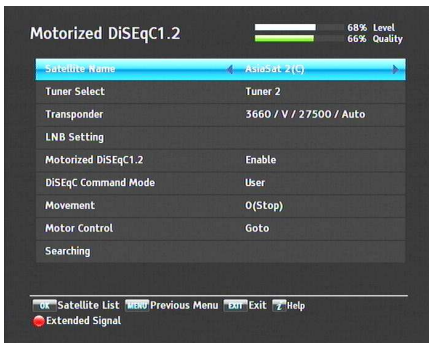

To use the DiSEqC 1.2 protocol, select the Installation > Motorized DiSEqC 1.2 menu.

You should see a screen like the left figure.

At first you have to set the Motorized DiSEqC 1.2 option to Enable.


To get the correct position of your desired satellite, perform the following steps:

1. Choose your desired satellite at the Satellite Name option.
2. Select the tuner that is connected to the motorized antenna at the Tuner Select option.
3. Set the DiSEqC Command Mode option to User.
4. Set the Motor Control option to Goto. Then the antenna will turn toward your selected satellite by the position data that the digital receiver has.
5. If the receiving quality, which is displayed at the top right of the screen, is not good, tune the antenna finely with the Movement option. If you set it to 2(E), the antenna will move to the east by two degrees. At this time you had better check the receiving quality of every transponder and choose the best one at the Transponder (or Frequency) option. It will be helpful to your fine tuning.
6. Finally set the Motor Control option to Store to save the tuned position when the receiving quality is the best.

There are more motor control options for installers, but this guide does not describe them. If you are an installer, refer them to the manual of the *STAB* rotor.

3.1.3 Configuring USALS settings

USALS (Universal Satellite Automatic Location System), also known as DiSEqC 1.3, calculates the positions of all available satellites from your location. Compared to DiSEqC 1.2, it is no longer required to manually search and store every satellite position. Just pointing to a known satellite position is enough. This position will act as a central point. The USALS will then calculate positions of visible satellites.

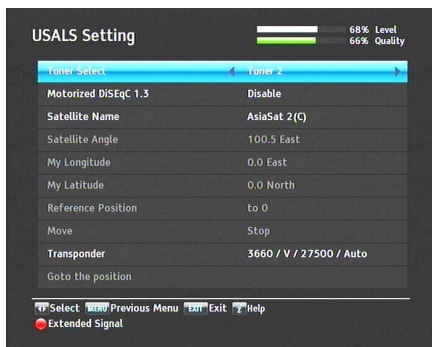

To use the USALS protocol, select the Installation > USALS Setting menu.


You should see a screen like the left figure.

At first you have to set the Motorized DiSEqC 1.3 option to Enable.

To get every satellite position calculated, perform the following steps:

1. Choose your desired satellite at the Satellite Name option.
2. Select the tuner that is connected to the motorized antenna at the Tuner Select option.
3. Enter your location to the My Longitude option and the My Latitude option with the \odot , \ominus and numeric buttons.
4. Enter the position of your selected satellite to the Satellite Angle option if it is not correct.
5. Select the Goto the position option; then the antenna will turn toward your selected satellite as calculating its position.
6. If the receiving quality, which is displayed at the top right of the screen, is not good, then tune the antenna finely with the Move option. The changed position is automatically saved. At this time you had better check the receiving quality of every transponder and choose the best one at the Transponder (or Frequency) option. It will be helpful to your fine tuning.

3.1.4 Searching services

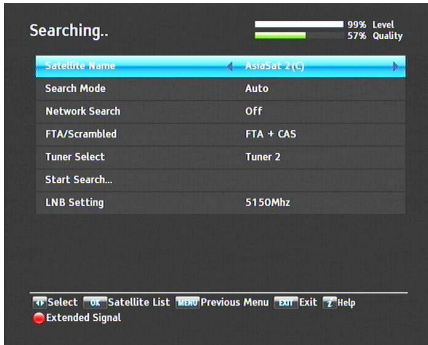

To perform service search, select the Installation > Searching menu.

You should see a screen like the left figure.

There are four service search methods:

- Searching every service of a satellite.
- Searching every service of a transponder.
- Searching one service of a transponder.
- Searching every service of a SMATV (Satellite Master Antenna Television) system.

Searching every service of a satellite

To search every service of a satellite, perform the following steps:

1. Choose your desired satellite at the Satellite Name option.
2. Set the Search Mode option to Auto.
3. If you set the Network Search option to On, the digital receiver will check up the up-to-date channel information as searching services, but it takes rather longer time.

Searching every service of a transponder

To search every service of a transponder, perform the following steps:

1. Choose your desired satellite at the Satellite Name option.
2. Set the Search Mode option to Manual... and press the **OK** button.
3. Choose your desired transponder at the Frequency option or enter it with the numeric buttons.
4. Enter the symbol rate of your desired transponder to the Symbol Rate option with the numeric buttons.
5. Set the Polarization option to the polarization of your desired transponder.
6. Set the Modulation option to the modulation type of your desired transponder. If your desired transponder has high definition broadcasts, you should set this option to DVB-S2 QPSK or DVB-S2 8PSK. Then the FEC option and the Pilot option will become enabled. You should also set these options correctly.
7. If you set all options correctly, press the **MENU** button to save the settings.
8. If you set the Network Search option to On, the digital receiver will check up the up-to-date channel information as searching services, but it takes rather longer time.

NOTE

You may get transponder information from a satellite magazine or web site such as <http://www.satcodx.com> or <http://www.lyngsat.com>.

Searching one service of a transponder

To search one service of a transponder, perform the following steps:

1. Choose your desired satellite at the Satellite Name option.

2. Set the Search Mode option to Advanced... and press the **(OK)** button.
3. Choose your desired transponder at the Frequency option or enter it with the numeric buttons.
4. Enter the symbol rate of your desired transponder to the Symbol Rate option with the numeric buttons.
5. Set the Polarization option to the polarization of your desired transponder.
6. Set the Modulation option to the modulation type of your desired transponder. If your desired transponder has high definition broadcasts, you should set this option to DVB-S2 QPSK or DVB-S2 8PSK. Then the FEC option and the Pilot option will become enabled. You should also set these options correctly.
7. Specify the packet identifiers of your desired service at the PID option with the numeric buttons. A packet identifier is used to verify audio and video streams.
8. If you set all options correctly, press the **(MENU)** button to save the settings.

Searching every service of SMATV system

To search every service of a SMATV system, if the digital receiver is connected to it, perform the following steps:

1. Choose your desired satellite at the Satellite Name option.
2. Set the Search Mode option to SMATV... and press the **(OK)** button.
3. Choose your desired transponder at the Frequency option or enter it with the numeric buttons.
4. Enter the symbol rate of your desired transponder to the Symbol Rate option with the numeric buttons.

5. If you set all options correctly, press the **(MENU)** button to save the settings.

You can search pay services as well as free services as follows:

- To search only free services, set the FTA/Scrambled option to FTA only.
- To search only pay services, set it to CAS only.
- To search both free services and pay services, set it to FTA + CAS.

To start service search, select the Start Search item; then a list box appears, in which found services will be listed. When it has completed, press the **(OK)** button to save found services. To stop at any time or to exit without saving, press the **(EXIT)** button.


3.2 Copying services

The digital receiver maintains a separate services list with each tuner. If a certain service is registered on only one tuner, it may be unable to watch one service while recording. You can copy one tuner's services list to the other tuner to avoid such an inconvenience.

To copy the services list, select the Installation > Services Copy menu. There are three copy options as follows:

- To copy the first tuner's services list to the second tuner, select the Tuner 1 to Tuner 2 option.
- To copy the second tuner's services list to the first tuner, select the Tuner 2 to Tuner 1 option.
- To copy reciprocally, select the ALL option.

3.3 Editing the transponder list

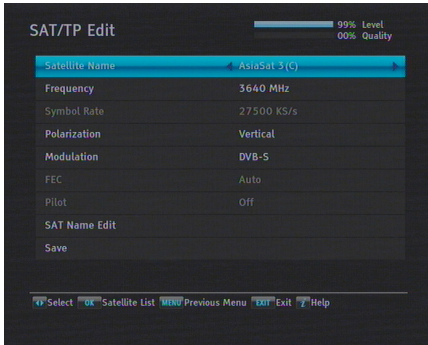

You can change satellite information.

Select the Installation > SAT/TP Edit menu. You should see a screen like the left figure.

To change the information of a satellite entry, perform the following steps:

1. Choose your desired satellite at the Satellite Name option.
2. Choose your desired transponder at the Frequency option or enter it with the numeric buttons.
3. Change the Polarization option to the polarization of your desired transponder.
4. Change the Modulation option to the modulation type of your desired transponder. If your desired transponder has high definition broadcasts, you should set this option to DVB-S2 QPSK or DVB-S2 8PSK. Then the FEC option and the Pilot option will become enabled. You should also set these options correctly.
5. To change a satellite entry's name, select your desired entry at the Satellite Name option and select the SAT Name Edit option. Then the on-screen keyboard appears. Change the name and save it.

See § 6.3 for how to use the on-screen keyboard.

6. Select the Save option and press the **(OK)** button to save the changes. To stop at any time or to exit without saving, press the **(EXIT)** button.

3.4 Resetting to factory settings

The digital receiver maintains the following data:

- Satellite list
- Services list
- Favourite list
- Timer list
- Preference settings

You can reset all data of the digital receiver. To do that, select the Installation > System Recovery > Factory Setting menu, and then you get asked for confirmation. If you select Yes, service entries, favourite entries and timer events will all be deleted, and preference options will be reset to the manufacturer's factory settings.

NOTE

The factory reset does not delete any recorded programmes.

NOTE

After performing the factory reset, you have to search services again.

3.5 Resetting to user settings

You can store your own data including the following:

- Satellite list
- Services list

- Favourite lists
- Preference settings

Also you can restore them at any time.

To store your data, select the **Installation > System Recovery > Store System Data** menu; then you get asked for confirmation. If you select **Yes**, your data will be stored. Whenever you store your data, they are all overwritten.

To restore your data, select the **Installation > System Recovery > Recover System Data** menu; then you get asked for confirmation. If you select **Yes**, your data will be restored.

You can also store your data to an external hard disk drive.

To store your data to an external hard disk drive, select the **Installation > System Recovery > Export System Data** menu; then you get asked for confirmation. If you select **Yes**, your data will be stored.

To restore your data from an external hard disk drive, select the **Installation > System Recovery > Import System Data** menu; then system data will be listed. Select a data and press the **OK** button, then your data will be restored.

3.6 Clearing the services list

If you want to delete all services, select **Installation > System Recovery > Reset Service List**; then you get asked for confirmation. If you select **Yes**, the services list will be cleared.

NOTE

After performing the service list reset, you have to search services again.

Chapter 4

Preference Settings

4.1 Language settings



You can select the language in which the menu would be displayed. In addition to that, you can select the language of audio track and of subtitle track.


Select the **Settings > Language** menu. You should see a screen like the left figure.

4.1.1 Menu language

Set the **Menu Language** option to your desired language. Once you select a language, the menu will be immediately displayed in the selected language.

4.1.2 Subtitle language


Set the 1st Subtitle Language option and the 2nd Subtitle Language option to your desired languages. When you watch a programme, if the programme has a subtitle track of the language that is designated for the 1st Subtitle Language, it will be displayed. If the first language is not available but the second language is available, the subtitle of the second language will be displayed. If there is no available language, no subtitle will be displayed.

Apart from this setting, you can select a subtitle track with the  button. See § 5.2.5 for a detailed description.

Some broadcaster may send a subtitle track dedicated to persons who have difficulty in hearing. Even when one or more subtitle tracks are available, that subtitle track will be displayed prior to those you have designated for the 1st Subtitle Language and the 2nd Subtitle Language options if the Hard of hearing option is set to On.

4.1.3 Audio language

Set the 1st Audio Language option and the 2nd Audio Language option to your desired languages. When you watch a programme, if the programme has an audio track of the language that is designated for the 1st Audio Language, it will be outputted. If the first language is not available but the second language is, the audio of the second language will be outputted.

Apart from this setting, you can select an audio track with the  button. See § 5.2.4 for a detailed description.

4.2 Video and audio settings



You have to configure the video and audio settings appropriately for your television set and other appliances.

Select the **Settings > A/V Output** menu. You should see a screen like the left figure.

4.2.1 High definition television

The digital receiver supports various video resolutions from 576 to 1080. In general a resolution of 720 or more is considered high definition. The higher the resolution, the better the quality. However, if your television set does not support high definition, you cannot enjoy high definition quality picture.

Set the **Video Format** option as you desire.

If you set this option to **576P**, the digital receiver will present even high definition programmes in resolution of 576. On the contrary, if you set it to **1080i**, the digital receiver will present even standard definition programmes in resolution of 1080.

It is recommended setting it to **Auto** if you have a high definition television. With that setting the digital receiver will present a programme as it is without any resolution conversion. While watching television you can change the resolution with the **(VF)** button. Whenever you press it, the video resolution will be changed in turn.

If you have the digital receiver linked to your television by the component video connectors (Y, Pb and Pr), set the **HD Output** option to **Component**. Otherwise if you have connected

it to your television by the SCART connector, set this option to Scart.

NOTE

You can enjoy only standard definition video with the following connectors:

- Composite video connector (VIDEO)
- SCART connector (TV)

4.2.2 Colour model

Through the TV SCART connector, the digital receiver is able to output video in various colour models.

If you have the digital receiver linked to your television by this connector, you should set the SCART Output option to your desired colour model.

If you have connected via the RCA connector labeled VIDEO on the back panel, you do not have to set this option because the digital receiver outputs CVBS video through the RCA connector independently of the SCART connector.

However, if you have connected via the S-VIDEO connector, you have to set this option to S-Video because the output through S-Video connector comes from the SCART interface.

4.2.3 Video cassette recorder

You can have the digital receiver linked to your video cassette recorder or such an appliance by the VCR SCART connector. In this case, the digital receiver will operate differently depending on the setting of the VCR Scart Type option. If the option is set to Standard, the digital receiver will pass the video from the video cassette recorder to your television when it starts playback. But if the option is set to External A/V, the digital receiver will not pass the video automatically.

NOTE

It is impossible for the digital receiver to record the video that the video recorder plays back. Because the digital receiver is just a bypass for the video recorder.

4.2.4 Television aspect ratio

If you have a wide-screen television, set the TV Aspect Ratio option to 16:9.



You can enjoy both wide-screen programmes and normal-screen programmes with your wide-screen television as the above figures show. To watch normal-screen programmes in full screen like the left figure, set the Display Format option to Full. Normal-screen pictures then will be inflated to fit the width of the wide screen. Otherwise, to watch them in the original ratio like the right figure, set it to Center.


Otherwise, if you have a normal-screen television, set the TV Aspect Ratio option to 4:3.



You cannot fully enjoy wide-screen programmes with your normal-screen television as the above figures show. The left figure shows a normal picture displayed in the normal screen. To watch wide-screen programmes in the shape like the centre figure, set the Display Format option to Letter Box. Wide-screen pictures then will be reduced to fit to the width of the normal screen. Otherwise, to watch them in the shape like the right figure, set it to Center extract. Then wide-screen pictures will be cut out on the left and right sides equally to fit to the width of the normal screen.

4.2.5 Audio mode

Basically, there are two audio sources as you can find two audio sockets on the back panel of the digital receiver. You can enjoy only one source or both of them in either stereo or mono. Set the Sound Mode option as you desire.

Apart from this setting, you can change the sound mode with the  button. See § 5.2.4 for a detailed description.

The digital receiver can output two types of digital audio signals via the S/PDIF connector. One is an encoded signal, and the other is a decoded signal. If your digital audio system does not have a Dolby Digital decoder, you have to set the Dolby Digital option to Off. Otherwise, set it to On.


NOTE

If the service you are currently watching does not provide Dolby Digital, you cannot watch the programme with Dolby Digital sound even though you set the Dolby Digital option to On.

4.3 Local time setting

You should set your local time for timer events.

If you do not set the local time correctly, the programme time table provided by the programme guide may be distrustful. For the programme guide, refer to § 5.3.

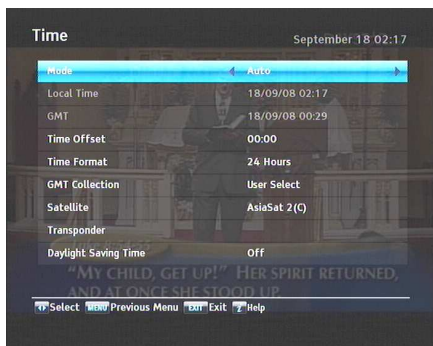

Select the Settings > Time menu. You should see a screen like the left figure.

You can set the clock manually or use the time signal, Greenwich Mean Time (GMT), carried as part of the digital television broadcast.

To use Greenwich Mean Time, take the following steps:

1. Set the Mode option to Auto; then the Time Offset option becomes enabled.
2. Set the Time Offset option to the time difference between your time zone and GMT referring to Table 4.1.
3. To get Greenwich mean time, set the GMT Collection option to one among the following:

Normal from all transponders

CAS Only from transponders of pay services

User Select from transponders specified by user

If you set it to User Select, then the Satellite option and the Transponder option become enabled. Select your desired satellite and transponders at those options. With the above settings, the digital receiver will scan all specified transponders one by one until to get the Greenwich Mean Time.

4. Make sure that your local time is correctly displayed on the Local Time option.

Table 4.1: Time offset table

Time offset	City
GMT – 12:00	Eniwetok, Kwajalein
GMT – 11:00	Midway Island, Samoa
GMT – 10:00	Hawaii
GMT – 09:00	Alaska
GMT – 08:00	Pacific Time US, Canada
GMT – 07:00	Mountain Time US, Canada
GMT – 06:00	Central Time US, Canada, Mexico City
GMT – 05:00	Eastern Time US, Canada, Bogota, Lima
GMT – 04:00	Atlantic Time Canada, La Paz
GMT – 03:30	Newfoundland
GMT – 03:00	Brazil, Georgetown, Buenos Aries
GMT – 02:00	Mid-Atlantic
GMT – 01:00	Azores, Cape Verde Islands
GMT	London, Lisbon, Casablanca
GMT + 1:00	Paris, Brussels, Copenhagen, Madrid
GMT + 2:00	South Africa, Kaliningrad
GMT + 3:00	Baghdad, Riyadh, Moscow, St. Petersburg
GMT + 3:30	Tehran
GMT + 4:00	Abu Dhabi, Muscat, Baku, Tbilisi
GMT + 4:30	Kabul
GMT + 5:00	Ekaterinburg, Islamabad, Karachi, Tashkent
GMT + 5:30	Bombay, Calcutta, Madras, New Delhi
GMT + 6:00	Almaty, Dhaka, Colombo
GMT + 7:00	Bangkok, Hanoi, Jakarta
GMT + 8:00	Beijing, Perth, Singapore, Hong Kong
GMT + 9:00	Tokyo, Seoul, Osaka, Sapporo, Yakutsk
GMT + 9:30	Adelaide, Darwin
GMT + 10:00	Eastern Australia, Guam, Vladivostok
GMT + 11:00	Magadan, Solomon Islands, New Caledonia
GMT + 12:00	Fiji, Auckland, Wellington, Kamchatka

To set the local time manually, set the Mode option to Manual and enter your local time to the Local Time option with the numeric buttons. The time format is *day/month/year 24-hour:minute*.

To change the time format to 12-hour format, set the Time Format option to 12 Hour.

If daylight saving time is observed in your area at the moment, set the Daylight Saving Time option to On.

NOTE

Daylight saving time adds one hour to the time when the option is set to On. When setting the time offset from Greenwich Mean Time, make sure that time offset does not include daylight saving time.

4.4 Parental control

In general, television programmes are classified according to the level of violence, nudity and language of their contents. When you are watching a programme, you can check its programme classification on the information box. For the information box, see § 5.2.3.

You can prevent your children from watching specific programmes by specifying a programme classification.



Select the Settings > Parental Control menu. You should see a screen like the left figure, and you will be asked your Personal Identification Number (PIN).

The number is initially set to '0000' as a default.

If you wish to block 15 or above rated programmes, set the Censorship option to 15 (age). Setting it to No block blocks no programme; on the other hand, setting it to Total block blocks every programme.

NOTE


If a programme does not have any programme classification information, your censorship setting will not take effect.

If anyone is trying to watch a programme that is of or above the censorship setting, the person has to enter the personal identification number to override.

To change the number, select the Change PIN Code menu; then an input box appears. You have to enter a desired number twice for confirmation.

You can also restrict uses of some menus. Selecting the Access Control menu displays a list of menus that you can lock. If the Time item is set to Locked, you have to enter the personal identification number when accessing the Time menu. If you enter a wrong number, you cannot use the menu. To release the item, set it to Unlocked.

4.5 Recording Settings

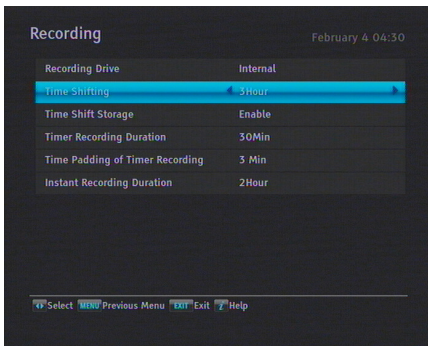

To configure the recording related settings, select the Settings > Recording menu.

You should see a screen like the left figure.

You can record a programme into both an external or the built-in hard disk drive. If you want to record a programme into an external hard disk drive, set Recording Drive option to External; otherwise, set this option to Internal.


You can adjust the duration of the time shift. Set the Time Shifting option as you desire. Its available range is 30 minutes to 5 hours. If you do not want to use the time shift, set this option to Disable.

If you set the Time Shift Storage option to Enable, the saving parts which for the time shift will be recorded in the TimeShift folder of the hard disk drive.

You can set the duration of the timer recording. Set the Timer Recording Duration option as you desire. Its available range is 10 minutes to 3 hours. In addition, you can adjust the time padding of timer recording. Set the Time Padding of Timer Recording option as you desire. Its available range is 0 to 30 minutes.

You can adjust the duration of the instant recording. Set the Instant Recording Duration option as you desire. Its available range is 30 minutes to 5 hours.

4.6 Playback Settings

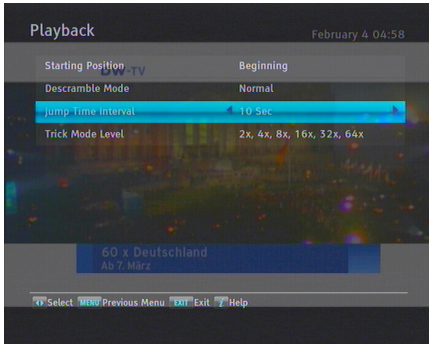

To configure the playback related settings, select the Settings > Playback menu.

You should see a screen like the left figure.

If you want to play back a recorded file from beginning, set Starting Position option to Beginning. To play back a recorded file from the part where you were watching, set this option to Continuing.

To record again a scrambled recording file with descrambling during playback, set the Descramble Mode option to Auto Recording; otherwise, set this option to Normal.

You can adjust the jump time interval which is used in playback. Set the Jump Time Interval option as you desire. Its available range is 10 seconds to 3 minutes.

If you want to use extensional trick mode, set the Trick Mode Level option to 2x, 4x, 8x, 16x, 32x, 64x; otherwise, set this option to 4x, 16x, 64x.

4.7 Adjusting the On-Screen Display



To adjust the On-Screen Display (OSD) related settings, select the Settings > OSD menu.

You should see a screen like the left figure.

To adjust the transparency level of the OSD, set the OSD Transparency option as you desire. Its available range is 0 to 50 percent.


To adjust the display time of the information box, set the Info Box Display Time option as you desire. Its available range is 1 to 30 seconds. If you set this option to No Infobox, the information box will not be displayed when you switch services. However, pressing the **[I]** button will display the information box. If you set this option to Never Hide, the information box will always be displayed. For the information box, see § 5.2.3.

In addition, you can raise or lower the position of the information box. To do that, set the Info Box Position option as you

desire. Its available range is -10 to $+3$ lines. The higher you set the option, the lower the information box will be positioned. To use an animation effect when changing menu, set the Animation option to Enable.

To use the service name scrolling at the service list screen, set the Text Scroll option to Full Scroll or Part Scroll. If you set this option to Full Scroll, a service name will be fully scrolled. If you set this option to Part Scroll, a service name will be scrolled only from beginning of the name to end of the name.

4.8 Front Display Settings

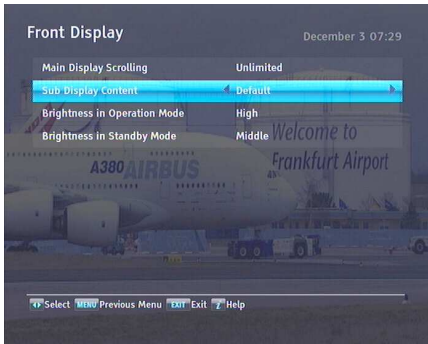

To adjust the front display related settings, select the Settings > Front Display menu.

You should see a screen like the left figure.

If you want to use the front display scrolling continuously, set the Main Display Scrolling option to Unlimited. Setting it to Once do the scrolling one time. Set it to Disable not to use the scrolling.

To display the current time on the sub display of the front display, set the Sub Display Content option to Time. Otherwise, set this option to Default to display the name of the upper menu.

To adjust the brightness of the front display in operation mode, set the Brightness in Operation Mode option as you desire.

You can also adjust the brightness of the front display in standby mode. To do that, set the Brightness in Standby Mode option as you desire.

4.9 To use MediaHighway programme guide

Almost every service provider would provide the electronic programme guide. However, you can get more abundant programme information from the specific transponder that provides only programme guides. For detailed description about the electronic programme guide, see § 5.3. MediaHighway stands for the transponder dedicated to the electronic programme guide.

If you want to use this feature, select the Settings > MediaHighway EPG menu.

Set the MediaHighway EPG option to On to activate this feature; then the other options become enabled. Set the Satellite Name and Home Transponder options to available ones, and set the Tuner Select option to a tuner which receives them.

4.10 Adjusting a size of picture in picture

You can adjust a size of picture-in-picture screen. To do that, select the Settings > Others menu; then, set the Default PIP Size option as you desire. For the picture-in-picture, see § 5.6.

4.11 Slideshow Settings

You can change a time interval and effect of slideshow in the photo album. For the photo album, see § 8.3.

To change the time interval of slideshow, select the Settings > Others menu; then, set the Slideshow Time Interval option as you desire. Its available range is 3 to 10 seconds.

To change the effect of slideshow, select the Settings > Others menu; then, set the Slideshow Effect option as you desire. There are four types of effects as follows:

Overlap overlaps the current picture and a following picture.

Cover covers the current picture with a following picture.

Move moves the current picture and displays a following picture.

Mosaic displays a following picture with a mosaic effect.


To use those effects randomly, set this option to **Random**. The default value is **Random**.

You can display the current time on the front display in standby mode. To display the time, select the **Settings > Others** menu and set the **Standby Mode** option to **Active**; otherwise, set it to **Passive**. When you set the **Standby Mode** option to **Active**, the receiver can also bypass the signal from the antenna.


Chapter 5

Daily Usage

5.1 Volume control

Use the **VOLUME+** and **VOLUME-** buttons to alter the volume to a comfortable level. You may need to adjust the volume on your television set too. To temporarily switch off the sound, press the  button. Press it again to restore the sound to previous level.

5.2 Watching television

To change services, press the **CHANNEL+** or **CHANNEL-** button. Pressing the  button switches to the previously viewed service. In addition, you can switch to your desired service by entering its service number with the numeric buttons. You can also select a service to watch in the services list.

5.2.1 The services list

To display the services list, press the **OK** button.



On the services list, you can see the service information:

- Service number and name
- Transmitting satellite
- Receiving tuner: T1 stands for the first tuner; T2 stands for the second tuner.
- Transponder information

A dollar sign (\$) marked on some entries indicates pay service. To watch pay services, you need a subscription card.

To select a desired service, put the highlight bar on its entry with the \odot or \ominus button and press the OK button; then it will be displayed.

Pressing the \odot or \ominus button skips over 10 entries up or down. Entering a service number with the numeric buttons puts the highlight bar on its entry.

You can switch between the television services list and the radio services list by pressing the TV/R button.

Pressing the F3 button performs an alphabetic browse. For instance, when the highlight bar is on an entry of which initial is B, pressing the F3 button puts the highlight bar on the first entry of which initial is C.

To display favourite lists, press the F2 button.

Pressing the Option button displays the additional options, with which you can do the following:

- Select your desired satellite at the Satellite option, then only provided services by the selected satellite will be listed.

- Select your desired tuner at the Tuner option, then only provided services through the selected tuner will be listed.
- By setting the Show Provider option to On, you can view service entries by groups of broadcasters.
- To change the name of the highlighted service, select the Rename option; then the on-screen keyboard appears, with which you can enter a new name. See § 6.3 for how to use the on-screen keyboard.
- You can prevent other family members from watching the highlighted service by setting the Lock option to Locked. You have to enter your personal identification number to watch or unlock it.
- To delete the highlighted service, select the Delete option; then you get asked for confirmation. If you select Yes, it will be deleted. If you want to restore it as before, you have to perform service search again. See § 3.1 for service search.
- To add the highlighted service into a favourite group, select the Add to Fav option; then the favourite groups will be displayed. Put the highlight bar on a desired group and press the **OK** button.
- You can additionally sort the services list with the Sorting option as follows:
 - Default by service number
 - Alphabetic by service name
 - Satellite by satellite
 - FTA–CAS from free services to pay services
 - CAS–FTA from pay services to free services
 - Provider by broadcaster
 - Fav–NoFav from favourite services to unfavourite services.

Transponder by transponder.

5.2.2 The favourite services list

You can select a service on a favourite list as well as on the services list.



To display the favourite lists, press the **(F2)** button at the services list screen. For the services list, see § 5.2.1.

To select a favourite list, put the highlight bar on a desired favourite group list and press the **(OK)** button; then favourite services belonging to the highlighted group are listed.

For how to edit the favourite lists, refer to § 6.2.

To select a favourite service, put the highlight bar on a desired service and press the **(OK)** button. Once you select a desired service with the **(OK)** button, it will be displayed. To select other group, press the **(↶)** button.

After you have selected a favourite service, if you then switch to another service using the **(↻)** or **(↺)** button, it will be also another favourite service of the selected group. The digital receiver will remind you what group you have selected by displaying its name at the top right of the screen whenever you switch services.

To return to the services list, press the **(F1)** button.

Besides that, you can add or delete a favourite group or service.

To add the service you are currently watching into a favourite group, press the **(Option)** on the favourite group list. Then, select **Add this service** item and press the **(OK)** button.

To delete a service, press the **(Option)** on the favourite group list. Then, select **Delete** item and press the **(OK)** button; then you get asked for confirmation. If you select **Yes**, it will be deleted.

5.2.3 Viewing programme information

Pressing the **(i)** button displays the information box, on which you can see all of the following:








 

- Service number and name
- Transmitting satellite
- Receiving tuner
- Transponder information
- Signal level and quality
- Programme name
- Programme classification symbol
- Programme summary
- Broadcasting time
- Current time

In addition, you might see the following symbols:



- Subtitle symbol (**(=)**) if subtitle tracks are provided on the current programme.
- Teletext symbol (**(≡)**) if teletext pages are provided on the current service.
- Dolby symbol (**(DD D)**) if a Dolby audio track is provided on the current programme.
- Lock symbol (**(🔒)**) if the current service is locked.
- Dollar symbol (**(\$)**) if the current service is a pay service.
- Multifeed symbol (**(⌂)**) if the current programme is provided as a multifeed programme. To use this feature, refer to § 5.4.

If the electronic programme guide is provided on the current service, you can see the information about the current and next



programmes with the  or  button. You can also see the information about other services with the  or . In this case, you can change a service by pressing the .

Pressing the  button once more displays detailed information about the current programme. To hide the information box, press the .

 

5.2.4 Selecting audio tracks


 

Some programmes are provided with audio tracks in one or more languages. Pressing the  button displays available audio tracks. Once you select an audio track, that track will be heard. In addition, you can enjoy audio tracks in four sound modes: Stereo, Mono, Left or Right. However, if a multifeed programme is provided at the moment, video tracks will be displayed. In this case, you have to press the  button once more to select an audio track.

5.2.5 Selecting subtitle tracks

Some programmes are provided with subtitle tracks in one or more languages. If the current programme provides subtitle tracks, the subtitle symbol () will be marked on the information box. Pressing the  button displays available subtitle tracks. Once you select a subtitle track, it will be displayed.


5.2.6 Viewing teletext

On some services, such information as weather reports, news or stock quotations is provided by means of teletext. If the current service provides teletext, the teletext symbol () will be displayed on the information box. Press the  button to view teletext pages.

Select a page to view by entering its page number with the numeric buttons. You can zoom into a teletext page with the , and adjust its transparency level with the  button. To clear the teletext screen, press the .

5.3 Viewing electronic programme guide

The Electronic Programme Guide (EPG) shows the current and scheduled programmes that are or will be available on each service with a short summary for each programme.

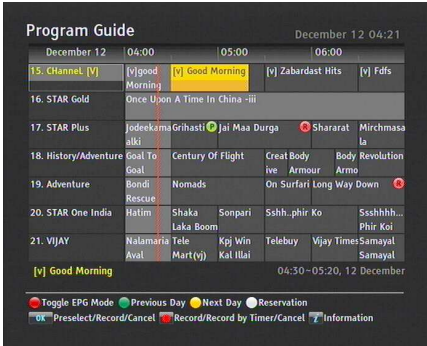

Selecting the Recording > Program Guide or pressing the **[GUIDE]** button displays the electronic programme guide, on which you can see the following:

- Scheduled programmes
- programme summary
- Broadcasting date
- Broadcasting time

To see detailed information of a desired programme, put the highlight bar on the programme with the navigation buttons and press the **[i]** button.

You can travel over previous days with the **[F2]** button, and can travel over next days with the **[F3]** button.



To see the programme guide for radio broadcasts, press the **[□/△]** button. To switch it back, press the **[□/△]** button again.

Pressing the **[F1]** button displays the programme guide in the different form. To switch it back, press the **[F1]** button again.

You can make a timer recording on the electronic programme guide. See § 7.1.3 for detailed description.

5.4 Watching multifeed programme

Some broadcasts such as sports channels can provide a variety of perspectives on a programme at the same time. We call it a multifeed programme. You can select and watch a perspective you prefer.

If a multifeed programme is provided on the current service, the multifeed symbol (⏮) will be marked on the information box. Press the  button, then available video tracks will be listed. Once you select one, it will be displayed. At this time, you have to press the  button once more to select audio tracks.

5.5 Using time shift

You can pause and resume a live television programme, and even rewind and replay it. When you are watching a programme and you miss something, you can rewind and replay it. Or when your attention is needed elsewhere, you can pause live TV and resume a short time later without losing any of the programme.


 


When you do this, you are no longer watching the live programme, instead you are watching a delayed presentation. This is called time shifted television. You can skip commercials until you catch up to the live broadcast.

In order to use the time shift feature, set the Time Shifting option to desired duration of time. Then the digital receiver will keep as much time as you set in the option. See § 4.5.

The time shift will reset each time you change to another service.

With the time shift, the following operations are possible:


- To go back in time, hold down the  button; to go forward, hold down the  button. The progress bar is displayed momentarily with a preview window.

- You can navigate using the progress bar, refer to § 7.3.1.
- You can jump backward and forward by pressing the **[F4]** and **[F3]** buttons. You can change the jump time at the Jump Time Interval option. See § 4.6.
- You can change playback speed. See § 7.3.2 for slow motion. For fast motion, see § 7.3.3.
- To check your current position in time shift, press the **[i]** button. The time difference compared to live programme is displayed momentarily in top right corner of screen. A value of -02:00 means two minutes behind live programme.
- To make a recording of what is in time shift, see § 7.1.4.
- To end time shift, press the **[■]** button. The live programme will be displayed.

NOTE

You can adjust some options of the time shift. Refer to § 4.5.

5.6 Using picture in picture

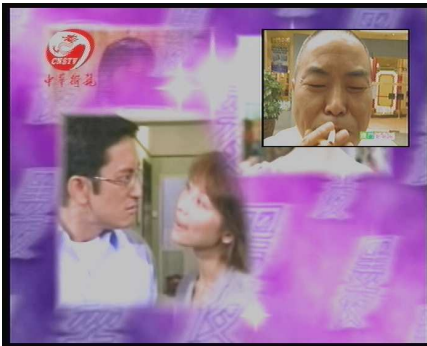

You can watch two services at the same time with one of them displayed in a sub-picture. We call this feature picture-in-picture.

The instructions on how to use the picture-in-picture feature are as follows:

1. Press the **(F1)** button to display a sub-picture, on which another service will be displayed. Pressing the **(F1)** button once more hides the sub-picture.
2. To display the services list for the sub-picture, press the **(Option)** button.

NOTE

When a recording is in progress, the available services in the services list may be limited.


3. Pressing the **(◀)** button moves the sub-picture counter-clockwise, and pressing the **(▶)** button moves it clockwise.
4. Pressing the **(SAT)** button swaps the main picture with the sub-picture. Even when you play back a recording, you can watch a live programme in the sub-picture. However, you cannot swap the pictures in that case.
5. If both pictures are pay services, only the main-picture will be displayed. To display two pay services, set the **Descramble multiple services** option to **Enable** referring to § 1.3.

Chapter 6

Editing Services

6.1 Editing the services list


You would have got the services list after service search. You can rename, move, lock or delete service entries on the services list.

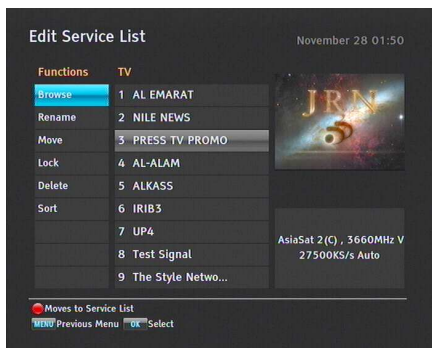


Select the Installation > Edit Services > Edit Service List menu. You should see a screen like the left figure.



There are editing options on the left column and service entries on the right column.



Once you put the highlight bar on a desired option on the left column and press the **OK** button, you can select a desired service to edit on the right column. To go over to the other column, press the **F1** button.

To edit the radio services list, press the  button; then radio service entries will be listed on the right column. To switch back to the television services list, press it again.

To change the name of a service, select the **Rename** and select a desired service; then the on-screen keyboard appears. See § 6.3 for how to use the on-screen keyboard.

Unlike analogue broadcasts, each service does not have a proper service number in digital broadcasts. Service numbers are just assigned to services in the order that they were found in service search. So you can reassign a service number by moving a service entry. To move a service entry, select the **Move** option and select a desired service; then the selected service becomes darker. As you move it up or down, it gets renumbered according to the position. Press the  button to fix it.

You can lock some services to prevent your children from watching them. To lock a service, select the **Lock** option and select a desired service; then the selected service gets marked with a lock symbol () on it. If anyone tries to watch a locked service, the person has to enter the personal identification number that is set to the **Change PIN Code** option. See § 4.4 for this option. Pressing the  button on a locked service entry turns it back to be unlocked.

To delete a service, select the **Delete** option and select a desired service with the  button, and then press the  button; you get asked for confirmation. If you select **Yes**, the selected service will be deleted. If you want to undo the deleted service, there is nothing you can do but perform a service search again.

Once you select the **Sort** option on the left column, sorting options are displayed as follows:

Default by service number

Alphabetic by service name

Satellite by satellite

FTA–CAS from free services to pay services

CAS–FTA from pay services to free services

Provider by broadcaster

Fav–NoFav from favourite services to unfavourite services.

Transponder by transponder

6.2 Editing the favourite list

You can make your own favourite services list. In fact, you can define multiple favourite services lists, each being a ‘group’ of chosen services.



Select the Installation > Edit Services > Edit Favorite List menu. You should see a screen like the left figure.

There are three columns:

- Group list (left)
- Favourites list (centre)
- Services list (right)

The services list contains all available services, whereas the favourite list contains only chosen services that have been added to the highlighted group. As you move the highlight bar up or down on the group list, favourite services belonging to the highlighted group get shown in the favourites list.



You can add up to 30 groups. To add a group, select the NEW option in the group list; then the on-screen keyboard appears. See § 6.3 for how to use the on-screen keyboard.

To rename a group, put the highlight bar on the group entry you want and press the **F2** button; then the on-screen keyboard appears. See § 6.3 for how to use the on-screen keyboard.

To delete a group, put the highlight bar on the group entry you want and press the **(F3)** button; then a message box appears asking you for confirmation. If you select **Yes**, it will be deleted. You can add a favourite service to a group by taking the following steps:


1. Put the highlight bar on a desired group entry in the group list and press the **(OK)** button to select it. The highlight bar then moves to the services list.
2. To add a service to the selected group, put the highlight bar on a desired service entry and press the **(OK)** button. The selected service entry gets added to the favourite list. Repeat this step to add more entries.
3. Press the **(F1)** button and the highlight bar gets moved to the favourite list. You can delete a favourite entry with the **(OK)** button.
4. To select another group, press the **(F1)** button again. By pressing the **(F1)** button, the highlight bar gets moved to each column.






At the same time, you can rearrange a group's favourites by moving a favourite entry. To move a favourite entry, put the highlight bar on the favourite entry you want and press the **(F2)** button. Move it to a desired place and press the **(OK)** button.


To add radio services, press the **()** button at the services list column; then radio service entries get listed in the services list. To recall the television services list after adding radio services, press the **()** button again.

 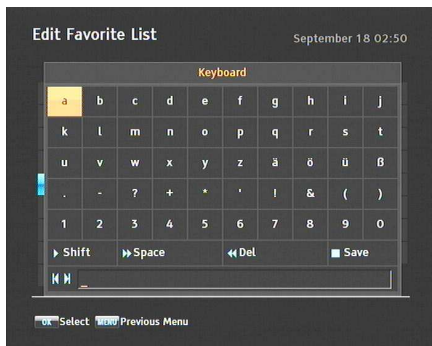With your favourite services list, you can select your favourite services more easily. Refer to § 5.2.2 for detailed description.

6.3 How to use the on-screen keyboard



You can move the highlight key horizontally with the  and  buttons and vertically with the  and  buttons. Pressing the  button on a key enters its letter in the input line. To type a space, select the Space key. To type lower case letters or numerals, select the Shift key.

To delete a letter, put the cursor to the right of the desired letter on the input line and then select the Del key. You must select the Save key to store the name; otherwise if you press the  button, the name will not be stored.

Chapter 7

Recording and Playing

You can record a service to an external hard disk drive as well as the built-in hard disk drive.

NOTE

To use an external hard disk drive, you must connect the external hard disk drive to the USB port of the digital receiver. The hard disk drive should have its own power supply. Because the digital receiver cannot provide enough power for the external hard disk drive.

CAUTION

Do not disconnect the external hard disk drive while recording or playing back. It may cause damage to recorded programmes. You should disconnect the external hard disk drive in standby mode only.

You can record a service while watching another with the SRP-2100 digital receiver.

You can record two different services while watching another if two of the services are provided through the same transponder.

The SRP - 2100 digital receiver has two tuners so that you can enjoy the following:

- While playing a recording back, you can watch a service in the sub-picture using the picture-in-picture feature.
- You can record two different services while playing back a previously recorded programme.
- You can even record two different services while watching two other different services—only if two or more services are provided in a same transponder and the other services are provided in another same transponder. In this case, you can watch two services at the same time using the picture-in-picture feature. See § 5.6 for the picture-in-picture feature.

7.1 Recording a programme



Once recording has started, a symbol like the left figure will be displayed at the top right of the screen for a few seconds.


When you are watching a different service from the service being recorded, you will see a number on the centre of the symbol, this indicates the order that the recording has started.



To record two programmes simultaneously, two tuners are allocated for the recording. Therefore, you can only change to a limited number of services while the two programmes are being recorded.


CAUTION


Do not move the digital receiver nor pull out the power plug while it is running. It may cause damage to recorded programmes. Topfield is not responsible for damages inflicted on files that are stored on the hard disk drive.




7.1.1 Instant recording

To instantly record a programme you are watching at present, press the  button.

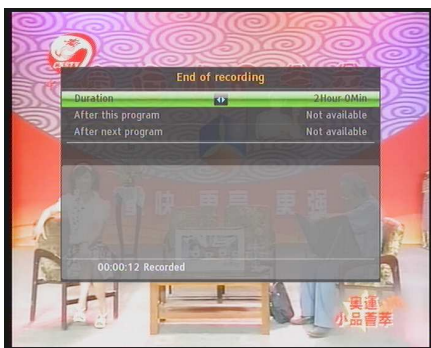Pressing the  button will not pause the current recording like it does with a video cassette recorder. Instead, pressing the  button will pause the live show and begin time shifting within the current recording even with the Time Shifting option disabled. However, it is still possible to pause a recording.



After a recording is started, pressing the  button displays a menu like the left figure, in which you can set the recording duration.

To specify an arbitrary recording duration, set the Duration option as you desire with the  and  buttons and press the  button; the recording will end at the specified time.

If the information about the next programme is provided by the electronic programme guide, the 'After this program' and 'After next program' options will be enabled. Once the 'After this program' option is selected, the current recording will stop when the current programme is scheduled to end. Likewise, once the 'After next program' option is selected, the current recording will stop when the next programme is scheduled to end.



To stop recording, press the button; then a box like the left figure appears, which shows programmes currently being recorded. If you select one, its recording will stop.

While a recording is going on, you can watch or record another service. To additionally record another service, switch to the service you want to record, and press the button.

Once a recording is started, it is put on the recorded programme list even though it is not finished yet. The recording file is named after its service name with a suffix of a number.


To view the recorded programme list, press the button or alternatively select the Recording > Recorded Program menu.

See § 7.2 for detailed description about the recorded programme list.

7.1.2 Recording Reservation

You can set a service to be recorded at a specific time. Even if the digital receiver is in standby mode, it will switch into operation mode and start recording at a specified time. When the recording comes to the end, the digital receiver will switch back into standby mode again in one minute.

However, if you press any button on the remote control or on the front panel even just one time, the digital receiver will not switch into standby mode.

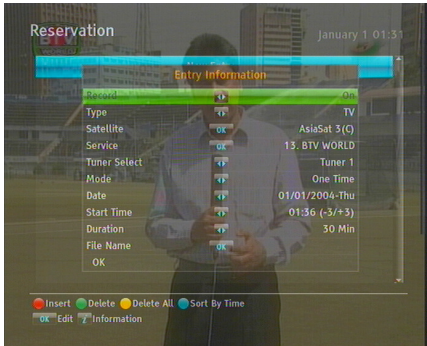

To add a timer recording, select the Recording > Reservation menu; then the timer list will be displayed.

To add a new timer event, press the (F1) button, and a box like the left figure appears. Take the following steps:

1. Set the Record option to On to make a recording. If this option is set to Off, the digital receiver will turn on at the specified time but not record; instead, you may record with your video cassette recorder or suchlike in this case.
2. If you want a radio programme, set the Type option to Radio; otherwise, set this option to TV.
3. Set the Satellite option to the satellite which transmits the service you want. Pressing the (OK) button on this option displays a satellite list, from which you can select your desired satellite. Set the Tuner Select option to a tuner to receive your desired service.
4. Set the Service option to the service which provides the programme you want. Pressing the (OK) button on this option displays a services list, from which you can select your desired service.
5. Set the Mode option as you desire. There are five timer modes:

One Time means literally 'one time'.

Every Day means literally 'every day'.

Every Weekend means 'Saturday and Sunday every week'.

Weekly means 'one day every week'.

Every Weekday means 'from Monday to Friday every week'.

If your favourite programme is broadcast at weekends and you wish to record every episode of the programme, set the Mode option to Every Weekend.

6. Set the Date option to a desired date, on which the digital receiver will turn on. The date format is *day/month/year-day of the week*.

Set the Start Time option to a desired time, at which the recording will be started. The time format is *hour:minute*.

7. Set the Duration option to a desired time, in which the recording will be finished.
8. Pressing the **OK** button on the File Name option displays the on-screen keyboard, with which you can specify a file name for the timer recording. If you do not specify anything, it will be named after the service name. See § 6.3 for how to use the on-screen keyboard.
9. To set a recording reservation with the above settings, select the OK item; otherwise, it will not be saved and will not occur.

You can also edit or delete timer events in the timer list.


To edit a timer entry, put the highlight bar on the entry you want and press **OK** button; then appears a box in which you can change its settings in the same manner as making a new one.

To delete a timer event, put the highlight bar on the entry you want to remove and press the **F2** button; then you get asked for confirmation. If you select Yes, it will be deleted.

To delete all timer event, press the **F3** button.

You can sort timer events by time with the **F4** button.

7.1.3 Scheduling recordings using the programme guide

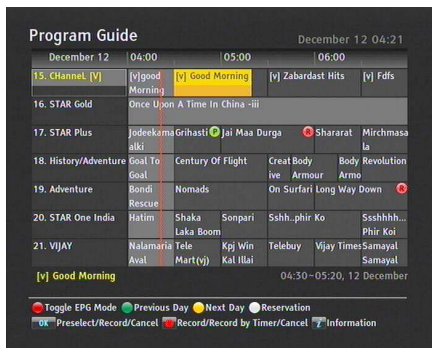



If the electronic programme guide is properly provided, you can make timer events on it. The instructions on how to make timer recordings using the electronic programme guide are as follows:

1. Press the **[GUIDE]** button to display the electronic programme guide.
2. Select a programme you want to record with the navigation buttons.
3. To make a timer event without recording, press the **[OK]** button; the letter **P** is displayed. To make a timer event with recording, press it once more or alternatively press the **[RECORD]** button; then the letter **R** is displayed.
4. Pressing the **[OK]** button once more will cancel the timer.

7.1.4 Recording a time-shifted programme

While watching a programme with time shift, you can record it by performing the following steps:

1. Press the **[PROGRESS BAR]** button to display the progress bar.
2. To move to the beginning of the desired scene, hold down the **[LEFT]** or **[RIGHT]** button until it is reached.
3. Press the **[RECORD]** button to start recording. The time shift buffer from that position onwards will now be recorded.

4. Press the  button to stop recording.
5. Press the  button once more to stop time shift.

See § 5.5 for detailed description about the time shift feature.

NOTE

You cannot watch a time-shift recorded file in fast motion and slow motion during playback.

7.1.5 Recording a pay service programme

You can record a pay service programme without the subscription card. However, you need the subscription card to play it back because it has not been descrambled. So it is recommended recording pay service programmes with the subscription card so that they can be recorded in descrambled form. In that case, you can enjoy them without the subscription card like free services.

To record a programme of a pay service in descrambled form, perform the following steps:

1. Select a programme of a pay service you want to record.
2. Make sure that the subscription card is inserted in the slot on the front of the digital receiver.
3. Start recording.
4. Do not switch to other service nor use time shift until it is finished.

NOTE

You cannot watch a pay service recorded file in fast motion and slow motion during playback.

 
NOTE

If you switch to other service or use time shift in the middle of recording a pay programme, it will be recorded without descrambling from that moment. Even if the recording is only partially descrambled, you need the subscription card to play it back.

7.2 File archive

When a programme is recorded, it is stored as a file on the hard disk drive of the digital receiver. You can select a recording to play back from the recorded programme list.




Select the Recording > Recorded Program menu or alternatively press the  button to display the recorded programme list.

The file information is comprised of the following elements: file number, file name, recording time, playing duration, file size and so on.

You can play, move, delete, rename and lock a recording file. You can also sort the recording files by file name, playing duration or file size. In addition, you can make a new folder.

7.2.1 To delete a recording

To delete a recording, put the highlight bar on it and press the  button; then you get asked for confirmation. If you select Yes, it will be deleted.


7.2.2 To sort recordings

To sort the recordings, perform the following steps:

1. Press the **[Option]** button to display the additional options.
2. Set the **Sorting** option to **Alphabetic**, **Time** or **Size** as you want.
3. Press the **[EXIT]** button.
4. They will be sorted by the specified option.

7.2.3 To lock a recording

To lock a recording so that other people cannot play or delete it, perform the following steps:

1. Put the highlight bar on a desired recording.
2. Press the **[Option]** button to display the additional options.
3. Set the **Lock** option to **Locked**.
4. Press the **[EXIT]** button.
5. The lock symbol () is displayed on it.

If you select a locked recording to play it back, you will be asked for your personal identification number.

7.2.4 To rename a recording

To change the name of a recording, perform the following steps:

1. Put the highlight bar on a desired recording.
2. Press the **[Option]** button to display the additional options.
3. Select the **Rename** option, and the on-screen keyboard appears. Change the name and save it. See § 6.3 for how to use the on-screen keyboard.

7.2.5 To make a new folder

To make a new folder, press the **(F2)** button; then a new folder named GROUP # is created. You can change its name in the same manner as renaming a recording. See above.

7.2.6 To move a recording to another folder

To move a recording to another folder, put the highlight bar on a desired recording and press the **(F3)** button. If an external hard disk drive is connected to the digital receiver, you get asked to select between the built-in and external hard disk drive. Select Internal; then the folders are listed. Once you choose a folder, the recording is moved to it.


7.3 Playing back a recording

When a programme is recorded, its additional contents such as audio tracks or teletext are also recorded together. So you can enjoy them while playing back a recording.

 






The instructions on how to play a recording are as follows:

1. Select the Recording > Recorded Program menu or alternatively press the **(F4)** button to display the list of recorded programmes.
2. Put the highlight bar on a desired recording and press the **(OK)** button.
3. Select Play option and press the **(OK)** button to start playback. In addition, you can set play mode options as follow:
 - If you want to playback the file from beginning, set the Starting Position option to Beginning. To play back the file from the part where you were watching, set this option to Continuing.


- To descramble the file, set the Descramble Mode to Auto Recording.







4. To stop playback, press the  button.

During a playback, you can enjoy the following tricks:



- To see the detailed information about the currently played recording, press the  button; then the information box appears and shows its file name, playing duration, programme information, and so on.
- To pause playback, press the  button. To resume it, press the  button.
- To go forward, hold down the  button; to go backward, hold down the  button.
- To display the progress bar, press the  button; to hide it, press the  button again.
- When the progress bar is hidden, you can move to a desired scene by entering the percentage with the numeric buttons.

7.3.1 To navigate using the progress bar



First press the  button to display the progress bar, then:



- To go forward, hold down the  button; to go backward, hold down the  button.
- To bookmark a position, refer to § 7.3.4.
- If there are no bookmarks, you can jump forward about 15 seconds at a time by pressing the  button.
- To jump to start of a recording, press the  button.
- To jump to end of a recording, press the  button.
- To hide the progress bar, press the  button again.

7.3.2 To play in slow motion

To watch in slow motion during a playback, press the  button. If you press it repeatedly, the playback speed changes in 4 steps: 1/2, 1/4, 1/8 and 1/16 times. To resume normal speed, press the  button.

7.3.3 To play in fast motion

To watch in fast motion during a playback, press the  button. If you press it repeatedly, the playback speed changes. To resume normal speed, press the  button.



You can play not only forward but also backward in fast motion. To play backward, press the  button. If you press it repeatedly, the playback speed changes. To resume normal speed, press the  button.




 
You can change the playback speed in 3 steps (4, 16 and 64 times) or in 6 steps (2, 4, 8, 16, 32 and 64 times). See § 4.6.

7.3.4 To make a bookmark






You can mark favourite parts of a recording by creating bookmarks, and then jump to them. Bookmarks are stored with the recording so that you can use them again afterwards. To make bookmarks, perform the following steps during playback:

1. Press the  button to display the progress bar.
2. To add a bookmark, press the  button at a desired scene; then you will see a small dot appear above the progress bar like in the picture above.







3. To jump forward to next bookmark, press the  button.
4. To jump to first bookmark, press the  button then the  button.
5. To delete a bookmark, jump to it and then press the  button.

7.3.5 To play back a recording repeatedly

You can play back a recording repeatedly both in whole and in part.


To play back in whole, press the  button when the progress bar is hidden; then the repetition symbol () is displayed on the information box. To cancel it, press the  button again.





To play back in part, perform the following steps:

1. Press the  button to display the progress bar.
2. Move to the beginning scene of the part you want to play repeatedly by holding down the  or  button.
3. Press the  button, then the pointer starts to blink.
4. Move to the end scene; the part is marked in black.
5. Press the  button again to start repeated playback.
6. To cancel it, press the  button when the progress bar is displayed.

7.3.6 To play back recordings in sequence

You can play several recordings continuously in sequence by performing the following steps:

1. Press the  button or alternatively select the Recording > Recorded Program menu to display the list of recorded programmes.

2. Select each desired recording with the  button. Once a recording is selected, it gets numbered.
3. Press the  button to start playback.
4. The selected recordings are played in the sequence that they are numbered.
5. To jump to start of next selected recording, press the  button to display the progress bar, then press the  button.

7.3.7 To play back a scrambled recording





If you have recorded a programme of a pay service with the subscription card, you can play it as freely like one of a free service. Otherwise you need the subscription card to play it back, because it has been recorded without unscrambling even though it may have been partially descrambled.

On the recorded programme list, a purely green **\$** indicates the recording has been wholly descrambled; on the other hand, a yellowish green **\$** indicates it has been partially descrambled, and a purely yellow **\$** indicates it has not been descrambled at all.

Refer to § 7.1.5 for how to record a pay service programme.

7.4 Editing a recording

You can cut out or save a part such as commercial from a recording by performing the following steps:

1. Press the  button to display the progress bar during a playback.
2. Move to the beginning scene of the part you want to edit by holding down the  or  button.
3. Press the  button, then the pointer starts to blink.

4. Move to the end scene; the part is marked in black.
5. Press the **F4** button, then the edit options are displayed.
6. If you choose the Cut option, it will be removed from the original recording and discarded.
7. If you choose the Save option, the cut will be saved in a new file which is named after the original recording with a suffix of 'CUT' and a number.

NOTE

You can use only 2 times speed in fast motion during playback of a edited file. And you cannot watch a edited file in slow motion.

7.5 Copying a recording

When you record a pay service without the subscription card, the recorded file will not be descrambled.

You can descramble and record the file in whole or in part during a playback by performing the following steps:

1. Start playback of a recording you want.
2. Make sure that the subscription card is inserted in the slot on the front of the digital receiver.
3. Move to a scene from which you want to start copy by holding down the **◀◀** or **▶▶** button.
4. Press the **■** button, then it will be copied in a new file which is named after the original recording with a suffix of 'COPY' and a number.
5. To stop copying, press the **■** button.

7.6 Formatting the hard disk

You can delete all contents stored in a hard disk drive by formatting it. If you wish to do that, select the **Installation > System Recovery > Format Hard Disk** menu; then select the hard disk driver which you want to format. To format the built-in hard disk drive, select the option to **Internal**; otherwise, select the option to **External** to format an external hard disk drive which is connected to the digital receiver. After selecting it, press the **OK** button, then you get asked for confirmation. If you select **Yes**, formatting will start.

CAUTION

Formatting the hard disk will delete all files permanently.

NOTE

If a new hard disk drive is installed, it must be formatted because the file system of the digital receiver is different from any of the personal computer. You can neither record nor use time shift with an unformatted hard disk.

Chapter 8

Special Features

The SRP - 2100 has special features as MP3 playback, YouTube playback, network game and so forth.

NOTE




To fully enjoy those functions, you have to configure the network settings correctly; otherwise, the function does not work or partially works. For how to configure the network settings, refer to § 9.2.



8.1 Playing back MP3 files


You can enjoy music or audio books in MP3 format on the digital receiver.

Refer to § 8.4 for how to copy a file from an external hard disk drive into the built-in hard disk drive of the digital receiver.

To play an MP3 file, perform the following steps:

1. Select the Entertainment > MP3 Player or press the  button and then the  or  button to display the MP3 file list.

2. Put the highlight bar on a desired file; if you want to play several files, select them with the **(F1)** button.
3. Press the  button to start playback.
4. To stop playback, press the  button.

To play all MP3 files in a subfolder, put the highlight bar on a desired folder, and press the  button.

8.2 Playing back video files






You can enjoy video files in DivX, vob, mkv, or mp4 format on the digital receiver.

NOTE

The SRP - 2100 supports only DivX 3.x, 4.x and 5.x.

Refer to § 8.4 for how to copy a file from an external hard disk drive into the built-in hard disk drive of the digital receiver.







To play a video file, perform the following steps:

1. Select the **Entertainment > Media Player** or press the  button, and then the  or  button to display the video file list.
2. Put the highlight bar on a desired file; if you want to play several files, select them with the **(F1)** button.
3. Press the  button to start playback.
4. To stop playback, press the  button.

8.3 Viewing graphic files

You can view graphic files in jpg format with the digital receiver.

To view a jpg file, perform the following steps:

1. Select the Entertainment > Photo Album or press the  button, and then the  or  button to display the list of graphic files.
2. Put the highlight bar on a desired file and press the  button; if you want to view several files using a slide show, press the  button. You can change a time interval and effect of slideshow. See § 4.11.
3. To stop viewing, press the  button.

8.4 Copying files

You can copy files between the built-in hard disk drive and external hard disk drive.




NOTE

If your external hard disk drive is formatted in the FAT16/32 or NTFS, it can only be read. To enable to write and read, the hard disk drive must be formatted in the JFS or Ext2/3 file system. For how to format in the JFS or EXT2/3 file system, refer to § 7.6. In addition, the digital receiver can only recognize files and directories which are named with only alphabetic, numeric and underscore letters. If there is a file or folder named with other letters, the digital receiver cannot recognize not only it but also its subsequent files and folders.

8.4.1 To copy a file to an external hard disk drive

You can copy files to an external hard disk drive.

To copy files, perform the following steps:

1. Connect an external hard disk drive to the digital receiver.
2. Press the  button and then press the  or  button to select a desired file list except the External list.

3. Put the highlight bar on a desired file and press the **F3** button.; then you get asked to select between the built-in and external hard disk drive.
4. Select **External**; then the folders are listed.
5. Select a folder and press the **OK** button; then the selected file will be copied into the external hard disk drive.

8.4.2 To copy a file from an external hard disk drive


You can copy files from an external hard disk drive.

To copy file, perform the following steps:

 

 

1. Connect an external hard disk drive to the digital receiver.
2. Press the **□** button and then press the **◀** or **▶** button to select the External Device List.
3. Put the highlight bar on a desired file and press the **F3** button.; then the list of folders gets displayed.
4. Select a folder in the built-in hard disk drive.
5. Press the **OK** button; then the selected file will be copied into the built-in hard disk drive.

8.5 Playing back contents of YouTube

 
 
 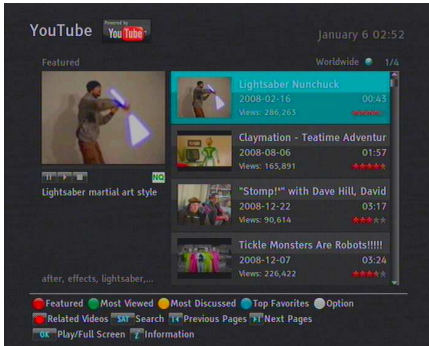


YouTube is a video sharing website where users can upload, view and share video files. With the SRP - 2100, you can access YouTube and play back various contents.

 



When you select the Entertainment > YouTube, you should see a screen like the left figure.


 
To play back a YouTube content, select a content with the  and  buttons and press the  button. To play back the content with full screen, press the  button again.

You can sort the contents with the option buttons as follows:

-  button by most featured
-  button by view count
-  button from most discussed to least discussed
-  button by top favourites
-  button related contents


By pressing the  button, you can sort the contents by the updated date, country and quality.

You can also search contents by a specific keyword. To search contents by a keyword, press the  button; then the on-screen keyboard appears. See § 6.3 for how to use the on-screen keyboard.

To see detailed information about the current one, press the  button. To hide the information box, press the  button.

8.6 Sharing image files by Flickr

Flickr is an image hosting website and on-line community platform. You can search a image file from the network server and view the file using the Flickr.

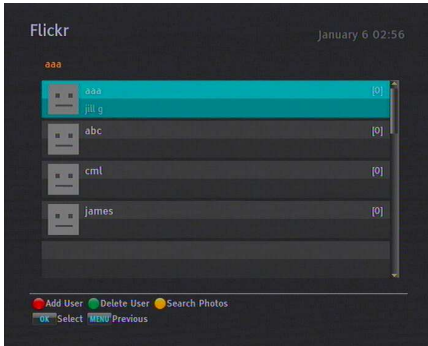

To use this function, select the Entertainment > Flickr.

You can see image files which belong to a specific user by adding a user. To add a user, perform the following steps:

1. Press the **(F1)** button, then the on-screen keyboard appears.
2. Enter a desired user name. For how to use the keyboard, refer to § 6.3.
3. After adding a user, select the user with the **(⏪)** and **(⏩)** buttons and press the **(OK)** button.

To delete a user, put the highlight bar on a desired user and press the **(F2)** button; then you get asked for confirmation. If you select YES, it will be deleted.


You can also search image files by a specific keyword. To do that, perform the following steps:

1. Press the **(F3)** button to go to the keyword search mode.
2. Press the **(F1)** button, then the on-screen keyboard appears.
3. Write down a keyword as you desire. For how to use the keyboard, refer to § 6.3.
4. Select the **Save** key on the on-screen keyboard to start searching image files.

To save a image file to the photo album, press the **(Option)** button. For the photo album see § 8.3.

8.7 Weather

You can view the weather of your city or other cities.

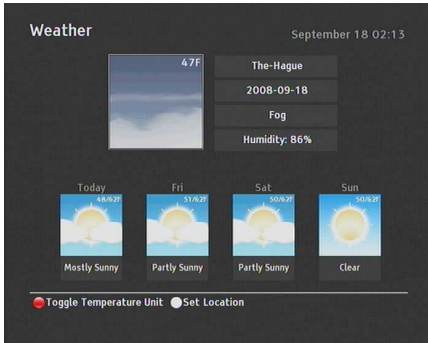

To view the weather, select the **Entertainment > Weather**; then you should see a screen like the left figure.

To change a city, perform the following steps:

1. Press the **(F1)** button to see additional options.
2. Set the **Country** and **City** options as you desire with the navigation buttons.
3. Press the **(EXIT)** button.


Pressing the **(Option)** button toggles between the Centigrade and Fahrenheit.

8.8 Network Game

You can play network game on the digital receiver. You can play the game by yourself or with others via the network.

8.8.1 To use the wireless keyboard

You can use a wireless keyboard to play the game as well as the remote control.

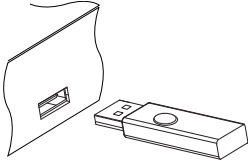

To use the wireless keyboard, plug the wireless module into the USB port on the digital receiver.

NOTE

Use only the provided wireless keyboard. If you use other wireless keyboard besides the provided one, the digital receiver may not work properly.


8.8.2 Battle Tank Single Mode

To play the battle tank single mode, select the Entertainment > Game > Battle Tank (Single); then perform the following steps:

1. Select a game mode.
2. Select a character.
3. Buy items as you desire.
4. Select a map. If you play the game by yourself, you do not need to select a map.
5. Start playing.

If you want to out of the game while palying, press the **EXIT** button on the remote control or the **Esc** key on the keyboard.

Selecting a game mode

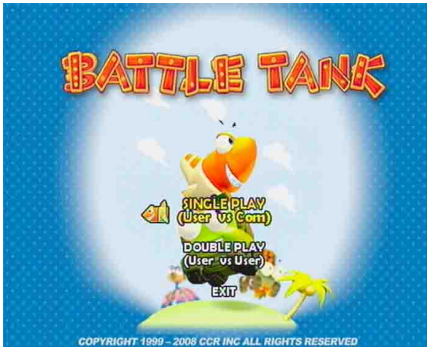



When you select the Entertainment > Game > Battle Tank(Single), you should see a screen like the left figure.

You can select a game mode as you desire. If you want to out of the game, select the EXIT option.

There are two modes as below:

Single play playing by yourself.

Double play playing with another user.

If you are using the remote control, select a mode with the  and  buttons and press the **[OK]** button.

 
If you are using a keyboard, select a mode with the up and down arrow keys and press the space bar.

Selecting a character












 
After selecting a game mode, you should see a screen like the left figure.

Select a character referring to Table 8.1.

If you select the , a character will be chosen randomly.

When you play the game first time, you can select only two characters. To get a new character, you have to play the single mode and clear all stages (13 satges).

Table 8.1: Buttons for selection

Action	Remote Control		Keyboard	
	1 Player	2 Player	1 Player	2 Player
Left			Left arrow	A
Right			Right arrow	D
Up			Up arrow	W
Down			Down arrow	S
Select			Space bar	Enter

You can see the selected character’s information of the 1 Player on the left bottom of the screen. Also you can see the selected character’s information of the COM or 2 Player on the right bottom of the screen.

NOTE

You have to select a character in 30 seconds; otherwise, the character will be selected automatically.

Buying items



After selecting a character, you should see a screen like the left figure. Buy a item referring to Table 8.1.

When you finish selecting items, select the **READY** on the screen as follows:

- **1 Player with the remote control** : Select the READY using the (MENU) button and press the (OK) button.
- **2 Player with the remote control** : Select the READY using the (F1) button and press the (F2) button.
- **1 Player with the keyboard** : Select the READY using the Tap key and press the space bar.
- **2 Player with the keyboard** : Select the READY using the Q key and press the Enter key.

Selecting a map



After buying items, you should see a screen like the left figure.

If you are using the remote control, select a map with the (D) and (C) buttons.

If you are using a keyboard, select a map with the left and right arrow keys.

After selecting a map, select the START on the screen.

 















If you are using the remote control, select the START using the (MENU) button and press the (OK) button.

If you are using the keyboard, select the START using the Tap key and press the space bar.

   NOTE

If you play the game by yourself, you do not need to select a map.

  Table 8.2: Buttons for playing

Action	Remote Control	Keyboard
Changing weapon	 	F3 F4
Changing angle	 	up and down arrows
Moving character	 	left and right arrows
Using items	   	F9 F10 F11 F12
Skipping turn		F5
Changing view of map	   	W A S D
Firing a shot		Space bar

8.8.3 Battle Tank Network Mode

To play the Battle Tank Network Mode, select the Entertainment > Game > Battle Tank (Network); then perform the following steps:

1. Select a game server.
2. Log on to the game server.
3. Joining a game.
4. Selecting a character, map and items for playing.
5. Start playing.

NOTE

Refer to the BATTLE TANK user guide for how to play the Battle Tank Network Mode. You can download the guide on our website. (<http://www.i-topfield.com>)

Chapter 9

Accessing to The Digital Receiver via The Internet

NOTE

The following section describes complex functions that should only be used by owners with advanced computer knowledge.

SRP - 2100 provides a web service and FTP service. You can make scheduled recordings or download recording files to your computer via these services. Here you need a router, which will connect the digital receiver to your computer or to the Internet. To use the network features of the digital receiver, you should take the following steps:

1. Configuring your router for the digital receiver.
2. Configuring the Local Area Network (LAN) settings on the digital receiver.
3. Accessing the home page of the digital receiver. Refer to § 9.3 for detailed description about things you can do by way of the web service of the digital receiver.

4. Accessing the FTP Server of the digital receiver.

NOTE

The web server and FTP server of the digital receiver do not work in standby mode. So it must be powered up at all times if you wish to use the web service at any time.

9.1 Configuring the router


In this section, the setup program of *WRT54G*, which is a router manufactured by *Linksys*, will be referred to as an example of how to configure the router for network access.

NOTE

For detailed description about how to set up the router, refer to the manual of your router.

9.1.1 To access within the local area network

Once your router is powered up, a local area network gets created whether or not it is connected to the Internet.

Local IP Address :	<input type="text" value="192"/> . <input type="text" value="168"/> . <input type="text" value="1"/> . <input type="text" value="1"/>
Subnet Mask :	<input type="text" value="255"/> . <input type="text" value="255"/> . <input type="text" value="255"/> . <input type="text" value="0"/> 
DHCP Server :	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Starting IP Address :	<input type="text" value="192.168.1.100"/>
Maximum Number of DHCP Users :	<input type="text" value="50"/>
Client Lease Time :	<input type="text" value="0"/> minutes (0 means one day)
WINS :	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/>

You can let the router automatically assign a dynamic IP address to the computers or devices connected to the network by enabling the DHCP server of the router. In this case, you can access the digital receiver with the IP address which is assigned to the digital receiver by the router.

If the digital receiver reboots, a new dynamic IP address will be assigned to it. You had better assign a static IP address to the digital receiver to avoid this inconvenience. For how to assign a static IP address, refer to the manual of your router. For how to specify a static IP address on the digital receiver, see § 9.2.

9.1.2 To access over the Internet

When you are away from home, you can access the digital receiver inside your home if your router is configured to route access to the digital receiver by means of port forwarding. Via this feature, your router will lead you to the digital receiver when you access your router with its IP address.

Port Range					
Application	Start	End	Protocol	IP Address	Enable
PVRHTTP	80	to 80	Both	192.168.1.161	<input checked="" type="checkbox"/>
PVRFTP	20	to 21	Both	192.168.1.161	<input checked="" type="checkbox"/>
	0	to 0	Both	192.168.1.0	<input type="checkbox"/>
	0	to 0	Both	192.168.1.0	<input type="checkbox"/>

Your router may be assigned to a dynamic IP address by an Internet service provider. So if the router has rebooted, you cannot access it unless someone in your home can inform you of the changed IP address. However, many routers support Dynamic Domain Name System (DDNS) service, which can settle this problem. The following image is an example of one such DDNS service provider.

If you use a DDNS service, you can access your router with a domain name. The instructions on how to use the DDNS service are as follows:

1. Make an account on a web site providing DDNS service, which should be supported by your router.
2. Configure your router with the account so that it can communicate with the web site.

DDNS Service :

User Name :

Password :

Host Name :


Internet IP Address : 221.132.76.3

Status : DDNS is updated successfully

Whenever a new dynamic IP address is assigned to the router, it will inform the DDNS service provider of the new IP address. This makes it possible that you access the router with a domain name at any time.

9.2 Configuring the network settings on the digital receiver

You should configure the LAN settings to enable the web service and FTP service.

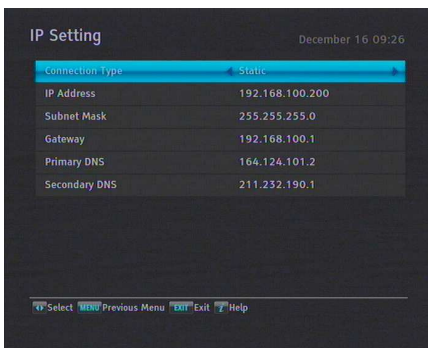

Select the Installation > Network Setting > IP Setting menu.

You may get the digital receiver to be assigned a dynamic IP address. If so, set the Connection Type option to DHCP.

You can view the dynamic IP address assigned to the digital receiver by your router at the **IP Setting** menu.

Sometimes when the digital receiver is restarted, the dynamic IP address will be changed and you will have to check it at the **IP Setting** menu to access the digital receiver. To avoid this cumbersome thing, you had better assign a static IP address rather than dynamic one.

To assign a static IP address, set the **Connection Type** option to **Static**, then the **IP Address**, **Subnet Mask**, **Gateway**, **Primary DNS** and **Secondary DNS** options become enabled. You have to set these options to match with the configuration of your router.

9.3 Accessing the web server

To Access to the web server, set the **Installation > Network Setting > Web Server** option to **Enable**.

Select the **Installation > Network Setting > User Info** menu. At this time, you have to enter **Personal Identification Number (PIN)**. Then, set the **User ID** and **Password** options as you desire. And select **OK** to save the settings. When you access to the web server, you will be asked for the account that was made with these options.


In way of the web server of the digital receiver, you can do the following:

- Download recording files.
- Create new recording timers.
- View information about the programme currently being recorded.
- View the system information of the digital receiver.


NOTE

It is recommended using the *Internet Explorer* web browser in order to fully enjoy the features. If you use a different web browser such as *Netscape Navigator*, some problems may occur.

To access the digital receiver's home page through your web browser, enter its IP address, or domain name if you use a DDNS service. For the DDNS service, refer to the user manual of your router.

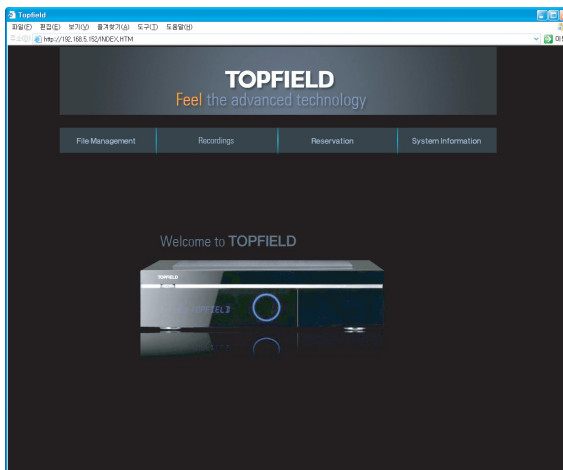

You cannot only download but also upload recording files or MP3 files in the File Management page. However, if you wish to download or upload a file of which size is 2 gigabyte or more, it is recommended using the FTP server rather than the web server.

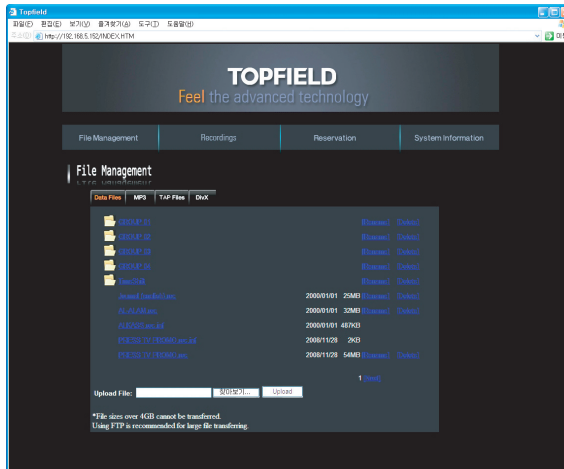

NOTE

The maximum number of user connections is one. This means that you cannot access the web server while someone else is occupying it.

9.4 Accessing the FTP server


To Access to the FTP server, set the Installation > Network Setting > FTP Server option to Enable.

Select the Installation > Network Setting > User Info menu. At this time, you have to enter Personal Identification Number (PIN). Then, set the User ID and Password options as you desire. And select OK to save the settings. When you access to the FTP server, you will be asked for the account that was made with these options.

NOTE


You can access the FTP server with an anonymous account. However, with an anonymous account you can only download files. You cannot upload files.

You need an FTP client program to access the FTP server of the digital receiver.

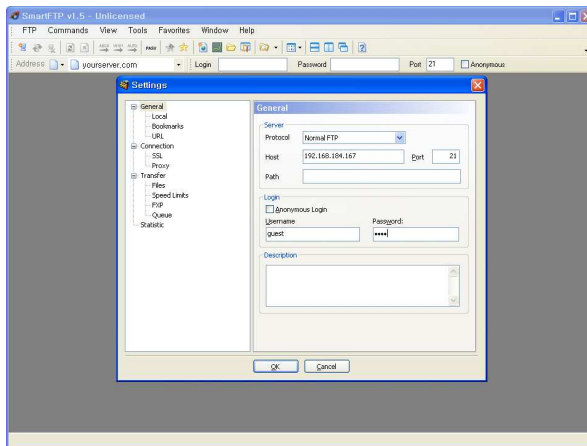

You can log into the FTP server with the user name and password specified in the Installation > Network Setting > User Info menu.

102 Accessing to The Digital Receiver via The Internet

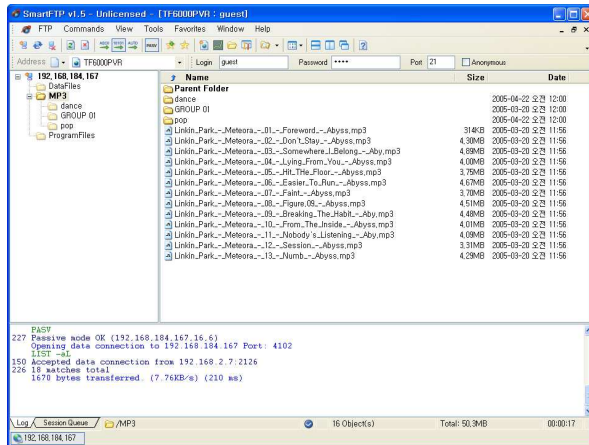

NOTE


The maximum number of user connections is one. This means that you cannot access the FTP server while someone else is occupying it.

Chapter 10

Firmware Update

The digital receiver has a stable and convenient firmware to use. However, once in a while a new firmware may be released to improve performance. You can get the latest firmware and a firmware update tool, which runs on most versions of Windows, from the Topfield web site, <http://www.i-topfield.com>.

10.1 Checking the firmware information

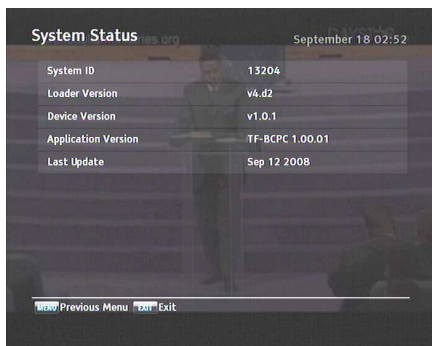

You have to check the firmware information of your digital receiver before downloading a new firmware. Select the Information > System Status menu. You should see a screen like the left figure.

Remember the number of the System ID item, and download the latest firmware with the same system identification.


NOTE

It is only allowed to update with the firmware of which system identification is identical to that of yours. Otherwise you will fail to update a firmware.

Please check for your relevant firmware under your model number on the web site.

10.2 From a USB memory

If you have a USB memory stick, you can update the firmware from it by performing the following steps:

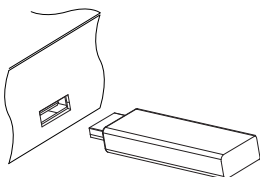

1. Download a new firmware from the Topfield web site.
2. Copy the firmware file to your USB memory stick.
3. Insert the USB memory stick into the USB port of the digital receiver.
4. Select the Installation > Firmware Upgrade > USB Firmware Upgrade menu, then the files in the USB memory are listed.
5. Place the highlight bar on the right firmware file and press the **OK** button, then a countdown will be displayed on the front display of the digital receiver.
6. When the 'END' message appears, restart the digital receiver.


10.3 From the firmware server via the network

You can update the firmware from the firmware server which is run by Topfield via the network. Make sure that the digital

receiver is connected to your router before configuring the network settings on the digital receiver.

NOTE

For detailed description about how to set up the router, refer to the manual of your router.

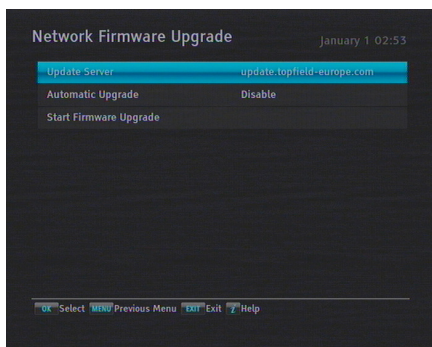

Select the Installation > Firmware Upgrade > Network Firmware Upgrade menu.

You should see a screen like the left figure.


To enable the digital receiver to update the firmware automatically when a new firmware is available, set the Automatic Upgrade option to Enable.

Otherwise if you want to do that by yourself, select the Start firmware upgrade option; then you get asked for confirmation. If you select Yes, it checks up whether a new firmware is available, and if any, it will start firmware update.

To change the update server name, press the **[OK]** button at the Update Server option; then, the on-screen keyboard appears. See § 6.3 for how to use the on-screen keyboard.

You can get the server name from the web site, <http://www.i-topfield.com>.

10.4 Over the air

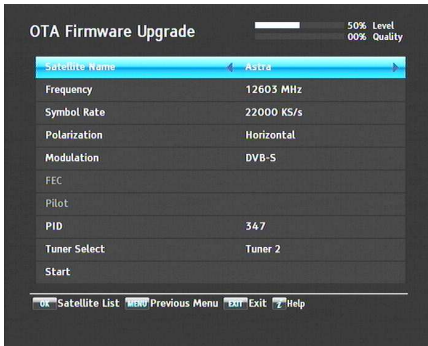

You can get a new firmware over the air. Select the Installation > Firmware Upgrade > OTA Firmwrae Upgrade menu.

You should see a screen like the left figure. Selecting the Start option starts firmware update.

Satellite	Astra (19.2°E)
Frequency	12603 MHz
Symbol Rate	22000 KS/s
Polarisation	Horizontal
PID	347

On the left table is presented the transponder information appointed by the manufacturer, Topfield, for firmware update.

This transponder information can be changed. You can get the information from the web site, <http://www.i-topfield.com>.

Appendix A

Universal Remote Control

The universal remote control allows you to operate the most important functions such as volume control on your television, audio system, or DVD player. To be able to control the device, you must adapt the remote control to the device first.

Take the following steps:

1. Turn on the device you want to operate.
2. Point the remote control at the remote sensor on the device.
3. Hold down the **OK** and device button simultaneously for two seconds until LED lamp flashes on. For example, if you want to operate your television with the remote control, press the **OK** and **TV** buttons simultaneously.
4. Find the manufacturer of the device from the codes list.
5. Enter the three-digits code you have found for your device and press the **OK** button.
6. If the setting is finished correctly, LED lamp blinks twice and the device will be turned off. Otherwise, repeat from the step 2.

If you cannot find a code for your device, do as follows:

1. Turn on the device you want to operate.
2. Point the remote control at the remote sensor on the device.
3. Hold down the **OK** and device button simultaneously for two seconds until LED lamp flashes on. For example, if you want to operate your television with the remote control, press the **OK** and **TV** buttons simultaneously.
4. Press the **CHANNEL+** or **CHANNEL-** button until the device turns off.

If you want to find out the number which you set for your device, do as follows:

1. Hold down the **OK** and device button simultaneously for two seconds. For example, if you want to know the number which you set for your television, press the **OK** and **TV** buttons simultaneously.
2. Press the **i** button. Then LED lamp will show the number with blinks. For example, if the number is 3, LED lamp will blink three times. In case of 0, LED lamp will blink ten times.

You can reset the settings. To do that, do as follows:

1. Hold down the **TV** and **0** buttons simultaneously for more than five seconds.
2. Each device button blinks three times in the following order: **TV** → **STB** → **DVD** → **AUX**
3. After that, all settings will be reset to the manufacturer's factory settings.

NOTE

If your device code is not listed on the following pages, you will not be able to use this remote as a universal remote for your specific device.

A.1 TV codes list

A

ACCENT	049, 063	AMPLIVISION	113, 379, 421, 425
ACEC	112	AMSTRAD	004, 011, 049, 063, 076, 123, 131, 172, 195, 225, 426
ACURA	195	ANAM	049, 063, 195
ADMIRAL	065, 076, 163, 171, 190, 307, 324, 369	ANGLO	076, 195
ADYSON	379	ANITECH	049, 063, 076, 195, 407
AGASHI	076, 379	ANSONIC	045, 049, 063, 107, 112, 195, 210, 242, 391, 413, 421
AGEF	324	APOLLO	165
AIKO	049, 063, 076, 102, 141, 172, 195, 225, 379	ARC EN CIEL	029, 034, 074, 182, 186, 415, 424
AIM	049, 063	ARCAM	029, 379, 424
AIWA	376, 377	ARDEM	392
AKAI	019, 049, 050, 055, 063, 076, 102, 107, 123, 133, 139, 141, 150, 172, 174, 182, 195, 209, 225, 326, 333, 379, 428, 432, 433, 437	ARISTONA	049, 050, 063, 065, 079, 112, 158, 160, 188
AKIBA	006, 049, 063, 123, 380	A.R.SYSTEM	049, 063
AKITO	049, 063, 106	ARTHUR MARTIN	075, 107, 127, 133, 136, 139, 148, 153, 307, 425
AKURA	006, 049, 076, 096, 123, 195, 419, 426	ASA	003, 020, 065, 078, 080, 091, 117, 146, 171, 197, 235, 307, 319, 324, 341, 375, 406, 408
ALARON	042, 334	ASBERG	049, 063, 407
ALBA	018, 044, 049, 050, 107, 123, 134, 163, 179, 184, 195, 225, 228, 232, 239, 379, 413, 421, 431	ASORA	195
ALBIRAL	121, 326, 372	ASTRA	195
ALCYON	407	ASUKA	006, 050, 076, 123, 379
ALLORGAN	050, 094, 236, 334	ATLANTIC	049, 050, 063, 113, 236, 242, 379
ALLSTAR	049, 063	ATORI	195
		AUCHAN	107, 425

AUDIOSONIC	031, 049, 063, 074, 076, 195, 213, 379, 392, 421
AUDIOTON	050, 076, 379, 392, 421
AUSIND	075, 090, 407
AUTOVOX	050, 071, 078, 079, 080, 083, 090, 147, 156, 236, 254, 305, 319, 323, 324, 379, 407, 413, 416
AWA	018, 049, 063, 131, 195, 206, 320, 379, 426, 433
AYOMI	411
B	
BAIRD	074, 102, 182, 209, 321, 329, 379, 409
BANG & OLUFSEN	324
BARCO	107, 355, 371, 372, 422
BASIC LINE	006, 031, 049, 107, 123, 159, 195, 207, 226
BASTIDE	379
BAUR	012, 049, 053, 063, 107, 150, 172, 244, 245, 246, 247, 301, 357, 414, 416
BAZIN	379
BEKO	063, 184, 240, 241, 392, 421, 433
BEON	049, 063, 163
BEST	213, 421
BESTAR	049, 063, 421
BINATONE	379
BLACK STAR	413

BLACKTRON	006
BLACKWAY	006
BLAUPUNKT	019, 053, 057, 060, 113, 118, 244, 245, 246, 247, 248, 249, 308
BLUE SKY	006, 049, 063, 123, 195, 232
BLUE STAR	006
BONDSTEC	413
BOOTS	050, 106, 379
BPL	006, 049, 063
BRANDT	074, 182, 218, 415, 424, 436
BRANDT ELECTRONIQUE	029, 034, 074, 182, 186
BRINKMANN	049, 063, 163
BRION VEGA	049, 063, 065, 083, 167, 172, 173, 181, 196, 324, 356
BRITANNIA	379
BROTHER	076
BRUNS	056, 065, 324
BSR	094, 107, 110, 139, 168, 314
BTC	123
BUSH	006, 018, 049, 076, 094, 106, 107, 123, 134, 139, 142, 143, 172, 179, 195, 209, 223, 225, 226, 232, 239, 307, 379, 416
BUSH(UK)	107, 147, 168
C	
CAPSONIC	076
CARAD	049, 063
CARENA	049, 063, 380
CARREFOUR	018, 406
CARVER	177

112 Universal Remote Control

CASCADE	049, 063, 064, 195	CROWN	049, 063, 154, 163, 170, 195, 209, 232, 372, 407, 419, 421, 431
CASIO	049, 063	CS ELECTRONICS	031, 123, 379, 413
CATHAY	049, 063	CTC	413
CCE	049, 063, 379	CTC CLATRONIC	045
CENTURION	049, 063	CURTIS MATHES	126, 190, 212
CENTURY	044, 054, 065, 163, 189, 324, 411, 413	CYBERTRON	123
CGE	002, 044, 054, 090, 093, 094, 096, 107, 139, 142, 163, 168, 189, 369, 407, 413, 421	D	
CIHAN	111	DAENYK	042
CIMLINE	031, 123, 134, 195	DAEWOO	063, 123, 140, 145, 161, 193, 195, 379
CITY	195	DAINICHI	123, 379
CLARIVOX	056, 121, 125, 163, 406	DANSAI	063, 076, 141, 195, 379
CLATONIC	076, 123	DANSETTE	426
CLATRONIC	031, 045, 049, 063, 076, 113, 123, 195, 225, 379, 407, 413, 421, 431	DANTAX	392, 421
CMS HIGHTEC	379	DATSURA	209
COMTEL	111, 125	DAWA	049, 063
CONCORDE	195	DAYTRON	049, 063, 195, 226
CONDOR	006, 045, 049, 050, 063, 113, 163, 195, 210, 379, 413, 421	DE GRAAF	023, 107, 122, 139, 209, 307
CONTEC	018, 131, 195, 206, 302, 320, 379	DECCA	049, 063, 102, 106, 111, 120, 200, 331, 379
CONTINENTAL EDISON	029, 034, 074, 182, 186, 232, 415, 424	DECCA(UK)	046, 050, 102, 106, 131
COSMEL	195, 213	DEITRON	049, 063
CROSELY	044	DENKO	076
CROSLEY	054, 065, 090, 093, 094, 104, 107, 139, 324, 407, 413	DENON	126, 212
		DER	321
		DERWENT	105
		DESMET	049, 063, 113
		DIAMANT	049, 063
		DIGILINE	049, 063
		DIXI	063, 195, 379, 413
		DOMLAND	423

DORIC	104, 105
DREAN	049, 063
DTS	195
DUAL	049, 050, 063, 095, 107, 139, 156, 168, 182, 242, 243, 379, 414, 416, 423, 424
DUAL-TEC	195, 168, 050, 040
DUMONT	045, 065, 080, 102, 139, 146, 319, 324, 339, 341, 375, 379, 406, 408
DUMONT-FINLUX	020, 045, 061, 075, 078, 091, 104, 117, 147
DUX	049, 063, 112
DYNATRON	049, 063


E

ELBE	049, 063, 107, 121, 123, 172, 194, 210, 242, 337, 368, 369, 391, 411, 421, 435
ELBIT	111
ELCIT	045, 046, 047, 062, 065, 104, 107, 150, 168, 324, 413
ELECTA	006, 076
ELECTRO TECH	195
ELEKTA	006, 076
ELEKTRONSKA	318
ELG	049, 063
ELIN	003, 020, 049, 063, 107, 139, 172, 195, 379, 408, 416
ELITE	031, 049, 063, 123
ELMAN	045, 168
ELTA	076, 195, 379

EMERSON	004, 006, 042, 044, 049, 063, 065, 113, 225, 324, 327, 406, 413
EMPEROR	006
ERRES	063, 112
ESC	049, 063
ETRON	049, 063, 107, 139, 195
EURO-FEEL	076
EUROMANN	049, 063, 076, 379, 421
EUROPA	049, 063
EUROPHON	044, 045, 046, 049, 050, 063, 068, 107, 120, 168, 318, 336, 379, 413
EXPERT	107, 236, 242, 425
EXQUISIT	049, 063, 413

F

FAMILY LIFE	049, 063
FENNER	063, 195
FERGUSON	001, 032, 050, 073, 074, 076, 080, 082, 102, 103, 121, 158, 182, 204, 218, 244, 245, 246, 251, 306, 319, 321, 322, 328, 329, 344, 409, 411, 436
FIDELITY	049, 050, 063, 076, 107, 158, 225, 307, 364, 379
FIDELITY(UK)	133
FILSAI	050, 379
FINHER	359
FINLANDIA	033, 122, 139, 172, 197, 209, 223, 307, 375, 419

FINLUX	003, 020, 042, 045, 049, 061, 063, 075, 078, 080, 090, 091, 102, 104, 107, 117, 139, 146, 147, 163, 197, 210, 235, 319, 324, 339, 341, 375, 379, 406, 407, 408, 428, 429, 437	GALAXIS	045, 049, 063, 163, 421
FIRST LINE	045, 049, 063, 094, 102, 107, 134, 139, 191, 195, 209, 210, 379, 411, 413, 416	GBC	031, 104, 107, 139, 143, 168, 195
FISHER	018, 041, 050, 056, 065, 069, 102, 104, 107, 117, 139, 143, 156, 172, 189, 206, 209, 320, 324, 379, 408, 414, 416, 421	GE	006, 074, 182, 218
FLINT	031, 049, 063, 102, 123, 379, 380	GEANT CASINO	107, 425
FNR	045	GEC	049, 063, 102, 104, 107, 120, 171, 172, 192, 307, 379, 416
FORGESTONE	158	GEC(UK)	046, 050, 102, 107, 150, 162, 192
FORMENTI	090, 107, 113, 139, 307, 324, 379, 407	GELOSO	031, 047, 062, 104, 107, 139, 168, 171, 195, 307, 413
FORMENTI-PHOENIX	050, 075, 104, 113, 148, 307	GENERAL	064, 074, 182
FORTRESS	190, 324	GENERAL TECHNIC	195
FRABA	049, 063, 421	GENEXXA	049, 063, 123, 307, 426
FRIAC	045, 049, 063, 195	GOLDHAND	379
FRONTECH	076, 139, 195, 307, 379, 413, 416	GOLDLINE	213
FUJITSU	042, 045, 102, 107, 195, 236, 327, 379	GOODMANS	018, 042, 063, 076, 102, 134, 139, 141, 143, 155, 182, 195, 218, 225, 232, 379, 428
FUJITSU GENERAL	195, 379	GORENJE	124, 189, 421
FUNAI	042, 076, 094, 314, 327	GPM	123
		GRADIENTE	049, 063, 170, 177
GALAXI	045, 049, 063	GRAETZ	049, 063, 090, 104, 136, 139, 153, 159, 162, 171, 172, 198, 225, 307
		GRANADA	013, 018, 033, 041, 063, 102, 104, 105, 112, 120, 148, 164, 165, 171, 209, 218, 237, 238, 240, 241, 252, 307, 325, 363, 379, 407, 418, 419
		GRANADA(UK)	046, 050, 090, 107, 139, 143, 162, 307

GRANDIN 006, 031, 049, 063,
107, 113, 123, 195,
379, 380, 425, 431,
435

GRONIC 045

GRUNDIG 005, 019, 049, 053,
063, 080, 090, 101,
115, 118, 166, 232,
244, 245, 246, 247,
248, 249, 308, 340,
341, 406, 407

H

HALIFAX 076, 379

HAMPTON 379

HANIMEX 094

HANSEATIC 006, 018, 049, 050,
063, 094, 104, 107,
113, 143, 172, 195,
324, 379, 391, 416,
421, 423

HANTAREX 045, 046, 049, 063,
195

HANTOR 049, 063

HARLEY DAVIDSON 042

HARWOOD 049, 063, 195, 426

HAUPPAUGE 049, 063

HCM 006, 031, 049, 063,
076, 123, 163, 195,
379, 426

HEMA 195, 379

HEMMERMANN 150, 416

HIFIVOX 029, 034, 074, 182,
186, 304, 424

HIGASHI 050

HIGHLINE 049, 063, 076

HIKONA 123

HINARI 004, 018, 042, 049,
066, 094, 107, 119,
123, 133, 134, 139,
143, 179, 195, 209,
232, 307, 327

HISAWA 006, 031, 123, 380,
425

HIT 342

HITACHI 007, 009, 018, 020,
023, 033, 049, 050,
063, 074, 086, 102,
104, 107, 110, 126,
127, 139, 143, 150,
162, 168, 171, 176,
182, 185, 186, 192,
212, 218, 231, 304,
307, 309, 315, 333,
334, 344, 361, 379,
416, 418

HITASHI FUJIAN 013, 164, 252

HITSU 123, 195, 379

HORNYPHON 049, 063, 112

HOSHAI 123, 379

HUANYU 379

HYGASHI 379

HYPER 050, 168, 195, 254,
361, 379, 413

HYPERSONIC 172

HYPSON 006, 049, 063, 076,
379, 380, 411, 425

I

IBERRIA 049, 063

ICE 049, 063, 076, 123,
195, 225, 379

ICES 123, 379

IMPERIAL 002, 044, 049, 054,
063, 090, 093, 094,
107, 142, 163, 168,
189, 301, 307, 369,
407, 413, 416, 421

INDIANA 049, 063

INGELEN	090, 104, 136, 139, 153, 159, 162, 171, 198, 232, 435	350, 375, 416, 428, 433, 435, 437	
INGERSOL	195	ITV	049, 063, 076, 413
INNO HIT	044, 046, 049, 050, 063, 066, 102, 123, 155, 195, 217, 379, 407, 413	J	
INNOVATION	049, 063	JEAN	018
INTERACTIVE	210	JEC	141
INTERBUY	076, 195, 413	JET POINT	365
INTERFUNK	049, 063, 065, 067, 074, 090, 104, 107, 112, 139, 150, 153, 159, 172, 182, 301, 302, 324, 363, 421	JVC	018, 103, 123, 129, 143, 158, 170, 174, 182, 225, 364, 409, 433
INTERVISION	006, 045, 049, 055, 063, 076, 107, 123, 225, 232, 378, 379, 380, 381, 382, 384, 385, 386, 387, 388, 389, 413, 421, 423	K	
IRRADIO	031, 049, 063, 066, 075, 090, 123, 155, 195, 254, 407, 413	KAISUI	006, 031, 049, 050, 063, 123, 195, 207, 379, 380
ISUKAI	006, 049, 063, 123	KAMOSONIC	050
ITC	379	KAMP	379
ITS	006, 031, 049, 063, 076, 123, 225, 379	KAPSCH	107, 172, 236, 242, 408
ITT	042, 090, 107, 117, 134, 139, 150, 157, 159, 162, 165, 171, 172, 193, 197, 198, 209, 301, 307, 343, 350, 375, 416, 428	KARCHER	003, 006, 020, 031, 045, 049, 050, 063, 068, 076, 107, 195, 207, 217, 421, 435
ITT-NOKIA	042, 090, 097, 104, 107, 117, 134, 136, 139, 150, 153, 159, 162, 165, 171, 172, 185, 193, 197, 198, 209, 301, 307, 343,	KATHREIN	124
		KAWASHO	379
		KB ARISTOCRAT	107
		KENDO	044, 045, 049, 055, 063, 134, 172, 210, 413, 421, 435
		KENNEDY	071, 079, 104, 107, 139, 236, 305, 323, 369
		KINGSLEY	379
		KLARMAX	371, 372
		KNEISSEL	049, 063, 210, 242, 369, 391, 411, 421, 435
		KOLSTER	045, 049, 063, 416

KONKA 031, 049, 063, 123,
225, 232

KORPEL 049, 063

KORTING 027, 065, 094, 113,
324, 421

KOSMOS 049, 063

KOTRON 076, 426

KRAKING 411

KRIESLER 050, 063, 065, 079,
112, 158, 160, 188

KTV 050, 379

KYOSHU 076, 163

KYOTO 107

KYUSHU 426

L

LECSON 049, 063

LEMAIR 210

LENCO 049, 063, 107, 195,
408

LENOIR 050, 195

LESA 413

LEYCO 049, 063, 076, 094,
102, 431

LEYEO 076

LG(GOLDSTAR) 023, 049, 050, 055,
063, 107, 139, 152,
155, 168, 172, 195,
202, 203, 219, 254,
379, 413, 421

LIESENKOTTER 049, 063, 112

LIFETEC 049, 063, 076, 123,
195

LLOYD'S 195

LOEWE 049, 063, 089, 324,
391, 421

LOEWE OPTA 035, 046, 049, 052,
063, 065, 120, 144,
213, 324

LOGIC 331

LOGIK 032, 131, 158, 225,
364

LOGIX 195

LUMA 063, 107, 110, 133,
171, 172, 195, 210,
236, 242, 307

LUMATRON 049, 063, 076, 107,
172, 236, 242, 329,
379

LUX MAY 049, 063, 195

LUXOR 042, 050, 090, 107,
122, 127, 133, 139,
150, 155, 159, 165,
172, 185, 197, 209,
307, 312, 330, 416,
418, 428, 429

LYCO 076

M

M ELECTRONIC 003, 235, 375

MAAZ 371, 372

MADISON 049, 063

MAGNADYNE 045, 046, 047, 062,
065, 104, 107, 120,
139, 150, 168, 318,
324, 413

MAGNAFON 045, 046, 050, 068,
075, 090, 120, 235,
336, 379, 407

MAGNAVOX 018, 042, 049, 063

MANDOR 076

MANESTH 063, 076, 094, 113,
134, 141, 379

MANHATTAN 049, 063, 195


MARANTZ 063

MARELLI 324

MARK 063, 195, 379

118 Universal Remote Control

MASUDA	123, 195, 225		
MATSUI	001, 004, 018, 041, 049, 050, 063, 094, 100, 102, 106, 107, 131, 134, 141, 143, 150, 171, 179, 180, 195, 209, 218, 225, 229, 232, 244, 245, 246, 307, 314, 331, 379, 380, 416, 431		157, 164, 183, 190, 244, 245, 246, 252, 326, 330, 331
MAXIMAL	119, 139	MIVAR	043, 046, 050, 058, 072, 081, 090, 120, 155, 318, 337, 379, 391, 407, 421, 434
MAXWELL	371, 372	MONACO	195
McMICHAEL	192	MORGAN'S	049, 063
MEDIATOR	049, 063, 112	MOTION	407
MEDION	049, 063, 195	MOTOROLA	190
MEGAS	435	MTC	049, 063, 379, 416, 421
MEGATRON	126, 212	MTEC	106
MELECTRONIC	003, 049, 063, 074, 182, 195, 210, 375, 379, 408, 413, 416, 428, 429	MULTISTANDARD	045
MELVOX	425,	MULTITEC	049, 063, 195
MEMOREX	099, 195	MULTITECH	031, 045, 046, 049, 050, 063, 120, 189, 195, 379, 392, 413, 416, 421
MEMPHIS	102, 195, 213	MURPHY	102, 104, 105, 107, 117, 171, 254, 307, 379, 408
MERCURY	049, 063, 195	MURPHY(UK)	162
METZ	019, 049, 051, 053, 065, 067, 070, 092, 118, 244, 245, 246, 247, 324, 412	MUSIKLAND	123
MICROMAXX	049, 063, 195		
MINERVA	019, 053, 080, 090, 118, 232, 244, 245, 246, 247, 248, 249, 340, 341, 406, 407	N	
MINOKA	049, 063, 419, 426	NAD	172, 209
MISTRAL	158	NAIKO	049, 063
MITSUBISHI	013, 018, 019, 021, 049, 063, 065, 105, 124, 131, 132, 143,	NAKIMURA	049, 063
		NAONIS	036, 040, 071, 079, 110, 171
		NAT	085, 149, 151
		NATIONAL	033, 085, 104
		NEC	018, 049, 063, 113, 131, 143, 177, 195, 379, 380

NECKERMANN	002, 012, 049, 050, 063, 065, 107, 133, 139, 163, 180, 189, 210, 247, 250, 307, 312, 324, 357, 379, 413, 416, 421	NOVATRONIC	003, 020, 049, 063
NEDIATOR	063		
NEI	063, 125, 225	OCEANIC	086, 094, 104, 107, 108, 109, 116, 139, 159, 172, 209, 425
NESCO	042, 413	OCEANIC(F)	150
NETSAT	049, 063	ODEON	076
NETWORK	213	OKANO	049, 063, 076, 102, 421
NEUFUNK	049, 063, 195, 435	OMEGA	076
NEW WORLD	123	ONCEAS	050
NEWTECH	049, 050, 063, 182, 195, 379	ONWA	031, 123, 225, 432
NICAMAGIC	379	OPERA	049, 063
NIKKAI	018, 049, 063, 076, 102, 123, 139, 141, 195, 213, 379	OPTIMUS	099, 315
NIKKIA	066	OPTONICA	190
NOBLEX	049, 063, 076, 359, 360	ORBIT	049, 063
NOBLIKO	044, 045, 050, 075, 080, 090, 235, 379, 406, 407	ORION	004, 042, 045, 049, 051, 063, 076, 094, 113, 131, 134, 139, 150, 179, 191, 195, 199, 216, 314, 331, 366, 367, 426
NOGAMATIC	029, 034, 074, 182, 186, 424	ORLINE	049, 063, 123
NOKIA	090, 104, 107, 117, 134, 136, 139, 150, 153, 157, 159, 162, 165, 171, 172, 193, 197, 198, 209, 301, 307, 330, 343, 350, 416, 419, 428, 429, 433, 437	ORMENTI-PHOENIX	104
NORDMENDE	017, 029, 034, 038, 049, 063, 074, 083, 130, 150, 165, 174, 182, 186, 218, 244, 245, 246, 304, 307, 333, 334, 424	ORMOND	195
		OSAKA	066
		OSAKI	049, 063, 066, 076, 102, 106, 123, 379, 426
		OSIO	049, 063, 155
		OSO	123
		OSUME	018, 102, 123, 302
		OTTO VERSAND	012, 018, 049, 050, 053, 063, 074, 094, 104, 107, 113, 134, 139, 143, 172, 190, 244, 245, 246, 247, 250, 312, 357, 362, 379, 413, 414, 416

P

P.T ACTRON	111		221, 247, 250, 313, 324, 337, 342, 350, 363, 374, 427
PAEL	050, 075, 379	PHOENIX	049, 050, 063, 075, 102, 104, 107, 113, 148, 324, 379, 392, 421
PALLADIUM	012, 049, 063, 107, 163, 210, 247, 324, 357, 379, 413, 416, 421	PHONOLA	022, 050, 063, 065, 079, 112, 158, 160, 188, 250, 324, 379
PALSONIC	049, 055, 063, 076, 379, 426	PILOT	049, 063
PANAMA	049, 063, 076, 195, 379, 413	PIONEER	049, 063, 074, 172, 182, 209, 218, 227, 307, 421, 427
PANASONIC	049, 063, 099, 104, 107, 137, 139, 149, 151, 172, 397, 398, 400, 401, 405	PIONIER	392, 421
PANAVISION	049, 063, 210	PLANTRON	049, 063, 076, 195
PATHE CINEMA	107, 113, 121, 379, 391, 411, 416, 425	PLAYSONIC	379
PATHE CINEMA(F)	050, 168	POLICOM	074
PATHE MARCONI	029, 034, 074, 182, 186, 415, 424	POPPY	195
PAUSA	195	POWERPOINT	232
PAUZA	195	PRANDONI-PRINCE	044, 046, 075, 090, 120, 171, 172, 307, 407, 413
PERDIO	049, 063, 102, 107, 113	PRECISION	379
PERFEKT	049, 063	PREMIER	142
PERSHIN	425	PRIMA	076, 195, 307
PHILCO	002, 016, 044, 049, 054, 063, 065, 090, 093, 094, 104, 107, 126, 142, 163, 168, 189, 212, 324, 369, 407, 413, 421	PRINCE	044, 046, 075, 171
PHILHARMONIC	379	PRINZ	102, 185, 416
PHILIPS	015, 022, 049, 050, 063, 065, 079, 089, 111, 112, 157, 158, 160, 175, 182, 188, 192, 215, 217, 220,	PROFEX	107, 139, 195
		PROFI-TRONIC	045, 049, 063
		PROLINE	030, 049, 102, 112, 191, 366, 436
		PROSONIC	049, 063, 085, 149, 151, 195, 225, 379, 421, 431
		PROTECH	045, 063, 076, 139, 163, 195, 379, 413, 416
		PROVISION	049, 063

PYE 050, 063, 065, 079,
112, 157, 158, 160,
188, 250

PYMI 049, 063, 112, 195,
324

Q

QUADRA VISION 425

QUASAR 045, 046, 068, 075,
099, 155, 413

QUELLE 003, 018, 019, 020,
049, 050, 053, 063,
074, 075, 076, 078,
080, 090, 091, 094,
113, 115, 117, 118,
131, 139, 146, 147,
150, 153, 155, 172,
195, 206, 235, 244,
245, 246, 247, 254,
301, 319, 320, 340,
341, 379, 406, 408,
413, 416

QUESTA 018

R

RADIALVA 049, 063, 074, 107,
123

RADIOLA 050, 063, 065, 079,
112, 158, 160, 188,
250, 342

RADIOMARELLI 045, 046, 047, 062,
063, 065, 104, 105,
150, 168, 324, 413

RADIONETTE 003, 020, 117, 150

RADIO SHACK 049, 063

RADIOTONE 049, 063, 076, 163,
195, 421, 426, 431

RAMK 341

RANDT 029

RANK 147, 406

RBM 341

RBM(UK) 147

RCA 190, 218, 436

RECOR 049, 063

RECTILIGNE 049, 063

REDIFFUSION 018, 059, 105, 139,
171, 172, 307, 343

REDIFFUSION(UK) 150, 162

REDIFUSION 104, 105

REDSTAR 049, 063

REFLEX 049, 063

REVOX 049, 063, 421

REX 036, 040, 063, 071,
079, 095, 107, 110,
171, 210, 236, 242,
243, 305, 307, 323,
338, 413

RFT 076, 102, 390, 391,
392, 393, 394, 395,
421

R-LINE 049, 063

ROADSTAR 031, 049, 063, 076,
163, 195

ROBOTRON 056, 065, 324

RODEX 049, 063

ROTEL 302

ROWSONIC 050

ROYAL LUX 421, 426

RTF 056, 065

S

SABA 014, 017, 029, 034,
038, 046, 065, 074,
077, 107, 120, 133,
139, 172, 182, 186,
218, 304, 307, 324,
333, 334, 424, 436

SACCS 121

SAGEM 006, 380, 435

122 Universal Remote Control

SAISHO	004, 050, 076, 084, 107, 131, 132, 134, 179, 195, 233, 307, 330, 331, 379		243, 250, 307, 328, 342, 379, 413, 414, 416, 423
SALORA	033, 075, 107, 127, 133, 136, 139, 148, 150, 153, 171, 172, 185, 198, 209, 301, 307, 312, 416, 418, 419	SCOTT	042, 327
SAMBERS	045, 046, 068, 075, 090, 120, 155, 336, 407	SEARS	042
SAMSUNG	050, 063, 066, 076, 102, 155, 189, 195, 217, 359, 360, 365, 379, 421	SEG	018, 045, 049, 050, 056, 063, 076, 107, 172, 195, 232, 379, 413
SANDRA	379	SEI	004, 045, 049, 051, 063, 094, 107, 139, 236, 314, 324, 357, 416
SANELA	411	SEL SINUDYNE	250
SANSUI	049, 063, 225	SELECO	036, 040, 063, 071, 079, 095, 107, 110, 171, 172, 210, 236, 242, 243, 305, 307, 323, 338, 339, 369
SANTON	195	SENCORA	195
SANYO	003, 018, 020, 041, 049, 050, 056, 063, 065, 102, 107, 117, 131, 143, 189, 195, 198, 201, 206, 209, 302, 320, 325, 331, 351, 379, 391, 408, 421	SENTRA	123, 139, 141, 195
SAVE	049, 063	SERINO	380, 435
SBR	063, 112, 157, 158, 192, 313	SHARP	018, 094, 143, 170, 190, 206, 214, 302, 362, 364
SCHAUB LORENZ	090, 104, 136, 139, 153, 159, 162, 171, 198, 307, 416, 433	SHORAI	042, 094
SCHNEIDER	031, 040, 050, 063, 065, 069, 079, 095, 104, 107, 112, 114, 139, 148, 156, 158, 160, 168, 172, 182, 188, 195, 225, 242,	SIAM	049, 063
		SIAREM	045, 046, 065, 104, 107, 120, 139, 324
		SICATEL	121
		SIEMENS	003, 018, 019, 023, 049, 053, 063, 066, 113, 118, 206, 244, 245, 246, 247, 248, 249, 302, 307
		SIERA	050, 063, 065, 079, 112, 158, 160, 188
		SIERRA	049, 063, 112
		SIESTA	421
		SILVA	049, 063, 379

SILVER	018, 042, 049, 063, 076, 172	STERN	036, 040, 063, 071, 079, 095, 107, 110, 171, 236, 242, 243, 305, 307, 323, 338
SINGER	045, 047, 049, 063, 065, 104, 195, 324, 369, 413, 425	STRATO	049, 063, 076, 195
SINUDYNE	004, 031, 045, 051, 063, 065, 094, 104, 107, 134, 139, 150, 172, 210, 216, 236, 314, 324, 357, 366, 367, 416	SUNKAI	049, 063, 094, 123, 134, 179, 191, 232, 314, 367
SKANTIC	307, 418	SUNSTAR	049, 063, 195, 225, 431
SKY	049, 063	SUNWOOD	049, 063, 195
SOGERA	113	SUPERLA	379
SOLAVOX	066, 102, 107, 123, 139, 172, 307	SUPERTECH	049, 063, 123, 195, 379
SONITRON	209, 379, 421	SUPRA	195
SONNECLAIR	049, 063	SUSMU	218
SONOKO	006, 050, 063, 076, 195, 379	SUTRON	195
SONOLOR	012, 107, 139, 159, 172, 209, 357, 425	SWISSLINE	413
SONTEC	049, 063, 094, 421	SYDNEY	379
SONY	012, 018, 028, 045, 131, 143, 204, 208, 211, 331, 357, 358, 370	SYTONG	425
SOUND & VISION	031, 045, 123	T	
SOUND WAVE	049, 113, 163	TACTUS	106
SOUNDESIGN	042	TANDBERG	065, 074, 078, 172, 182, 210, 213, 304
SPECTRA	195	TANDY	050, 096, 102, 123, 190, 307, 379, 413
SSANGYONG	195	TASHIKO	018, 050, 107, 143, 177, 192, 201, 379, 419
STANDARD	049, 050, 063, 113, 123, 195, 379	TATUNG	049, 050, 063, 102, 106, 111, 120, 131, 200, 253, 331, 379
STARLIGHT	049, 063, 076, 107, 195	TEAC	049, 063, 076, 195, 380, 416, 426
STENWAY	006, 031, 123	TEC	040, 050, 064, 168, 195, 213, 218, 242, 243, 379, 413
		TECH LINE	049, 063, 195
		TECHICA	123
		TECHNEMA	113

124 Universal Remote Control

TECHNICS	099, 315	THOMSON	008, 010, 017, 024, 029, 034, 049, 063, 064, 074, 134, 147, 174, 182, 186, 218, 230, 234, 304, 309, 333, 334, 415, 424, 436
TEDELEX	379	THORN	049, 053, 063, 103, 106, 141, 158, 218, 222, 321, 329, 408, 409, 411, 419
TEIRON	195	THORN-FERGUSON	032, 073, 074, 076, 080, 082, 103, 121, 158, 306, 319, 321, 322, 328, 329, 357, 358, 364, 375
TEKNIKA	042, 327	THRON	117
TELEAVIA	029, 034, 074, 182, 186, 415, 424	TMK	143
TELECOR	049, 063, 107, 123, 242, 379, 423	TOKAI	049, 063, 102, 107, 195, 213, 379
TELEFUNKEN	032, 049, 063, 064, 074, 082, 182, 186, 187, 218, 392, 424, 436	TOKYO	141, 379
TELEFUSION	049, 063	TOMASHI	006, 031, 123
TELEGAZI	049, 063, 076, 107, 123, 242	TOSHIBA	001, 018, 045, 128, 141, 143, 147, 205, 341, 369, 379, 406
TELEMEISTER	049, 063, 113	TOWADA	045, 379, 416
TELESONIC	049, 063	TOYODA	195
TELESTAR	049, 063	TRAKTON	076
TELETECH	049, 063, 195, 213, 413	TRANS CONTINENS	044, 046, 049, 063, 075, 171, 307, 379
TELETON	018, 067, 107, 236, 242, 379, 416	TRANSONIC	049, 063, 380
TELEVIDEON	050, 075, 104, 107, 113, 148, 379	TRANSTEC	379
TELEVISIO	425	TRIDENT	379
TEMCO	094	TRISTAR	123, 364
TEMPEST	049, 063, 195	TRIUMPH	004, 046, 049, 063, 128, 147, 197, 235, 339, 375
TENNESSEE	049, 063		
TENSAI	003, 020, 050, 055, 063, 094, 113, 117, 123, 195, 225, 379, 408, 413		
TETUNG	046		
TEVION	049, 063, 195		
TEXET	050, 195, 379		

U

UHER	049, 063, 069, 080, 090, 113, 147, 148, 163, 236, 242, 307, 392, 407, 414, 421
ULTRAVOX	044, 045, 047, 049, 050, 063, 065, 104, 107, 133, 139, 324, 379, 413
UMA	305
UNIC LINE	049, 063, 165
UNITED	049, 063
UNIVERSUM	003, 004, 012, 018, 020, 049, 063, 074, 076, 094, 107, 131, 155, 163, 165, 172, 195, 202, 206, 210, 213, 235, 244, 245, 246, 320, 357, 375, 379, 406, 407, 408, 413, 416, 421, 428, 429, 437
UNIVOX	049, 063, 107, 121, 213, 324, 409, 411
UTAX	050
V	
VEGAVOX	163
VESTEL	049, 063, 107, 125, 364, 379
VEXA	063, 195
VICTOR	174
VIDEO SYSTEM	049, 063
VIDEOLIQUE	031, 123, 379
VIDEO SYSTEM	049, 063
VIDEOTECHNIC	113, 379
VIDEOTON	107, 418
VIDIKRON	045
VIDTECH	018

VIPER	213
VISIOLA	379
VISION	049, 063, 113
VISTAR	172, 236
VOLTEC	074
VORTEC	063
VOXSON	049, 063, 065, 090, 163, 171, 307, 324, 407

W

WALTHAM	049, 063, 163, 182, 307, 379, 418
WATSON	049, 063, 107, 113, 123, 195, 244, 245, 246, 423, 431
WATT RADIO	045, 050, 068, 104, 107, 121, 139, 150, 336, 379, 416
WEGA	018, 049, 063, 139, 143, 324
WEGA COLOR	065, 088
WEGAVOX	195
WELTBlick	063, 113
WESTINGHOUSE	063, 094
WESTON	168
WHARFEDALE	049, 063
WHITE	045
WHITE WESTINGHOUSE	049, 050, 063, 113, 213, 379
WINCO	426
WINDSTAR	006
WINTERNITZ	361

X

XRYPTON	049, 063
---------	----------

Y

126 Universal Remote Control

YAMISHI 006, 049, 063, 123,
379, 380

YOKAN 049, 063

YOKO 049, 050, 063, 076,
123, 195, 379, 413,
421

YORX 123

Z

ZANUSSI 036, 040, 063, 071,
079, 095, 110, 171,
236, 305, 307, 323,
338, 379

ZOPPAS 036, 040, 071, 079,
110, 171, 307

A.2 DVD codes list

3

3 DLAB 072

A

AIWA 075

ALBA 087

AMSTRAD 085

A-TREND 086

B

BLUE SKY 080

BUSH 078, 079, 082, 085

C

CINE ULTRA 082

CYBER HOME 086

D

DAEWOO 083

DENON 002, 019, 022, 034,
051

DENVER 082

DENZEL 077

DIGITOR 079

DIVIDO 083

DUAL 076, 077

E

ELTA 079

ENZER 077

G

GE 003, 004

GRUNDIG 072, 080

H

HARMAN KARDON 001, 066

HITACHI 077

J

JMB 080

JVC 006

K

KENWOOD 007, 034, 043, 050,
069

KISS 077

L

LAWSON 083

LECSON 081

LENCO 082

LG(GOLDSTAR) 005, 055, 064, 070

LIFETEC 076

LOGIX 083

M

MAGNAVOX 009, 033, 056

MANHATTAN 083

MARANTZ 033, 059, 072

MATSUI 076, 080

MEDION 076, 083

MICROMEDIA 009

MICROMEGA 072

MINOWA 083

mitsubishi 023, 036

MONYKA 077

N

NAD 010, 062
 NEUFUNK 077

O

ONKYO 009, 015, 048
 OPTIMUS 050
 ORION 080
 ORITRON 076

P

PANASONIC 024, 025, 030, 034,
 035, 044, 052
 PHILIPS 009, 033, 056, 072
 PHONOTREND 082
 PIONEER 010, 012, 020, 038,
 041, 046, 065, 071,
 074
 PROLINE 076
 PROSCAN 003, 004, 037
 PROVISION 082

R

RAITE 077
 RCA 003, 004, 018, 037
 REC 034, 078
 REVOY 082
 ROADSTAR 078, 079, 082

S

SANSUI 080
 SCAN 083
 SCHNEIDER 076
 SEG 077, 085
 SHARP 021, 028, 050

SHINCO 087
 SM ELECTRONIC 079
 SONY 015, 029, 043, 045,
 067
 STANDARD 076

T

TEAC 087
 TECHNICS 034
 TENSAI 076, 079
 TEVION 076
 THOMSON 003, 004, 073
 TOKAI 077
 TOKIWA 083
 TOSHIBA 009, 010, 033, 057,
 058
 TV PROJECT 008

U

UNIVERSUM 085

W

WALKVISION 087
 WESDER 082
 WHARFEDALE 081

Y

YAMAHA 016, 017, 030, 034,
 063
 YAMAKAWA 077, 084

Z

ZENITH 005, 009, 033, 055,
 064, 083

A.3 Audio system codes list

A

ADCOM	082, 092, 225, 161, 023, 148, 149
AIWA	170, 018, 104, 202, 203, 213, 211, 188
AKAI	189
ANTHEM	127, 128
ARCAM	141, 255
ATLANTIC_TECHNOLOGY	134
AUDIO_FILE	071

B

B&K	096, 097
BOSE	070, 170, 224, 147, 227, 199
BOSTON.ACOUSTICS	246

C

CARVER	006, 028, 061, 071, 201, 214, 226, 185, 022, 077, 050
CLARION	026

D

DELPHI	251
DENON	109, 215, 230, 234, 002, 121, 133

E

ELAN	057, 090
ESCIENT	229

F

FISHER	047, 214, 182
FLEXTRONICS	207

FOSGATE_AUDIONICS 231, 134

G

GOLDSTAR 008

H

HARMAN_KARDON 231, 233, 153, 154,
118, 119

HITACHI 020

I

INTEGRA 029

J

JVC 163, 191, 114, 034,
091

K

KENWOOD 026, 066, 145, 192,
182, 005, 037, 196,
252

KLH 123

KRELL 150, 072, 197, 222

L

LEXICON 120, 235, 236, 237,
159, 160

LINN 124, 206

LUXMAN 137, 139, 052, 165,
115, 004, 009

M

MAGNAVOX 086, 164, 152, 208

MARANTZ 006, 028, 031, 040,
063, 185, 186, 015,
056

MCINTOSH 238, 053

130 Universal Remote Control

MERIDIAN	100, 012, 013
MITSUBISHI	242, 243, 204
MONDIAL	157, 158, 042, 043, 081, 112
MYRYAD	030, 099

N

NAD	186, 113, 038, 216, 210
NAKAMICHI	111, 244, 245, 172, 183, 054
NIRO	135
NILES	241

O

ONKYO	029, 017, 046, 108, 080, 209
OPTIMUS	026, 041
OUTLAW	134

P

PANASONIC	032, 195, 219, 177, 098, 221
PARASOUND	129, 130, 132, 003, 103, 105, 125, 126
PHILIPS	249, 250, 063
PIONEER	014, 039, 044, 069, 168, 116, 035, 078
POLKAUDIO	251
PROCEED	144, 021

R

RCA	010, 048, 117, 156, 067, 055
REALISTIC	019, 073, 075
ROTEL	074, 083, 085
RUSSOUND	223, 239

S

SAMSUNG	016
SANSUI	040, 048, 110, 065, 228, 063
SANYO	047, 059
SCOTT	019
SHARP	026, 094, 131, 175
SHERWOOD	024, 102, 106, 246
SONY	018, 247, 248, 166, 101, 184, 218, 025, 179, 180, 220
SOUNDESIGN	036
SUNFIRE	142, 143, 146

T

TEAC	005, 019, 049, 111, 212, 217
TECHNICS	122, 193, 219, 178, 177, 200, 254, 007
THETA.DIGITAL	136
TOSHIBA	060, 087, 033

Y

YAMAHA	026, 253, 169, 067, 173, 205, 011, 232, 089, 027, 051, 181
--------	------------------------------------------------------------------

A.4 Additional codes list

MEDIA PC Controls

DELL	194, 190
GATEWAY	194, 190
HP	194, 190
SONY	194, 190
TOSHIBA	194, 190

WINBOOK	194, 190
---------	----------

XP Radios

DELPHI	251
KENWOOD	252
POLKAUDIO	251
SOLY	220

Index

- 'After next program', [66](#)
- 'After this program', [66](#)
- 16:9, [38](#)
- 1st Audio Language, [35](#)
- 1st Subtitle Language, [35](#)
- 22 kHz, [23](#)
- 2nd Audio Language, [35](#)
- 2nd Subtitle Language, [35](#)
- 4:3, [38](#)

- A/V Output, [36](#)
- Access Control, [43](#)
- Add to Fav, [51](#)
- Advanced..., [29](#)
- ALL, [30](#)
- Alphabetic, [51](#), [60](#), [73](#)
- Animation, [46](#)
- Astra*, [106](#)
- AUDIO L, [18](#)
- AUDIO L/R, [14](#)
- AUDIO R, [18](#)
- Auto, [27](#)

- Battle Tank (Network), [93](#)
- Battle Tank (Single), [88](#)
- Battle Tank(Single), [89](#)
- Brightness in Operation Mode, [46](#)
- Brightness in Standby Mode, [47](#)
- Button, [5](#)

- C band, [22](#)
- CAM, [8](#)

- CAS Only, [40](#)
- CAS only, [30](#)
- CAS–FTA, [51](#), [61](#)
- Censorship, [42](#)
- Center, [38](#)
- Center extract, [39](#)
- Change PIN Code, [43](#)
- CI, [8](#)
- COAXIAL, [19](#)
- Common Interface, [8](#)
- Common Interface, [8](#)
- Connection Type, [23](#), [97](#), [98](#)
- Cover, [48](#)
- Cut, [79](#)

- Date, [69](#)
- Daylight Saving Time, [41](#)
- Default, [51](#), [60](#)
- Default PIP Size, [47](#)
- Delete, [51](#), [60](#)
- Descramble Mode, [45](#)
- Descramble Multiple Services, [9](#)
- Descramble multiple services, [58](#)
- DHCP, [97](#)
- DiSEqC, [23](#)
- DiSEqC 1.0, [24](#)
- DiSEqC 1.1, [24](#)
- DiSEqC Command Mode, [25](#)
- Display Format, [38](#), [39](#)
- Dolby Digital, [39](#)
- Duration, [66](#), [69](#)
- DVB, [1](#)

- DVB-S2 8PSK, 28, 29, 31
- DVB-S2 QPSK, 28, 29, 31

- Edit Favorite List, 61
- Edit Service List, 59
- Electronic Programme Guide, 55
- ENERGY, 92
- eSATA, 14
- Every Day, 68
- Every Weekday, 69
- Every Weekend, 68
- Export System Data, 33

- Factory Setting, 32
- Fav–NoFav, 51, 61
- FEC, 28, 29, 31
- File Management, 99
- File Name, 69
- Flickr, 85, 86
- Format Hard Disk, 80
- Frequency, 25, 26, 28, 29
- Front Display, 46
- FTA + CAS, 30
- FTA only, 30
- FTA–CAS, 51, 60
- FTA/Scrambled, 30
- FTP Server, 100
- Full, 38

- Gateway, 98
- GMT, 40
- GMT Collection, 40
- Goto, 25
- Goto the position, 26

- Hard of hearing, 35
- HD Output, 36
- HDMI, 14, 17
- high definition, 36
- Home Transponder, 47

- Import System Data, 33
- Info Box Display Time, 45
- Info Box Position, 45
- information box, 53

- Instant Recording Duration, 44
- IP Address, 98
- IP Setting, 97, 98

- Jump Time Interval, 45

- K_u band, 22
- keyboard, 63

- LAN, 94
- LAN, 14
- Language, 34
- Letter Box, 39
- LNB, 22
- LNB 1 IN, 13, 15, 22, 23
- LNB 1 OUT, 13, 15, 16, 23
- LNB 2 IN, 13, 15, 16, 23
- LNB 2 OUT, 13, 15, 16
- LNB Frequency, 23
- LNB Power, 23
- LNB Setting, 22
- Local Time, 40, 41
- Lock, 51, 60, 73
- Locked, 73
- Loop Through, 23

- Main Display Scrolling, 46
- Manual..., 28
- Media Player, 82
- MediaHighway, 47
- MediaHighway EPG, 47
- Menu Language, 34
- Mini A, 24
- Mode, 40, 41, 68, 69
- Modulation, 28, 29, 31
- mono, 39
- Mosaic, 48
- Motor Control, 25
- Motorized DiSEqC 1.2, 24
- Motorized DiSEqC 1.3, 26
- MOVE, 92
- Move, 26, 48, 60
- Movement, 25
- MP3 Player, 81
- multifeed, 55

- My Latitude, 26
- My Longitude, 26

- Network Firmware Upgrade, 105
- Network Search, 27, 28
- NEW, 61
- No block, 42
- Normal, 40
- normal-screen television, 38

- ON/OFF, 14
- Once, 46
- One Time, 68
- OPTICAL, 19
- OSD, 45
- OSD Transparency, 45
- OTA Firmwrae Upgrade, 106
- Other, 23
- Others, 47, 48
- Overlap, 48

- Parental Control, 42
- Password, 98, 100
- Photo Album, 83
- picture-in-picture, 57
- PID, 29
- Pilot, 28, 29, 31
- PIN, 42
- Playback, 44
- Polarization, 28, 29
- port forwarding, 96
- POWER, 92
- Primary DNS, 98
- Program Guide, 55
- progress bar, 70
- Provider, 51, 61

- Radio, 68
- radio services list, 60
- Record, 68
- Recorded Program, 67, 72, 74, 77
- recorded programme list, 72
- Recording, 43
- Recording Drive, 43
- Recover System Data, 33

- Rename, 51, 60, 73
- Reservation, 68
- Reset Service List, 33

- S/PDIF, 39
- S/PDIF, 19
- S/PDIF COAXIAL, 13
- S/PDIF OPTICAL, 13
- SAT Name Edit, 31
- SAT/TP Edit, 31
- Satellite, 40, 50, 51, 60, 68
- Satellite Angle, 26
- satellite list, 22
- Satellite Name, 22, 23, 25–29, 31, 47
- Save, 79
- SCART Output, 37
- Search Mode, 27–29
- Searching, 27
- Secondary DNS, 98
- Separated, 23
- Service, 68
- Services Copy, 30
- services list, 49
- Show Provider, 51
- Size, 73
- Slideshow Effect, 47
- Slideshow Time Interval, 47
- SMATV, 27
- SMATV..., 29
- Sort, 60
- Sorting, 51, 73
- Sound Mode, 39
- specifications, 12, 14
- Start, 106
- Start firmware upgrade, 105
- Start Search, 30
- Start Time, 69
- Starting Position, 44
- stereo, 39
- Store, 25
- Store System Data, 33
- Sub Display Content, 46
- Subnet Mask, 98
- subtitle, 54
- Symbol Rate, 28, 29

- System ID, 103
- System Status, 103

- teletext, 54
- television services list, 60
- Text Scroll, 46
- Time, 40, 43, 73
- Time Format, 41
- time format, 41
- Time Offset, 40
- Time Padding of Timer Recording, 44
- Time Shift Storage, 44
- Time Shifting, 44, 56, 66
- timer list, 68
- Timer Recording Duration, 44
- Total block, 42
- Transponder, 25, 26, 40, 52, 61
- transponder, 1
- Trick Mode Level, 45
- Tuner, 51
- Tuner 1, 22
- Tuner 1 to Tuner 2, 30
- Tuner 2, 22
- Tuner 2 to Tuner 1, 30
- Tuner Select, 22, 25, 26, 47, 68
- TV, 13, 17, 37, 68
- TV Aspect Ratio, 38
- Type, 68

- USALS, 25
- USALS Setting, 26
- USB, 14, 64, 104
- USB Firmware Upgrade, 104
- User, 25
- User ID, 98, 100
- User Info, 98, 100, 101
- User Select, 40

- VCR, 13, 19
- VCR Scart Type, 37
- VIDEO, 14, 16, 18, 37
- Video Format, 36

- Weather, 87
- Web Server, 98

- Weekly, 69
- wide-screen television, 38

- Y/Pb/Pr, 13
- YouTube, 84, 85



Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.



Correct disposal of this product

This marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local government office for details of where and how they can dispose this product for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Topfield continues to improve the digital receiver which this guide explains. So some explanations and illustrations in this guide could be different from the actual digital receiver.