

# TOPFIELD

---

## SRP-2411

### User Guide

*High Definition*

*Digital Satellite Receiver*

*Personal Video Recorder*

*Common Interface*







 The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to a person.

 The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

# Contents

<b>Contents</b>	<b>iv</b>
<b>1 Introduction</b>	<b>1</b>
1.1 Features	1
1.2 Controlling the digital receiver	2
1.2.1 The front panel	3
1.2.2 The remote control	4
1.3 What is common interface?	7
<b>2 Setup</b>	<b>9</b>
2.1 Unpacking	9
2.2 Safety precautions	9
2.3 Rear panel connections	10
2.4 Connecting up your digital receiver	12
2.4.1 Connecting to the antenna	13
2.4.2 Connecting to your television set	14
2.4.3 Connecting to your video recorder	17
2.5 Switching on for the first time	17
<b>3 Service Search</b>	<b>19</b>
3.1 Searching broadcasting services	19
3.1.1 Configuring LNB settings	20
3.1.2 Configuring DiSEqC 1.2 settings	22
3.1.3 Configuring USALS settings	24
3.1.4 Searching services	25

---

3.2	Copying services	28
3.3	Editing the transponder list	29
3.4	Resetting to factory settings	30
3.5	Resetting to user settings	30
3.6	Clearing the services list	31
<b>4</b>	<b>Preference Settings</b>	<b>32</b>
4.1	Language settings	32
4.1.1	Menu language	32
4.1.2	Subtitle language	33
4.1.3	Audio language	33
4.2	Video and audio settings	34
4.2.1	High definition television	34
4.2.2	Television aspect ratio	35
4.2.3	Colour format	36
4.2.4	Another video device	36
4.2.5	Audio mode	37
4.3	Local time setting	38
4.4	Parental control	39
4.5	To use MediaHighway programme guide	41
4.6	Options for recording	42
4.7	Options for playback	43
4.8	Options for the On-Screen Display	44
4.9	Options for the front display	45
4.10	Options for standby mode	46
<b>5</b>	<b>Daily Usage</b>	<b>47</b>
5.1	Volume control	47
5.2	Watching television	47
5.2.1	The services list	47
5.2.2	The favourite service lists	50
5.2.3	Viewing programme information	51
5.2.4	Selecting audio tracks	52
5.2.5	Selecting subtitle tracks	52
5.2.6	Viewing teletext	52
5.3	Viewing electronic programme guide	53

5.4	Watching multifeed programme . . . . .	54
5.5	Using time-shift . . . . .	54
<b>6</b>	<b>Listing Services</b>	<b>57</b>
6.1	Editing the services list . . . . .	57
6.2	Editing the favourite lists . . . . .	59
6.3	How to use on-screen keyboard . . . . .	61
<b>7</b>	<b>Recording and Playback</b>	<b>62</b>
7.1	Recording a programme . . . . .	63
7.1.1	Instant recording . . . . .	63
7.1.2	Timer recording . . . . .	65
7.1.3	Scheduling recordings using the programme guide . . . . .	68
7.1.4	Recording a time-shifted programme . . . . .	68
7.1.5	Recording a pay service programme . . . . .	69
7.2	File archive . . . . .	70
7.2.1	To delete a recording . . . . .	70
7.2.2	To sort recordings . . . . .	70
7.2.3	To lock a recording . . . . .	71
7.2.4	To rename a recording . . . . .	71
7.2.5	To make a new folder . . . . .	71
7.2.6	To move a recording to another folder . . . . .	72
7.3	Playing back a recording . . . . .	72
7.3.1	To navigate using the progress bar . . . . .	73
7.3.2	To play in slow motion . . . . .	73
7.3.3	To play in fast motion . . . . .	73
7.3.4	To make a bookmark . . . . .	74
7.3.5	To play back a recording repeatedly . . . . .	74
7.3.6	To play back recordings in sequence . . . . .	75
7.3.7	To play back a scrambled recording . . . . .	75
7.4	Editing a recording . . . . .	76
7.5	Copying a recording . . . . .	77
7.6	Formatting the hard disk . . . . .	77
<b>8</b>	<b>Entertainment</b>	<b>78</b>
8.1	Copying files . . . . .	78

---

8.2	Playing back MP3 files . . . . .	79
8.3	Playing back video files . . . . .	80
8.4	Network game . . . . .	81
8.4.1	Single mode . . . . .	81
8.4.2	Network mode . . . . .	85
<b>9</b>	<b>Accessing to The Digital Receiver via The Internet</b>	<b>86</b>
9.1	Configuring the router . . . . .	87
9.1.1	To access within the local area network . . . . .	87
9.1.2	To access over the Internet . . . . .	88
9.2	Configuring the network setting on the digital receiver . . . . .	89
9.3	Accessing the web server . . . . .	90
9.4	Accessing the FTP server . . . . .	92
<b>10</b>	<b>Firmware Update</b>	<b>95</b>
10.1	Checking the firmware information . . . . .	95
10.2	From a USB memory . . . . .	96
10.3	From the firmware server via the Internet . . . . .	96
10.4	Over the air . . . . .	98
<b>A</b>	<b>Universal Remote Control</b>	<b>99</b>
A.1	Code list for television sets . . . . .	103
A.2	Code list for DVD players . . . . .	118
A.3	Code list for audio-video receivers . . . . .	120
	<b>Index</b>	<b>122</b>



## Chapter 1

# Introduction

The SRP-2411 digital receiver is fully compliant with the international Digital Video Broadcasting (DVB) standard, and thus is able to receive digital broadcasts of that standard.

For its operation you need an antenna, which must be installed appropriately.

### NOTE

In general we equate a channel with a frequency. However, unlike analogue broadcasts, digital broadcasts are not all assigned to their own frequencies; instead, multiple television broadcasts are transmitted through a single frequency. The frequency in digital broadcasting is usually called transponder. To reduce confusion in this manual, the word **service** is preferably used than **channel** as a term to indicate one television or radio broadcast.

## 1.1 Features

This digital receiver has the following features:

- Supports DiSEqC 1.0, DiSEqC 1.1, DiSEqC 1.2 and US-ALS.
- Can store up to 10000 television and radio services.
- You can edit the services list.
- Can create favourite lists of your favourite services.
- Can view information about the current television or radio programme.
- Has an electronic programme guide that provides an overview of scheduled programmes.
- You can record one service while you are currently watching another.
- You can record many programmes using a built-in hard drive with large storage capacity.
- Time-shift is a special technical feature available on this digital receiver. You can pause a programme you are watching and resume it again at a later time. Then you can quickly go to any part of the current programme by fast forward or rewind search.
- If you have an external hard drive connected to the digital receiver via the USB or eSATA port, you can record television programmes into it.
- You can play back media files of various formats including DivX.
- You can play a network game with other users via the Internet.

### 1.2 Controlling the digital receiver


You can operate the digital receiver with the remote control or the buttons on the front panel.

**NOTE**

When the digital receiver is off but plugged into a wall outlet, we say that it is in standby mode; on the other hand, when it is on, it is in operation mode. Even when you are not using the digital receiver, you should keep it plugged into a wall outlet to be in standby mode so that it can run timer events at any time.

**1.2.1 The front panel**

The front panel of the digital receiver has buttons to control the digital receiver, specific lamps and a display to indicate its status. The following indicates what they mean.

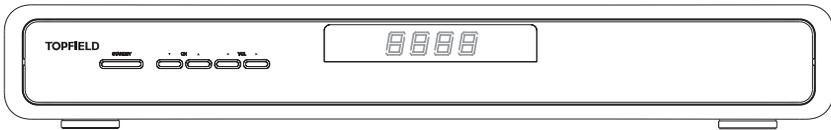


Front display shows the current time in standby mode, and displays the current service in operation mode.

⏻/| button switches the digital receiver between standby mode and operation mode.

CH ▼, ▲ buttons switch to the previous or next service.

VOL ◀, ▶ buttons decrease or increase the volume.

### 1.2.2 The remote control

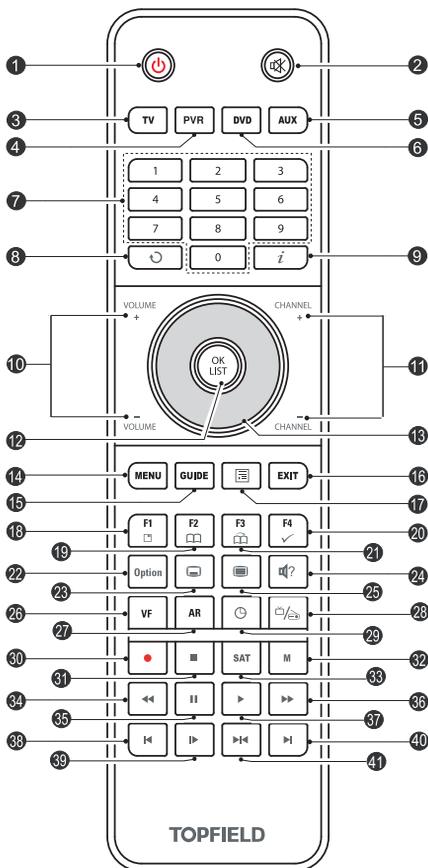

**1** button switches the digital receiver between standby mode and operation mode.

**2** mutes the sound. Press again to switch it back on.

**3** switches the remote control to television mode to operate your television.

**4** switches the remote control to receiver mode to operate the digital receiver.

**5** switches the remote control to operate your audio-video receiver.

**6** switches the remote control to DVD mode to operate your DVD player.

**7** Numeric buttons are used to enter a service number for service change or to specify values for menu options.

**8** switches between the current service and the previously viewed one.

**9** displays the service information box. It is also used to display more information about a programme.

**10** decrease or increase the volume.

- 11**   buttons switch to the previous or next service.
- 12**  displays the services list. See §5.2.1 for more details. It is also used to select a menu item.
- 13** Navigation buttons are used to navigate in menus or to change values for menu options.
- 14**  displays the main menu. It is also used to return to the previous menu from a submenu.
- 15**  displays the electronic programme guide.
- 16**  is used to exit a menu or to hide on-screen information.
- 17**  is used to display the list of recorded programmes that are stored in the internal hard drive. See §7.2 for more details.
- 18**  has different functions per menu.
- 19**  is used to make a bookmark during playback or timeshift.
- 20**  is used to edit a recording.
- 21**  is used to jump to next bookmark position.
- 22**  has different functions per menu.
- 23**  is used to select a subtitle track.
- 24**  is used to select an audio track and a sound mode, or a video track of multifeed programme.
- 25**  displays teletext.
- 26**  changes video resolution. See §4.2.1 for more details.
- 27**  changes aspect ratio. See §4.2.2 for more details.


- 28**  switches between television services and radio services.
- 29**  is used to set a sleep timer in 10 minute increments.
- 30**  is used to start recording.
- 31**  is used to stop playback, to stop recording, or to jump back to live television from time-shifted television.
- 32**  switches the output of the TV SCART socket between the digital receiver and the device connected to the VCR SCART socket. See §4.2.4 for more details.
- 33**  displays the satellites list with their services list.
- 34**  is used to start reverse playback. Subsequent presses increase the rewind speed.
- 35**  pauses live television or playback of a recorded programme.
- 36**  is used to start fast motion playback. Subsequent presses increase the playback speed.
- 37**  resumes normal playback speed, or displays the progress bar for navigation on playback or time-shift. To play a recorded programme, see button **17**.
- 38**  is used to jump back to beginning of recording during a playback.
- 39**  is used to start slow motion playback. Subsequent presses change the playback speed.
- 40**  is used to jump to end of recording during a playback.
- 41**  has different functions per menu.

The , , ,  and  buttons have additional different functions per menu besides their own function. They will be guided by on-screen help.

**NOTE**

When using the remote control, point it at the remote sensor on the front panel of the digital receiver.

### 1.3 What is common interface?

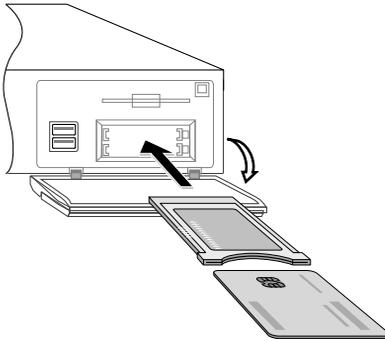

Some broadcasts are scrambled so that only paid subscribers can enjoy them. Scrambled services can only be viewed with a Conditional Access Module (CAM) and a subscription card matching with the scrambling system.


Common Interface (CI) is the slot on a digital receiver into which a conditional access module may be inserted. The front of the digital receiver has two common interface slots.

To watch a pay service, you should take the following steps:

1. Purchase a conditional access module and a subscription card for the pay service you want to watch.
2. Insert the subscription card into the conditional access module.
3. Insert the conditional access module into a common interface on the front of the digital receiver.

## 8 Introduction

---

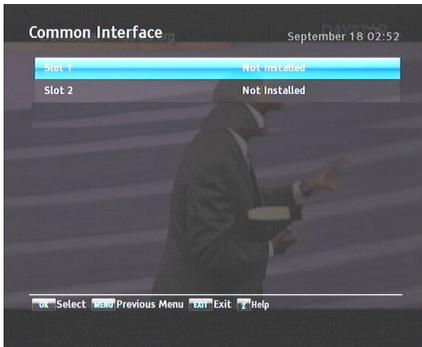

To view the information about the module and subscription card which is inserted into the digital receiver, select the Information > Common Interface menu. You should see a screen like the left figure.

## Chapter 2

# Setup

### 2.1 Unpacking

Before going any further, check that you have received the following items with the digital receiver.

- Remote control
- Two batteries for the remote control (AAA 1.5 V)
- One HDMI cable
- A copy of this user guide

#### NOTE

Accessories may vary according to your local area.

### 2.2 Safety precautions

Please read carefully the following safety precautions.

- The mains power must be 90 to 250 volts. Check it before connecting the digital receiver to the mains socket. For the power consumption of the digital receiver, refer to Table 2.1.

- The mains outlet should be near the equipment. Do not run an extension lead to the unit.
- Do not expose the digital receiver to any moisture. The digital receiver is designed for use indoors only. Use dry cloth when cleaning the digital receiver.
- Place the digital receiver on a firm and level surface.
- Do not place the digital receiver close to heat emitting units or in direct sunlight, as this will impair cooling. Do not lay any objects such as magazines on the digital receiver. When placed in a cabinet, make sure there is a minimum space of 10 centimetres around it. For the physical specification of the digital receiver, refer to Table 2.2.
- Protect the power cord from being walked on or pinched. If the cord is damaged, do not use the digital receiver and get the cord replaced.
- Never open the digital receiver casing under any circumstances, the warranty will be void.
- Refer all servicing to a qualified service technician.

**Table 2.1: Power specification**

---

Input voltage	90 to 250 V AC, 50/60 Hz
Power consumption	60 W at maximum in operation Under 1 W in passive standby

---

**Table 2.2: Physical specifications**


---

Size	430× 60× 265 mm
Weight	3.1 kg
Operating temperature	0 to 45 °C
Storage relative humidity	5 to 90%

---

### 2.3 Rear panel connections

The SRP-2411 has a wide range of connections on the back.

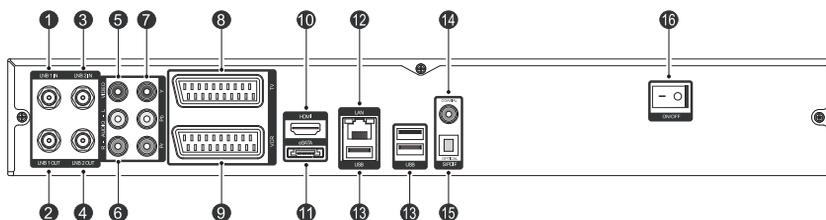

Check what connections your television set has in comparison with the digital receiver.

- 1** LNB 1 IN Satellite broadcasting signal input socket for the first tuner
- 2** LNB 1 OUT Satellite broadcasting signal output socket through the first tuner
- 3** LNB 2 IN Satellite broadcasting signal input socket for the second tuner
- 4** LNB 2 OUT Satellite broadcasting signal output socket through the second tuner
- 5** VIDEO Composite video output socket for the television set (yellow)
- 6** AUDIO L/R Stereo audio output socket for the television set or the audio-video receiver (white/red)
- 7** Y/Pb/Pr Component video output socket for the television set (green/blue/red)
- 8** TV Audio and video output socket for the television set
- 9** VCR Audio and video input/output socket for another device such as a video recorder
- 10** HDMI Audio and video output socket for the high definition television set
- 11** eSATA eSATA port for connecting to an external hard drive

- 12** LAN      Local area network port
- 13** USB      USB port for firmware update and data transfer
- 14** S/PDIF COAXIAL      Digital audio output socket of coaxial type for the audio-video receiver
- 15** S/PDIF OPTICAL      Digital audio output socket of optical type for the audio-video receiver
- 16** ON/OFF      Power switch

**Table 2.3: Connectors specifications**

---


HDMI	High definition video output Digital audio output
YPbPr	Component video output
TV	CVBS/S-Video/RGB video output Left & right audio output
VCR	CVBS video output Left & right audio output CVBS/S-Video/RGB video input for bypass Left & right audio input for bypass
VIDEO	Composite video (CVBS) output
AUDIO	Left & right audio output
S/PDIF	Digital audio output
LAN	10/100 Ethernet
USB	2.0 Host (5 V DC, 500 mA)
eSATA	External SATA 2.0

---

## 2.4 Connecting up your digital receiver

There are several ways to set up the digital receiver. Set up the digital receiver suitably to your television and other devices. If you have any problem with your setup or need help, contact your dealer.

### 2.4.1 Connecting to the antenna

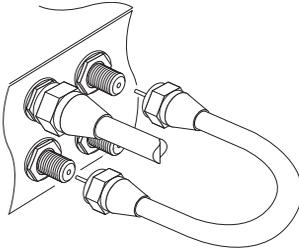

Whatever sort of connection you have between the digital receiver and the television, you need to connect the digital receiver to the antenna so that it can receive digital television services. Connect the antenna cable to the LNB 1 IN connector on the back panel of the digital receiver. Also, you must ensure that there is a connection to both the LNB 1 IN and LNB 2 IN connectors on your digital receiver, so that both tuners work properly.

Normally you do that by using a loop cable to link from the LNB 1 OUT connector to the LNB 2 IN connector. If you have two antennas without DiSEqC switch, then you have to connect a cable from the other antenna directly to the LNB 2 IN connector rather than using the loop cable.

#### NOTE

The digital receiver can supply a current of 500 milliamperes at maximum for antenna devices including LNB, DiSEqC switch and antenna rotor through each antenna input connection separately but not simultaneously. If there are too many antenna devices to be supplied with power through antenna input connections simultaneously for a long time, your LNBs may lack power to operate. So it is recommended to link the LNB 1 OUT connector to the LNB 2 IN connector with a loop cable even though the digital receiver is designed to operate over two antennas alternatively.

#### NOTE

Perhaps you are expecting that the satellite antenna could simultaneously catch all frequencies coming from a satellite and send them to the digital receiver. However, the satellite

antenna only sends the frequencies that it can catch with the LNB frequency and polarisation specified by the digital receiver. So if you have linked from the LNB 1 OUT connector to the LNB 2 IN connector, you would have some limitations in using some features such as dual recording. Likewise, if you have another digital receiver linked from the LNB 2 OUT connector, you can only use it limitedly. See §3.1 for more details.


### 2.4.2 Connecting to your television set

For all the following connections of the digital receiver, we recommend you to use the first connector to get the best picture quality. If your television does not have a matching connector, then use the next connector in the following order for a better picture quality.

1. HDMI connector (HDMI)
2. Component connector (YPbPr)
3. SCART connector (TV)
4. Composite connector (VIDEO)


You should configure audio and video settings after connecting up the digital receiver. See §4.2 for a detailed description.

#### To use the HDMI connector

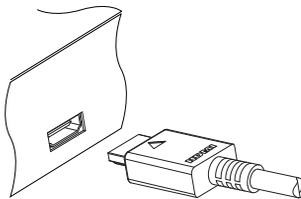

If you have a high definition television set, you should use a HDMI cable for best results. Plug one end of the cable into the HDMI socket on the digital receiver, and plug the other end into the matching socket on your television. In this case, you do not have to make audio connection because the HDMI connector can output stereo audio or Dolby digital audio.

### To use the SCART connector

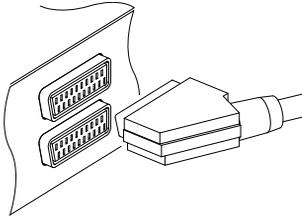

For best results with a standard television set, you should use a SCART cable. Plug one end of the cable into the TV socket on the digital receiver, and plug the other end into a free SCART socket on your television.

Some televisions have inputs via S-Video or Component connectors rather than SCART.


If you have such a television, use an appropriate conversion cable to link the TV socket on the digital receiver to the matching socket on your television.

If you connect with a standard SCART cable, you do not have to make audio connection because the SCART connector can output stereo audio. But if you use a conversion cable, such as SCART-to-Component, you have to make audio connection.

#### NOTE

You cannot view high definition video with a SCART connector.

### To use the Component video connector

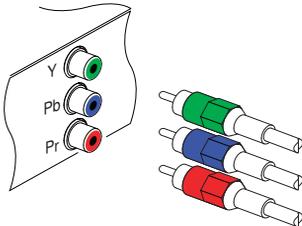


You need to obtain a Component video cable (RCA cable) to use the Component video connector. Plug one ends of the cable into the Y (green), Pb (blue) and Pr (red) sockets on the digital receiver, and plug the other ends into the matching sockets on your television.

**NOTE**

If using a Component connection, remember to also plug in the additional white and red audio cables from the digital receiver to the back of your television.

**To use the Composite video connector**

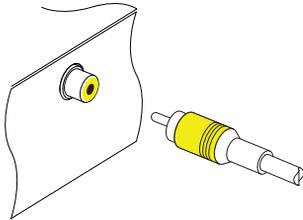


You need to obtain a Composite video cable (RCA cable) to use the Composite video connector. Plug one end of the cable into the VIDEO (yellow) socket on the digital receiver, and plug the other end into the matching socket on your television.


**NOTE**

You cannot view high definition video with a Composite video connector.

**To make the audio connection**

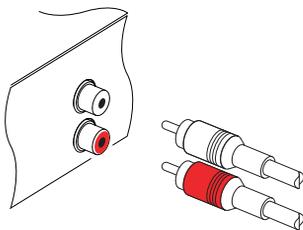


You need to obtain an audio cable (RCA cable) to connect the audio connectors. Plug one end of the cable into the AUDIO L (white) and AUDIO R (red) sockets on the digital receiver, and plug the other end into the matching sockets on your television or audio-video receiver.

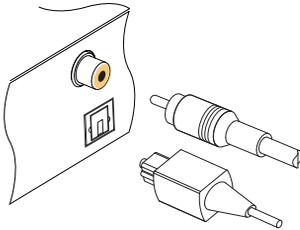

To enjoy Dolby digital audio, your television or audio-video receiver must be able to decode Dolby digital audio, and you need to obtain an S/PDIF cable. If you want to use the COAXIAL connector, prepare a coaxial S/PDIF cable (RCA cable); otherwise, to use the OPTICAL connector, prepare an optical S/PDIF cable.

### 2.4.3 Connecting to your video recorder

The digital receiver can also output video to another device such as a video recorder through an auxiliary SCART connector.

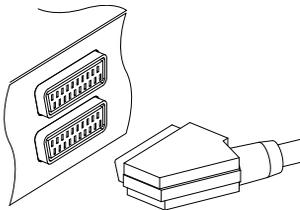

You need to obtain a SCART cable to use the auxiliary SCART connector. Plug one end of the cable into the VCR socket on the digital receiver, and plug the other end into the matching socket on your video recorder or suchlike.

## 2.5 Switching on for the first time

Now that you have your digital receiver connected, you should plug it into a mains socket. Ensure that your television set is turned on and on the correct video channel so that you will be able to see the display from the digital receiver.

Before switching on the digital receiver, you should insert batteries into the remote control. Open the battery compartment by removing the lid, and then insert the batteries observing the polarity, which is marked on the base of the battery compartment.

Press the  button on the top left corner on the remote control. In a little time, you may see a picture displaying a menu.

If you do not see a picture, try pressing the **(VF)** button on the remote control. If after several tries you still get no picture, check that the television is set to the correct input. If the picture is good, you can skip to §3.1 to search for available television and radio services. Otherwise, you may need to temporarily connect the Composite video connector (VIDEO) to your television set so that you can see the menu in order to configure the video settings.

**NOTE**

If the digital receiver no longer reacts properly to remote control commands, the batteries may be flat. Be sure to remove used batteries. The manufacturer accepts no liability for the damage resulting from leaking batteries.

Batteries, including those which contain no heavy metals, may not be disposed with other household wastes. Please dispose of used batteries in an environmentally sound manner. Find out the legal regulations which apply in your area.

## Chapter 3

# Service Search

After connecting up the digital receiver, you will need to perform a service search.

### NOTE

If there is no service stored, you will be not able to access all menus. A SERVICE is another name for a CHANNEL.

### 3.1 Searching broadcasting services

This digital receiver can be operated with both fixed antenna and motorized antenna. You have to configure antenna settings according to your antenna system in the following order:


1. Configure LNB settings.
2. Set the position of your desired satellites if you have a motorized antenna. You can control the antenna in DiSEqC 1.2 mode or USALS mode. Refer to §3.1.2 for DiSEqC 1.2, and refer to §3.1.3 for USALS.
3. Perform a service search.

### 3.1.1 Configuring LNB settings

There are two large frequency bands for satellite broadcasts. One is *C* band which ranges approximately from 4 to 6 GHz. The other is *K<sub>u</sub>* band which ranges approximately from 12 to 18 GHz.



The LNB (Low Noise Block converter) is used to take a wide band of relatively high frequencies, amplify and convert them to similar signals that is carried at a much lower frequency, which is called Intermediate Frequency (IF). High frequencies from satellites are converted into 950 to 2150 MHz by a LNB.

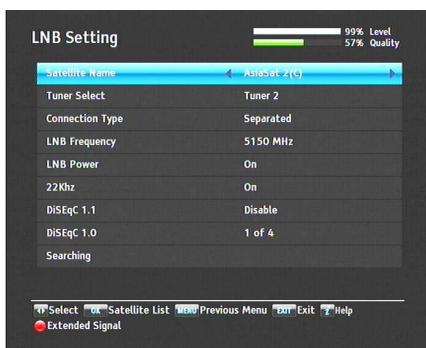

Select the Installation > LNB Setting menu to configure the LNB settings. You should see a screen like the left figure.

Pressing the **OK** button on the Satellite Name option displays the satellite list in alphabetic order. Select the satellite toward which your antenna is set to face. Even if you cannot find your desired satellite, you can add your desired satellite to the satellite list. See §3.3 for a detailed description.

You have to specify which tuner is connected to your selected

satellite. If it is LNB 1 IN, set the Tuner Select option to Tuner 1; otherwise, set it to Tuner 2.

If you have connected the LNB 1 OUT and LNB 2 IN with a loop-through cable, then set the Connection Type option to Loop Through; otherwise, set it to Separated.

#### NOTE

Both the LNB 1 IN and LNB 2 IN sockets should be connected to your antennas either directly or via the loop-through cable. If you have connected only one socket, some features such as dual recording will not function.

The digital receiver has a database of broadcasting satellites and their transponders, containing the following information: satellite position, frequency range, symbol rate, polarization and LNB frequency corresponding to the frequency range. So you might not have to specify the LNB Frequency option. However, if you have selected the Other entry at the Satellite Name option to specify a satellite that is not in the satellite list, you might have to fill in the correct LNB frequency. The absolute difference between a broadcasting frequency and its LNB frequency must be within 950 to 2150 MHz. For example, if the frequency band of your desired satellite ranges from 3660 to 4118 MHz, you have to set the LNB Frequency option to 5150 MHz.


The LNB has to be supplied with electric power to operate. Set the LNB Power option to On if it does not have any other power supply.

If you use a dual LNB or two antennas which is connected to the 22 kHz tone switch box, set the 22 kHz option to On.

The digital receiver is designed to be compatible with DiSEqC (Digital Satellite Equipment Control) switches. It is possible to connect several antennas to one digital receiver by DiSEqC switches. A DiSEqC 1.0 switch allows switching between up to

four satellite sources and a DiSEqC 1.1 switch allows switching between up to 16 satellite sources.

Set the DiSEqC 1.0 option and the DiSEqC 1.1 option according to your antenna configuration.

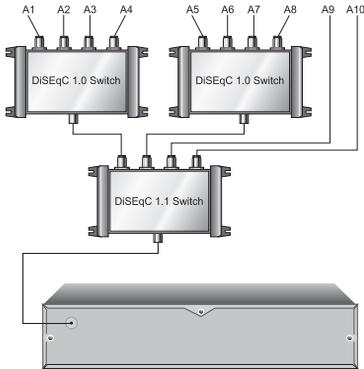


For example, to select the antenna connected to the A5 input in the left figure, set the DiSEqC 1.1 option to 2 of 4 and the DiSEqC 1.0 option to 1 of 4. If you have a mini DiSEqC 1.0 switch which has only two inputs, you should set the DiSEqC 1.0 option to Mini A instead of 1 of 4.

### 3.1.2 Configuring DiSEqC 1.2 settings

Your motorized antenna will turn toward your desired satellites horizontally by DiSEqC 1.2.



When you switch to an service, if the service is provided by a satellite other than current one, it will take longer time than usual because the antenna has to turn to its position.

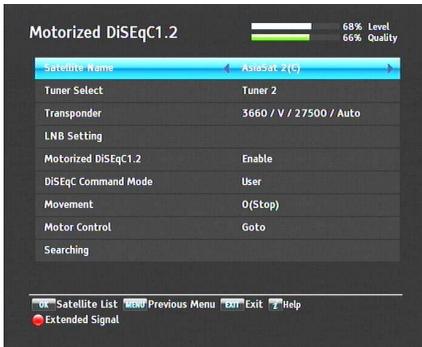

To use the DiSEqC 1.2 protocol, select the Installation > Motorized DiSEqC 1.2 menu. You should see a screen like the left figure. At first you have to set the Motorized DiSEqC 1.2 option to Enable.


To get the correct position of your desired satellite, perform the following steps:

1. Choose your desired satellite at the Satellite Name option.
2. Select the tuner that is connected to the motorized antenna at the Tuner Select option.
3. Set the DiSEqC Command Mode option to User.
4. Set the Motor Control option to Goto. Then the antenna will turn toward your selected satellite by the position data that the digital receiver has.
5. If the receiving quality, which is displayed at the bottom right of the screen, is not good, tune the antenna finely with the Movement option. If you set it to 2(E), the antenna will move to the east by two degrees. At this time you had better check the receiving quality of every transponder and choose the best one at the Transponder (or Frequency) option. It will be helpful to your fine tuning.
6. Finally set the Motor Control option to Store to save the tuned position when the receiving quality is best.

There are more motor control options for installers, but this guide does not describe them. If you are an installer, refer them to the manual about the *STAB* rotor.

### 3.1.3 Configuring USALS settings

USALS (Universal Satellite Automatic Location System), also known as DiSEqC 1.3, calculates the positions of all available satellites from your location. Compared to DiSEqC 1.2, it is no longer required to manually search and store every satellite position. Just pointing to a known satellite position is enough. This position will act as a central point. The USALS will then calculate positions of visible satellites.

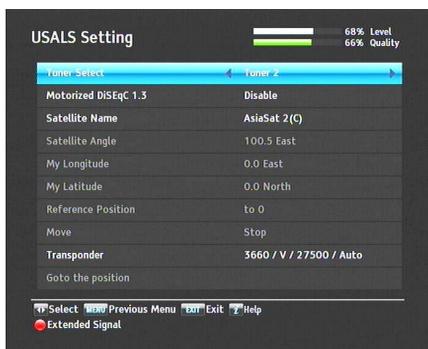

To use the USALS protocol, select the Installation > USALS Setting menu. You should see a screen like the left figure. At first you have to set the Motorized DiSEqC 1.3 option to Enable.


To get every satellite position calculated, perform the following steps:

1. Choose your desired satellite at the Satellite Name option.
2. Select the tuner that is connected to the motorized antenna at the Tuner Select option.
3. Enter your location to the My Longitude option and the My Latitude option with the  $\odot$ ,  $\ominus$  and numeric buttons.
4. Enter the position of your selected satellite to the Satellite Angle option if it is not correct.

5. Select the Goto the position option; then the antenna will turn toward your selected satellite as calculating its position.
6. If the receiving quality, which is displayed at the bottom right of the screen, is not good, then tune the antenna finely with the Move option. The changed position is automatically saved. At this time you had better check the receiving quality of every transponder and choose the best one at the Transponder (or Frequency) option. It will be helpful to your fine tuning.

### 3.1.4 Searching services

3

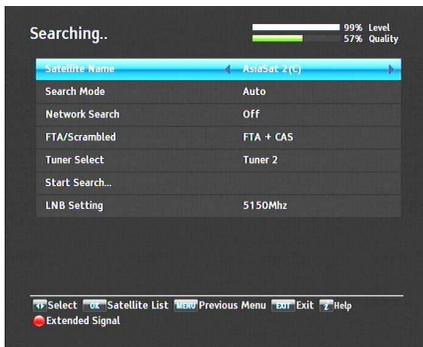

To perform a service search, select the Installation > Searching menu. You should see a screen like the left figure.

There are four service search methods:

- Searching every service of a satellite.
- Searching every service of a transponder.
- Searching one service of a transponder.
- Searching every service of a SMATV (Satellite Master Antenna Television) system.

#### Searching every service of a satellite

To search every service of a satellite, perform the following steps:

1. Choose your desired satellite at the Satellite Name option.
2. Set the Search Mode option to Auto.
3. If you set the Network Search option to On, the digital receiver will check up the up-to-date channel information as searching services, but it takes rather longer time.

### Searching every service of a transponder

To search every service of a transponder, perform the following steps:

1. Choose your desired satellite at the Satellite Name option.
2. Set the Search Mode option to Manual, and then press the **(OK)** button to display additional options.
3. Choose your desired transponder at the Frequency option or enter it with the numeric buttons.
4. Enter the symbol rate of your desired transponder to the Symbol Rate option with the numeric buttons.
5. Set the Polarization option to the polarization of your desired transponder.
6. If you set the Network Search option to On, the digital receiver will check up the up-to-date channel information as searching services, but it takes rather longer time.
7. Set the Modulation option to the modulation type of your desired transponder. If your desired transponder has high definition broadcasts, you should set this option to DVB-S2 QPSK or DVB-S2 8PSK. Then the FEC option and the Pilot option will become enabled. You also should set these options correctly.

**NOTE**

You may get transponder information from a satellite magazine or website such as <http://www.satcodx.com> or <http://www.lyngsat.com>.

**Searching one service of a transponder**

To search one service of a transponder, perform the following steps:

1. Choose your desired satellite at the Satellite Name option.
2. Set the Search Mode option to Advanced, and then press the **OK** button to display additional options.
3. Choose your desired transponder at the Frequency option or enter it with the numeric buttons.
4. Enter the symbol rate of your desired transponder to the Symbol Rate option with the numeric buttons.
5. Set the Polarization option to the polarization of your desired transponder.
6. Set the Modulation option to the modulation type of your desired transponder. If your desired transponder has high definition broadcasts, you should set this option to DVB-S2 QPSK or DVB-S2 8PSK. Then the FEC option and the Pilot option will become enabled. You also should set these options correctly.
7. Specify the packet identifiers of your desired service at the PID option with the numeric buttons. A packet identifier is used to verify audio and video streams.

**Searching every service of SMATV system**

To search every service of a SMATV system, if the digital receiver is connected to it, perform the following steps:

1. Choose your desired satellite at the Satellite Name option.
2. Set the Search Mode option to SMATV, and then press the **OK** button to diaply additional options.
3. Choose your desired transponder at the Frequency option or enter it with the numeric buttons.
4. Enter the symbol rate of your desired transponder to the Symbol Rate option with the numeric buttons.

You can search pay services as well as free services as follows:

- To search only free services, set the FTA/Scrambled option to FTA only.
- To search only pay services, set it to CAS only.
- To search both free services and pay services, set it to FTA + CAS.


To start service search, select the **Start Search** item; then a list box appears, in which found services will be listed. When it has completed, press the **OK** button to save found services. To stop at any time or to exit without saving, press the **EXIT** button.

### 3.2 Copying services

The digital receiver maintains a separate services list with each tuner. If a certain service is registered on only one tuner, it may be impossible to watch one service while recording. You can copy entries of one tuner's services list to the other tuner's services list to avoid such inconvenience.

To copy service entries, select the **Installation > Services Copy** menu. There are three copy options. To copy service entries of the first tuner to the second tuner's services list, select the **Tuner 1 to Tuner 2** option. To copy on the contrary, select the **Tuner 2 to Tuner 1** option. To copy reciprocally, select the **ALL** option.

### 3.3 Editing the transponder list

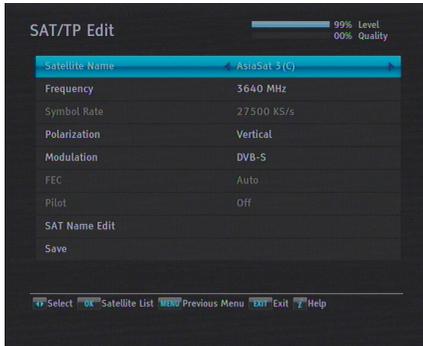

You can change attributes of a transponder. Select the Installation > SAT/TP Edit menu. You should see a screen like the left figure. To change the information of a satellite entry, perform the following steps:

1. Choose your desired satellite at the Satellite Name option.
2. Choose your desired transponder at the Frequency option or enter it with the numeric buttons.
3. Change the Polarization option to the polarization of your desired transponder.
4. Change the Modulation option to the modulation type of your desired transponder. If your desired transponder has high definition broadcasts, you should set this option to DVB-S2 QPSK or DVB-S2 8PSK; then the FEC option and the Pilot option become enabled. You should also set these options correctly.
5. To change a satellite entry's name, select your desired entry at the Satellite Name option and select the SAT Name Edit option. Then the on-screen keyboard appears. Change the name and save it. See §6.3 for how to use the on-screen keyboard.
6. Select the Save option and press the **OK** button to save the changes. To stop at any time or to exit without saving, press the **EXIT** button.

### 3.4 Resetting to factory settings

The digital receiver maintains the following data:

- Satellite list
- Services list
- Favourite list
- Timer list
- Preference settings

You can reset all data of the digital receiver. To do that, select the **Installation > System Recovery > Factory Setting** menu, and then you get asked for confirmation. If you select **Yes**, service entries, favourite entries and timer events will all be deleted, and preference options will be reset to the manufacturer's factory settings.

#### **NOTE**

A factory reset will not delete any recorded programmes. However, you have to search services again after a factory reset.

### 3.5 Resetting to user settings

You can store your own data including the following:

- Satellite list
- Services list
- Favourite lists
- Preference settings

Also you can restore them at any time.

To store your data, select the **Installation > System Recovery > Store System Data** menu; then you get asked for confirmation. If you select **Yes**, your data will be stored. Whenever you store your data, they are all overwritten.

To restore your data, select the **Installation > System Recovery > Recover System Data** menu; then you get asked for confirmation. If you select **Yes**, your data will be restored.

### 3.6 Clearing the services list

If you only want to clear the services list, select **Installation > System Recovery > Reset Service List**; then you get asked for confirmation. If you select **Yes**, the services list will be cleared. After this, you have to search services again.

## Chapter 4

# Preference Settings

### 4.1 Language settings



You can select the language in which the menu would be displayed. In addition to that, you can select the language of audio track and of subtitle track. Select the **Settings > Language** menu. You should see a screen like the left figure.

#### 4.1.1 Menu language

The digital receiver provides menus in several different languages. Set the **Menu Language** option to your desired language. Once you select a language, the menu will be immediately displayed in the selected language.

### 4.1.2 Subtitle language

Set the 1st Subtitle Language option and the 2nd Subtitle Language option to your desired languages. When you watch a programme, if the programme has a subtitle track of the language that is designated for the 1st Subtitle Language, it will be displayed. If the first language is not available but the second language is available, the subtitle of the second language will be displayed. If there is no available language, no subtitle will be displayed.

Apart from this setting, you can select a subtitle track with the  button. See §5.2.5 for a detailed description.

Some broadcaster may send a subtitle track dedicated to persons who have difficulty in hearing. Even when one or more subtitle tracks are available, that subtitle track will be displayed prior to those you have designated for the 1st Subtitle Language and the 2nd Subtitle Language options if the Hard of hearing option is set to On.

### 4.1.3 Audio language

Set the 1st Audio Language option and the 2nd Audio Language option to your desired languages. When you watch a programme, if the programme has an audio track of the language that is designated for the 1st Audio Language, it will be outputted. If the first language is not available but the second language is, the audio of the second language will be outputted.

Apart from this setting, you can select an audio track with the  button. See §5.2.4 for a detailed description.

## 4.2 Video and audio settings



You have to configure the video and audio settings appropriately for your television set and other devices. Select the **Settings > A/V Output** menu. You should see a screen like the left figure.

### 4.2.1 High definition television

The digital receiver supports various video resolutions from 576 to 1080. In general a resolution of 720 or more is considered high definition. The higher the resolution is, the better the quality is. However, if your television set does not support high definition, you cannot enjoy high definition quality picture.

If you have the digital receiver linked to your television via the Component video connector (Y/Pb/Pr) or the HDMI connector, you have to set the HD Output option to Component. Otherwise, you have to set it to SCART. The available values for the Video Format option vary depending on how you set this option.

Set the Video Format option as you desire. If you set this option to 576P, the digital receiver will present even high definition programmes in resolution of 576. On the contrary, if you set it to 1080I, the digital receiver will present even standard definition programmes in resolution of 1080.

It is recommended to set it to Auto if you have a high definition television. With that setting the digital receiver will present a programme as it is without any resolution conversion. While watching television you can change the resolution with the **[VF]**

button. Whenever you press it, the video resolution is changed in turn.

#### NOTE

You can enjoy only standard definition video with the following video outputs:

- Composite video connector (VIDEO)
- SCART connector (TV)

### 4.2.2 Television aspect ratio

If you have a wide-screen television, set the TV Aspect Ratio option to 16:9.



You can enjoy both wide-screen programmes and normal-screen programmes with your wide-screen television as the above figures show. To watch normal-screen programmes in full screen like the left figure, set the Display Format option to Full. Normal-screen pictures then will be inflated to fit to the width of the wide screen. Otherwise, to watch them in the original ratio like the right figure, set it to Center.

If you have a normal-screen television, set the TV Aspect Ratio option to 4:3.



You cannot fully enjoy wide-screen programmes with your normal-screen television as the above figures show. The left figure shows a normal picture displayed in the normal screen. To watch wide-screen programmes in the shape like the centre figure, set the Display Format option to Letter Box. Wide-screen pictures then will be reduced to fit to the width of the normal screen. Otherwise, to watch them in the shape like the right figure, set it to Center extract. Then wide-screen pictures will be cut out on the left and right sides equally to fit to the width of the normal screen.

### 4.2.3 Colour format

Through the TV SCART connector, the digital receiver is able to output video in various colour models. If you have the digital receiver linked to your television via this connector, you should set the SCART Output option to your desired colour model.

If you have connected via the RCA connector labeled VIDEO on the back panel, you do not have to set this option because the digital receiver outputs CVBS video through the RCA connector independently of the SCART connector.

In general, it is known that the RGB colour model provides the best video quality with little difference from the YUV colour model but the CVBS colour model does the least. So RGB would be the most desirable option for this.

### 4.2.4 Another video device

You can have the digital receiver linked to another video device like a video recorder or a DVD player via the VCR SCART connector. In this case, the digital receiver will operate differently

depending on the setting of the VCR SCART Type option. If the option is set to **Standard**, the digital receiver will pass the video from the video device to your television when it starts playback. But if the option is set to **External A/V**, the digital receiver will not pass the video automatically. To pass it, you have to press the **(M)** button.

It is impossible for the digital receiver to record the video from the video device since the digital receiver is just a bypass for the video recorder.

### 4.2.5 Audio mode

Basically, there are two audio sources as you can find two audio sockets on the back panel of the digital receiver. You can enjoy only one source or both of them in either stereo or mono. Set the **Sound Mode** option as you desire.

Apart from this setting, you can change the sound mode with the **(M?)** button. See §5.2.4 for a detailed description.

The digital receiver can output two types of digital audio signals via the S/PDIF connector. One is an encoded signal, and the other is a decoded signal. If you have the digital receiver linked to your audio-video receiver via the S/PDIF connector, you have to set the **Dolby Digital** option to **Off**, which means that the digital receiver will output encoded Dolby Digital audio without decoding so that your audio-video receiver can decode it. Otherwise, set it to **On**, then the digital receiver will output decoded Dolby Digital audio, scaling down it to two channels.

#### NOTE

Only if the service you are currently watching provides a Dolby digital audio track, you can enjoy Dolby digital sound.

### 4.3 Local time setting

You should set your local time for timer events. If you do not set the local time correctly, the programme time table provided by the programme guide may be distrustful. For the programme guide, refer to §5.3.



Select the **Settings > Time** menu. You should see a screen like the left figure. You can set the clock manually or use the time signal, Greenwich Mean Time (GMT), carried as part of the digital television broadcast. To use Greenwich Mean Time, take the following steps:

1. Set the **Mode** option to **Auto**, then the **Time Offset** option becomes enabled.
2. Set the **Time Offset** option to the time difference between your time zone and GMT referring to Table 4.1.
3. To get Greenwich mean time, set the **GMT Collection** option to one among the followings:

Normal from all transponders

CAS Only from transponders of pay services

User Select from transponders specified by you

If you set it to **User Select**, then the **Satellite** option and the **Transponder** option become enabled. Select your desired satellite and transponders at those options. With the above settings, the digital receiver will scan all specified transponders one by one until to get the Greenwich Mean Time.

4. Make sure that your local time is correctly displayed on the Local Time item.

To set the local time manually, set the Mode option to Manual and enter your local time to the Local Time option with the numeric buttons. The time format is *day/month/year 24-hour:minute*.

If daylight saving time is observed in your state at the moment, set the Daylight Saving Time option to On.

#### NOTE

Daylight saving time adds one hour to the time when the option is set to On. When setting the time offset from Greenwich Mean Time, make sure that time offset does not include daylight saving time.

## 4.4 Parental control

In general, television programmes are classified according to the level of violence, nudity and language of their content. When you are watching a programme, you can check its programme classification on the information box. For the information box, see §5.2.3. You can prevent your children from watching specific programmes by specifying a programme classification.

Table 4.1: Time offset table

Time offset	City
GMT – 12:00	Eniwetok, Kwajalein
GMT – 11:00	Midway Island, Samoa
GMT – 10:00	Hawaii
GMT – 09:00	Alaska
GMT – 08:00	Pacific Time US, Canada
GMT – 07:00	Mountain Time US, Canada
GMT – 06:00	Central Time US, Canada, Mexico City
GMT – 05:00	Eastern Time US, Canada, Bogota, Lima
GMT – 04:00	Atlantic Time Canada, La Paz
GMT – 03:30	Newfoundland
GMT – 03:00	Brazil, Georgetown, Buenos Aires
GMT – 02:00	Mid-Atlantic
GMT – 01:00	Azores, Cape Verde Islands
GMT	London, Lisbon, Casablanca
GMT + 1:00	Paris, Brussels, Copenhagen, Madrid
GMT + 2:00	South Africa, Kaliningrad
GMT + 3:00	Baghdad, Riyadh, Moscow, St. Petersburg
GMT + 3:30	Tehran
GMT + 4:00	Abu Dhabi, Muscat, Baku, Tbilisi
GMT + 4:30	Kabul
GMT + 5:00	Ekaterinburg, Islamabad, Karachi, Tashkent
GMT + 5:30	Bombay, Calcutta, Madras, New Delhi
GMT + 6:00	Almaty, Dhaka, Colombo
GMT + 7:00	Bangkok, Hanoi, Jakarta
GMT + 8:00	Beijing, Perth, Singapore, Hong Kong
GMT + 9:00	Tokyo, Seoul, Osaka, Sapporo, Yakutsk
GMT + 9:30	Adelaide, Darwin
GMT + 10:00	Eastern Australia, Guam, Vladivostok
GMT + 11:00	Magadan, Solomon Islands, New Caledonia
GMT + 12:00	Fiji, Auckland, Wellington, Kamchatka



Select the **Settings > Parental Control** menu. You should see a screen like the left figure, and you will be asked your Personal Identification Number (PIN). The number is initially set to '0000' as a default.

If you wish to block 15 or above rated programmes, set the Censorship option to 15 (age). Setting it to No block blocks no programme; on the other hand, setting it to Total block blocks every programme.

**NOTE**

If a programme does not have any programme classification information, your censorship setting will not take effect.

If anyone is trying to watch a programme that is of or above the censorship setting, the person has to enter the personal identification number to override. To change the number, select the Change PIN Code menu, then an input box appears. You have to enter a desired number twice for confirmation.

You can also restrict uses of some menus. Selecting the Access Control menu displays a list of menus that you can lock. If the Time item is set to Locked, you have to enter the personal identification number when accessing the Time menu. If you enter a wrong number, you cannot use the menu. To release a shut item, set it to Unlocked.

## 4.5 To use MediaHighway programme guide

Almost every service provider would provide the electronic programme guide. However, you can get more abundant programme information from a specific transponder that provides only programme guides. For detailed description about electronic programme guide, see §5.3. MediaHighway stands for the transponder dedicated to the electronic programme guide.



If you want to use this feature, select the **Settings > MediaHighway EPG** menu. You should see a screen like the left figure.

Set the **MediaHighway EPG** option to **On** to activate this feature, then the other options become enabled. Set the **Satellite Name** and **Home Transponder** options to available ones, and set the **Tuner Select** option to the tuner through which to receive the specified transponder. The digital receiver will try to receive programme guide within the duration specified at the **EPG Gathering Time** option.

## 4.6 Options for recording



To set the options for the recording feature, select the **Settings > Recording** menu. You should see a screen like the left figure.

To enable the time-shift function, you should set the **Time Shifting** option to any other than **Disable**. The available range for this option is 30 minutes to 5 hours. You will have the latest

of the current programme as long as the duration specified at this option

You can record a programme into both an external and the built-in hard drive. If you want to record a programme into an external hard drive, set **Recording Drive** option to **External**; otherwise, set this option to **Internal**.

If you set the **Time Shift Storage** option to **Enable**, the saving parts which for the time-shift will be recorded in the **TimeShift** folder of the hard drive. You can set the duration of the timer recording. Set the **Timer Recording Duration** option as you desire. Its available range is 10 minutes to 3 hours. In addition, you can adjust the time padding of timer recording. Set the **Time Padding of Timer Recording** option as you desire. Its available range is 0 to 30 minutes.

You can adjust the duration of the instant recording. Set the **Instant Recording Duration** option as you desire. Its available range is 30 minutes to 5 hours.

## 4.7 Options for playback



To set the options for the playback feature, select the **Settings** > **Playback** menu. You should see a screen like the left figure.

If you want to play back a recorded file from beginning, set **Starting Position** option to **Beginning**. To play back a recorded file from the part where you were watching, set this option to **Continuing**.

To record again a scrambled recording file with descrambling during playback, set the **Descramble Mode** option to **Auto Recording**; otherwise, set this option to **Normal**.

You can adjust the jump time interval which is used in playback. Set the **Jump Time Interval** option as you desire. Its available range is 10 seconds to 3 minutes.

If you want to use extensional trick mode, set the **Trick Mode Level** option to **2x**, **4x**, **8x**, **16x**, **32x**, **64x**; otherwise, set this option to **4x**, **16x**, **64x**.

You can enjoy video files of DivX, VOB, MKV, and MP4 formats with the digital receiver. If you have subtitle files such as .smi, .sub, .idx, and .srt, the digital receiver can also display them. The **Media Subtitle** item provides some options for video subtitle. When you play back a video file with a subtitle file, if the subtitle does not match the video, then you can synchronise the subtitle with the video by adjusting the value of the **Sync** option. In addition, you can change the colour and size of subtitle by setting the **Font Color** and **Font Size** options to one you prefer.

## 4.8 Options for the On-Screen Display



To set the options for the On-Screen Display (OSD), select the **Settings > OSD** menu. You should see a screen like the left figure.

To adjust the transparency level of the OSD, set the **OSD Transparency** option as you desire. Its available range is 0 to 50

percent.

To adjust the display time of the information box, set the Info Box Display Time option as you desire. Its available range is 1 to 30 seconds. If you set this option to No Info Box, the information box will not be displayed when you switch services. However, pressing the  button will display the information box. If you set this option to Never Hide, the information box will always be displayed. For the information box, see §5.2.3.

In addition, you can raise or lower the position of the information box. To do that, set the Info Box Position option as you desire. Its available range is -10 to +3 lines. The higher you set the option, the lower the information box will be positioned. To use an animation effect when changing menu, set the Animation option to Enable.

To make a long service name scroll at the services list screen, set the Text Scroll option to any other than Disable. With the choice of Full Scroll, it will be fully scrolled until its end disappears; with the choice of Part Scroll, it will be scrolled only to its end.

## 4.9 Options for the front display



To set the options for the front display, select the **Settings > Front Display** menu. You should see a screen like the left figure.

If you want to use the front display scrolling continuously, set the Main Display Scrolling option to Unlimited. Setting it to

Once do the scrolling one time. Set it to **Disable** not to use the scrolling.

To display the current time on the sub display of the front display, set the **Sub Display Content** option to **Time**. Otherwise, set this option to **Default** to display the name of the upper menu.

To adjust the brightness of the front display in operation mode, set the **Brightness in Operation Mode** option as you desire.

You can also adjust the brightness of the front display in standby mode. To do that, set the **Brightness in Standby Mode** option as you desire.

#### 4.10 Options for standby mode

You can display the current time on the front display in standby mode. To display the time, select the **Settings > Others** menu and set the **Standby Mode** option to **Active**; otherwise, set it to **Passive**. When you set the **Standby Mode** option to **Active**, the receiver can also bypass the signal from the antenna.

To use the automatic power down feature, select the **Settings > Others** menu and set the **Automatic Power Down** option to **Enable**. Then the receiver will be automatically powered down if you do not operate the receiver over three hours.

## Chapter 5

# Daily Usage

### 5.1 Volume control

Use the **VOLUME-** and **VOLUME+** buttons to alter the volume to a comfortable level. You may need to adjust the volume on your television set too. To temporarily switch off the sound, press the **Ⓜ** button. Press it again to restore the sound to previous level.

### 5.2 Watching television

To change services, press the **CHANNEL-** or **CHANNEL+** button. Pressing the **↺** button switches to the previously viewed service. In addition, you can switch to your desired service by entering its service number with the numeric buttons. You can also select a service to watch in the services list.

#### 5.2.1 The services list

To view the services list, press the **OK** button.



On the services list, you can see the service information as follows:

- Service number and name
- Transmitting satellite
- Receiving tuner: T1 stands for the first tuner; T2 stands for the second tuner.
- Transponder information

A dollar sign (\$) may be marked on some entries, indicating pay service. To watch pay services, you need a subscription card. To select a desired service, put the highlight bar on its entry with the **⏪** or **⏩** button and press the **OK** button; then the selected service will be presented.

Pressing the **⏪** or **⏩** button skips over 10 entries up or down. Entering a service number with the numeric buttons puts the highlight bar on its entry.

You can switch between the television services list and the radio services list by pressing the **☺/☹** button.

To sort the services list by service name, press the **F2** button. Pressing this button once more makes it sorted by service number.

Pressing the **Option** button displays additional options, with which you can do the following:

- Select your desired satellite at the **Satellite** option, then only services provided by the selected satellite will be listed.
- Select your desired tuner at the **Tuner** option, then only services provided through the selected tuner will be listed.

- By setting the Show Provider option to On, you can view service entries by groups of broadcasters.
- To change the name of the highlighted service, select the Rename option; then the on-screen keyboard appears, with which you can enter a new name. See §6.3 for how to use the on-screen keyboard.
- You can prevent other family members from watching the highlighted service by setting the Lock option to Locked. You have to enter your personal identification number to watch or unlock it.
- To delete the highlighted service, select the Delete option; then you get asked for confirmation. If you select Yes, it will be deleted. If you want to restore it as before, you have to perform service search again. See §3.1 for service search.
- To add the highlighted service into a favourite group, select the Add to Fav option; then the favourite groups will be displayed. Put the highlight bar on a desired group and press the **OK** button.
- You can additionally sort the services list with the Sorting option as follows:
  - Default by service number
  - Alphabetic by service name
  - Satellite by satellite
  - FTA–CAS from free services to pay services
  - CAS–FTA from pay services to free services
  - Provider by broadcaster
  - Fav–NoFav from favourite services to unfavourite services.
  - Transponder by transponder

## 5.2.2 The favourite service lists

You can select a service on a favourite list as well as on the services list.



To display the favourite lists, press the **F2** button at the services list screen. For the services list, see §5.2.1.

To select a favourite list, put the highlight bar on a desired favourite group list and press the **OK** button; then favourite services belonging to the highlighted group are listed.

For how to edit the favourite lists, refer to §6.2.

To select a favourite service, put the highlight bar on a desired service and press the **OK** button. Once you select a desired service with the **OK** button, it will be displayed. To select other group, press the **↶** button.

After you have selected a favourite service, if you then switch to another service using the **⊕** or **⊖** button, it will be also another favourite service of the selected group. The digital receiver will remind you what group you have selected by displaying its name at the top right of the screen whenever you switch services.

To return to the services list, press the **F1** button. Besides that, you can add or delete a favourite group or service.

To add the service you are currently watching into a favourite group, press the **Option** on the favourite group list. Then, select **Add this service** item and press the **OK** button.

To delete a service, press the **Option** on the favourite group list. Then, select **Delete** item and press the **OK** button; then you get asked for confirmation. If you select **Yes**, it will be deleted.

### 5.2.3 Viewing programme information

Pressing the  button displays the information box, on which you can see all of the following:



- Service number and name
- Transmitting satellite
- Receiving tuner
- Transponder information
- Signal level and quality
- Programme name
- Programme classification symbol
- Programme summary
- Broadcasting time
- Current time

In addition, you might see the following symbols:

- Subtitle symbol () if subtitle tracks are provided on the current programme.
- Teletext symbol () if teletext pages are provided on the current service.
- Dolby Digital symbol () if a Dolby Digital audio track is provided on the current programme.
- Lock symbol () if the current service is locked.
- Dollar symbol () if the current service is a pay service.
- Multifeed symbol () if the current programme is provided as a multifeed programme. To use this feature, refer to §5.4.

If the electronic programme guide is provided on the current service, you can see the information about the current and next programmes with the  or  button. You can also see the information about other services with the  or . In this case, you can change a service by pressing the  button.

Pressing the  button once more displays detailed information about the current programme. To hide the information box, press the  button.

#### 5.2.4 Selecting audio tracks

Some programmes are provided with audio tracks in one or more languages. Pressing the  button displays available audio tracks. Once you select an audio track, that track will be heard. In addition, you can enjoy audio tracks in four sound modes: Stereo, Mono, Left or Right. However, if a multifeed programme is provided at the moment, video tracks will be displayed. In this case, you have to press the  button once more to select an audio track.

#### 5.2.5 Selecting subtitle tracks

Some programmes are provided with subtitle tracks in one or more languages. If the current programme provides subtitle tracks, the subtitle symbol () will be marked on the information box. Pressing the  button displays available subtitle tracks. Once you select a subtitle track, it will be displayed.

#### 5.2.6 Viewing teletext

On some services, such information as weather reports, news or stock quotations is provided by means of teletext. If the current service provides teletext, the teletext symbol () will be displayed on the information box. Press the  button to view teletext pages.

Select a page to view by entering its page number with the numeric buttons. You can zoom into a teletext page with the  button, and adjust its transparency level with the  button. To clear the teletext screen, press the  button.

## 5.3 Viewing electronic programme guide

The Electronic Programme Guide (EPG) shows the current and scheduled programmes that are or will be available on each service with a short summary for each programme.



Pressing the **[GUIDE]** button displays the electronic programme guide, on which you can see the following:

- Scheduled programmes
- programme summary
- Broadcasting date
- Broadcasting time

To see detailed information of a desired programme, put the highlight bar on the programme with the **[⊙]** or **[⊙]** button and press the **[i]** button. To switch to another service, press the **[⊙]** or **[⊙]** button. You can travel over previous days with the **[F2]** button, and can travel over next days with the **[F3]** button.

To see the programme guide for radio broadcasts, press the **[R]** button. To switch it back, press the **[R]** button again.

Pressing the **[F1]** button displays the programme guide in the form of spreadsheet. To switch it back, press the **[F1]** button again.

You can make a timer recording on the electronic programme guide. See §7.1.3 for detailed description.

You can make a timer event on the electronic programme guide as follows:

1. Select a service you want.
2. Press the **[GUIDE]** button to display its programme guide.

3. Select a programme you want with the  button, then **P** is marked up on the entry. At the same time, a timer event with the selected programme will be made in the timer list. Refer the timer list to §??.
4. To remove the marking, press the  button once again.

## 5.4 Watching multifeed programme

Some broadcasts such as sports channels can provide a variety of perspectives on a programme at the same time. We call it a multifeed programme. You can select and watch a perspective you prefer.

If a multifeed programme is provided on the current service, the multifeed symbol () will be marked on the information box. Press the  button, then available video tracks will be listed. Once you select one, it will be presented. At this time, you have to press the  button once more to select audio tracks.

## 5.5 Using time-shift

You can pause and resume a live television programme, and even rewind and replay it. When you are watching a programme and you miss something, you can rewind and replay it. Or when your attention is needed elsewhere, you can pause live TV and resume a short time later without losing any of the programme.



When you do this, you are no longer watching the live programme, instead you are watching a delayed presentation. This is called time-shifted television. You can skip commercials until you catch up to the live broadcast.

In order to use the time-shift feature, set the Time Shifting option to desired duration of time. Then the digital receiver will keep as much time as you set in the option. See §4.6.

The time-shift will reset each time you change to another service. With the time-shift, the following operations are possible:

- To go back in time, hold down the  button; to go forward, hold down the  button. The progress bar is displayed momentarily with a preview window.
- You can navigate using the progress bar, refer to §7.3.1.
- You can jump backward and forward by pressing the  and  buttons. You can change the jump time at the Jump Time Interval option. See §4.7.
- You can change playback speed. See §7.3.2 for slow motion. For fast motion, see §7.3.3.
- To check your current position in time-shift, press the  button. The time difference compared to live programme is displayed momentarily in top right corner of screen. A value of -02:00 means two minutes behind live programme.
- To make a recording of what is in time-shift, see §7.1.4.

- To end time-shift, press the  button. The live programme will be displayed.

**NOTE**

You can adjust some options of the time-shift. Refer to §4.6.

## Chapter 6

# Listing Services

### 6.1 Editing the services list

You would have got the services list after service search. You can rename, move, lock or delete service entries on the services list.



Select the installation > Edit Services > Edit Service List menu. You should see a screen like the left figure. There are editing options on the left column and service entries on the right column.

Once you put the highlight bar on a desired option on the left column and press the **[OK]** button, you can select a desired service to edit on the right column. To go over to the other column, press the **[F1]** button.

To edit the radio services list, press the  button; then radio service entries will be listed on the right column. To switch back to the television services list, press it again.

To change the name of a service, select the **Rename** and select a desired service; then the on-screen keyboard appears. See §6.3 for how to use the on-screen keyboard.

Unlike analogue broadcasts, each service does not have a proper service number in digital broadcasts. Service numbers are just assigned to services in the order that they were found in service search. So you can reassign a service number by moving a service entry. To move a service entry, select the **Move** option and select a desired service; then the selected service becomes darker. As you move it up or down, it gets renumbered according to the position. Press the  button to fix it.

You can lock some services to prevent your children from watching them. To lock a service, select the **Lock** option and select a desired service; then the selected service gets marked with a lock symbol () on it. If anyone tries to watch a locked service, the person has to enter the personal identification number that is set to the **Change PIN Code** option. See §4.4 for this option. Pressing the  button on a locked service entry turns it back to be unlocked.

To delete a service, select the **Delete** option and select a desired service with the  button, and then press the **(EXIT)** button; you get asked for confirmation. If you select **Yes**, the selected service will be deleted. If you want to undo the deleted service, there is nothing you can do but perform a service search again.

Once you select the **Sort** option on the left column, sorting options are displayed as follows:

**Default** by service number

**Alphabetic** by service name

**Satellite** by satellite

**FTA–CAS** from free services to pay services

**CAS–FTA** from pay services to free services

Fav–NoFav from favourite services to unfavourite services  
 Provider by broadcaster  
 Transponder by transponder

## 6.2 Editing the favourite lists

You can make your own favourite service lists. In fact, you can define multiple favourite service lists, each being a ‘group’ of chosen services.



Select the installation > Edit Services > Edit Favorite List menu. You should see a screen like the left figure. There are three columns:

- Group list (left)
- Favourites list (centre)
- Services list (right)

The services list contains all available services, whereas the favourites list contains only chosen services that have been added to the highlighted group. As you move the highlight bar up or down on the group list, favourite services belonging to the highlighted group get shown in the favourites list.

You can add up to 30 groups. To add a group, select the NEW item in the group list, then the on-screen keyboard appears. See §6.3 for how to use the on-screen keyboard.

To rename a group, put the highlight bar on the group entry you want and press the **F2** button, then the on-screen keyboard appears. See §6.3 for how to use the on-screen keyboard.

To delete a group, put the highlight bar on the group entry you want and press the **F3** button, then a message box appears asking you for confirmation. If you select Yes, it will be deleted.

You can add a favourite service to a group by taking the following steps:

1. Put the highlight bar on a desired group entry in the group list and press the **OK** button to select it. The highlight bar then moves to the services list.
2. To add a service to the selected group, put the highlight bar on a desired service entry and press the **OK** button. The selected service entry gets added to the favourite list. Repeat this step to add more entries.
3. Press the **F1** button and the highlight bar gets moved to the favourite list. You can delete a favourite entry with the **OK** button.
4. To select another group, press the **F1** button again. By pressing the **F1** button, the highlight bar gets moved to each column.

Furthermore, you can rearrange a group's favourites by moving a favourite entry. To move a favourite entry, put the highlight bar on the favourite entry you want and press the **F2** button. Move it to a desired place and press the **OK** button.

To add radio services, press the **TV/R** button, then radio service entries get listed in the services list. To recall the television services list after adding radio services, press the **TV/R** button again.

For how to use the favourite service lists you organised, refer to §5.2.2.

## 6.3 How to use on-screen keyboard



You can move the highlight key horizontally with the  and  buttons and vertically with the  and  buttons. Pressing the  button on a key enters its letter in the input line.

To type a space, select the **Space** key or alternatively press the  button. To type lower case letters or numerals, select the **Shift** key or alternatively press the  button. To delete a letter, put the cursor to the right of the desired letter on the input line and then select the **Del** key or alternatively press  button. You must select the **Save** key or alternatively press the  button to complete naming; otherwise if you press the **(EXIT)** button, it will not be named.

## Chapter 7

# Recording and Playback

You can record TV programmes into an external hard drive as well as the built-in hard drive.

### NOTE

To use an external hard drive, you must connect the external hard drive to the USB port or the eSATA port of the digital receiver. You cannot play back the recordings with a regular MPEG player on your computer because they are formatted differently from the standard MPEG format. Visit <http://www.kmplayer.com> where you can find an MPEG player able to play them back.

### CAUTION

Do not disconnect the external hard drive while recording or playing back. It may cause damage to recorded programmes. You should disconnect the external hard drive in standby mode only.

You can record a service while watching another one with this digital receiver. You can record two different services

while watching another one only if two among the services are provided through the same transponder. The digital receiver has two tuners so that you can enjoy the following:

- You can record two different services while playing back a previously recorded programme.
- You can record two different services while watching one of them using the time-shift feature. See §5.5 for the time-shift feature.

## 7.1 Recording a programme



Once a recording gets started, a symbol like the left figure will be displayed at the top right of the screen for a few seconds.

When you are watching a different service from the service being recorded, you will see a number on the centre of the symbol, this indicates the order that the recording has started. To record two programmes simultaneously, two tuners are allocated for the recording. Therefore, you can only change to a limited number of services while the two programmes are being recorded.

### CAUTION

**Do not move the digital receiver nor pull out the power plug while it is running. It may cause damage to recorded programmes. Topfield is not responsible for damages inflicted on files that are stored on the hard drive.**

### 7.1.1 Instant recording

To instantly record a programme you are watching at present, press the  button.

Pressing the  button will not pause the current recording like it does with a video recorder. Instead, pressing the  button

will pause the live show and begin time-shifting within the current recording even with the Time Shifting option disabled. However, it is still possible to pause a recording.



After a recording has started, pressing the  button displays a menu like the left figure, in which you can set the recording duration.

To specify an arbitrary recording duration, set the Duration option as you desire with the  and  buttons and press the  button; the recording will end at the specified time.

If the information about the next programme is provided by the electronic programme guide, the **After this program** and **After next program** options will be enabled. Once the **After this program** option is selected, the current recording will stop at the time when the current programme is scheduled to end. Likewise, once the **After next program** option is selected, the current recording will stop at the time when the next programme is scheduled to end.



To stop recording, press the  button; then a box like the left figure appears, which shows the programmes currently being recorded. Select recording by using navigation buttons then press  button to stop the recording.

While a recording is going on, you can watch or record another service. To additionally record another service, switch to the service you want to record, and press the  button. Once a recording is started, it is put on the recorded programme list even though it is not finished yet. The recording file is named the program name if available or after its service name with a suffix of a number. To view the recorded programme list, press the  button or alternatively select the **Recording > Recorded Program** menu. See §7.2 for detailed description about the recorded programme list.

### 7.1.2 Timer recording

You can set a programme to be recorded at a specific time. Even if the digital receiver is in standby mode, it will switch into operation mode and start recording at a specified time. When the recording comes to the end, the digital receiver will switch back into standby mode again in one minute. However, if you press any button on the remote control or on the front panel even just one time, the digital receiver will not switch into standby mode.



To add a timer recording, select the **Recording > Reservation** menu; then the timer list will be displayed. To add a new timer event, press the **[F1]** button, and a box like the left figure appears. Take the following steps:

1. Set the **Record** option to **On** to make a recording. If this option is set to **Off**, the digital receiver will turn on at the specified time but not record; instead, you may record with your video recorder or suchlike in this case.
2. You may have four sources for recording: TV, radio, the video rom the external device linked to the Composite video input, and the video from the external device linked to the Component video input. Set the **Type** option to your desired source.
3. Set the **Satellite** option to the satellite which transmits the service you want. Pressing the **[OK]** button on this option displays a satellite list, from which you can select your desired satellite. Set the **Tuner Select** option to a tuner to receive your desired service.
4. Set the **Service** option to the service which provides the programme you want. Pressing the **[OK]** button on this option displays a services list, from which you can select your desired service.
5. Set the **Mode** option as you desire. There are five timer modes:
  - One Time means literally 'one time'.
  - Every Day means literally 'every day'.

Every Weekend means 'Saturday and Sunday every week'.

Weekly means 'one day every week'.

Every Weekday means 'from Monday to Friday every week'.

If your favourite programme is broadcast at weekends and you wish to record every episode of the programme, set the Mode option to Every Weekend.

6. Set the Date option to a desired date, on which the digital receiver will turn on. The date format is *day/month/year-day of the week*.

Set the Start Time option to a desired time, at which the recording will be started. The time format is *hour:minute*.

7. Set the Duration option to a desired time, in which the recording will be finished.

8. Pressing the **OK** button on the File Name option displays the on-screen keyboard, with which you can specify a file name for the timer recording. If you do not specify anything, it will be named after the service name. See §6.3 for how to use the on-screen keyboard.

9. To set a recording reservation with the above settings, select the OK item; otherwise, it will not be saved and will not occur.

You can also edit or delete timer events in the timer list. To edit a timer entry, put the highlight bar on the entry you want and press **OK** button; then appears a box in which you can change its settings in the same manner as making a new one.

To delete a timer event, put the highlight bar on the entry you want to remove and press the **F2** button, then you get asked for confirmation. With the choice of **Yes**, it will be deleted. To delete all timer event, press the **F3** button.

You can sort timer events by time with the **F4** button.

### 7.1.3 Scheduling recordings using the programme guide



If the electronic programme guide is properly provided, you can make timer events on it. The instructions on how to make timer recordings using the electronic programme guide are as follows:

1. Press the **[GUIDE]** button to display the electronic programme guide.
2. Select a programme you want to record with the navigation buttons.
3. To make a timer event without recording, press the **[OK]** button; the letter **P** is displayed. To make a timer event with recording, press it once more or alternatively press the **[RECORD]** button; then the letter **R** is displayed.
4. Pressing the **[OK]** button once more will cancel the timer.

### 7.1.4 Recording a time-shifted programme

While watching a programme with time-shift, you can record it by performing the following steps:

1. Press the **[▶]** button to display the progress bar.
2. To move to the beginning of the desired scene, hold down the **[⏮]** or **[⏪]** button until it is reached.
3. Press the **[RECORD]** button to start recording. The time-shift buffer from that position onwards will now be recorded.

4. Press the  button to stop recording.
5. Press the  button once more to stop time-shift.

See §5.5 for detailed description about the time-shift feature.

### 7.1.5 Recording a pay service programme

You can record a pay service programme without the subscription card. However, you need the subscription card to play it back because it has not been descrambled. So it is recommended to record pay service programmes with a proper subscription card so that they can be descrambled and recorded. In that case, you can enjoy them without the subscription card like free services.

To record a programme of a pay service in descrambled form, perform the following steps:

1. Select a programme of a pay service you want to record.
2. Make sure that the subscription card is inserted in the slot on the front of the digital receiver.
3. Start recording.
4. Do not switch to other service nor use time-shift until it is finished.

#### NOTE

If you switch to other service or use time-shift in the middle of recording a pay programme, it will be recorded without descrambling from that moment. Even if the recording is only partially descrambled, you need the subscription card to play it back.

## 7.2 File archive

When a programme is recorded, it is stored as a file on the hard drive of the digital receiver. You can select a recording to play back from the recorded programme list.



Select the Recording > Recorded Program menu or alternatively press the **[RECORD]** button to display the recorded programme list. The file information is comprised of the following elements: file number, filename, recording time, playing duration, file size and so on.

You can play, move, delete, rename and lock a recording file. You can also sort the recording files by file name, playing duration or file size. In addition, you can make a new folder.

### 7.2.1 To delete a recording

To delete a recording, put the highlight bar on it and press the **[F4]** button; then you get asked for confirmation. If you select **Yes**, it will be deleted.

### 7.2.2 To sort recordings

To sort the recordings, perform the following steps:

1. Press the **[Option]** button to display additional options.
2. Set the Sorting option to **Alphabetic**, **Time** or **Size** as you want.
3. Press the **[EXIT]** button.
4. They will be sorted by the specified option.

### 7.2.3 To lock a recording

To lock a recording so that other persons cannot play or delete it, perform the following steps:

1. Put the highlight bar on a desired recording.
2. Press the **[Option]** button to display additional options.
3. Set the Lock option to Locked.
4. Press the **[EXIT]** button.
5. The lock symbol () is displayed on it.

If you select a locked recording to play it back, you will be asked for your personal identification number.

### 7.2.4 To rename a recording

To change the name of a recording, perform the following steps:

1. Put the highlight bar on a desired recording.
2. Press the **[Option]** button to display additional options.
3. Select the **Rename** option, and the on-screen keyboard appears. Change the name and save it. See §6.3 for how to use the on-screen keyboard.

### 7.2.5 To make a new folder

To make a new folder, press the **[F2]** button; then a new folder named **GROUP #** is created. You can change its name in the same manner as renaming a recording. See above.

### 7.2.6 To move a recording to another folder

To move a recording to another folder, put the highlight bar on a desired recording and press the **F3** button. If an external hard drive is connected to the digital receiver, you get asked to select between the built-in and external hard drive. Select Internal; then the folders are listed. Once you choose a folder, the recording is moved to it.

## 7.3 Playing back a recording

When a programme is recorded, its additional contents such as audio track or subtitle track are also recorded together. So you can enjoy them while playing back a recording.

The instructions on how to play a recording are as follows:

1. Select the **Recording > Recorded Program** menu or alternatively press the  button to display the list of recorded programmes.
2. Put the highlight bar on a desired recording and press the **OK** button, then additional options appear.
3. To play from beginning, set the **Starting Position** option to **Beginning**; to play from the point that you have stopped at the last time, set it to **Continuing**. To start playback, select the **Play** item.
4. To stop playback, press the  button.

During a playback, you can enjoy the following tricks:

- To see the detailed information about the currently played recording, press the  button; then the information box appears and shows its file name, playing duration, programme information, and so on.
- To pause playback, press the  button. To resume it, press the  button.

- To go forward, hold down the ⏪ button; to go backward, hold down the ⏩ button.
- To display the progress bar, press the ▢ button; to hide it, press the ▢ button again.
- When the progress bar is hidden, you can move to a desired scene by entering the percentage with the numeric buttons.

### 7.3.1 To navigate using the progress bar

First press the ▢ button to display the progress bar, then:

- To go forward, hold down the ⏪ button; to go backward, hold down the ⏩ button.
- To bookmark a position, refer to §7.3.4.
- If there are no bookmarks, you can jump forward, by the skip forward menu setting time, by pressing the F3 button.
- To jump to start of a recording, press the ⏮ button.
- To jump to end of a recording, press the ⏭ button.
- To hide the progress bar, press the ▢ button again.

### 7.3.2 To play in slow motion

To watch in slow motion during a playback, press the ▢ button. If you press it repeatedly, the playback speed changes in 4 steps: 1/2, 1/4, 1/8 and 1/16 times. To resume normal speed, press the ▢ button.

### 7.3.3 To play in fast motion

To watch in fast motion during a playback, press the ⏮ button. If you press it repeatedly, the playback speed changes. To resume normal speed, press the ▢ button.

You can play not only forward but also backward in fast motion. To play backward, press the  button. If you press it repeatedly, the playback speed changes. To resume normal speed, press the  button.

You can change the playback speed in 3 steps (4, 16 and 64 times) or in 6 steps (2, 4, 8, 16, 32 and 64 times). See §4.7.

### 7.3.4 To make a bookmark



You can mark favourite parts of a recording by creating bookmarks, and then jump to them. Bookmarks are stored with the recording so that you can use them again afterwards. To make bookmarks, perform the following steps during playback:

1. Press the  button to display the progress bar.
2. To add a bookmark, press the  button at a desired scene; then you will see a small dot appear above the progress bar like in the picture above.
3. To jump forward to next bookmark, press the  button.

### 7.3.5 To play back a recording repeatedly

You can play back a recording repeatedly both in whole and in part.

To play back in whole, press the  button when the progress bar is hidden; then the repetition symbol () is displayed on the information box. To cancel it, press the  button again.

To play back in part, perform the following steps:

1. Press the  button to display the progress bar.
2. Move to the beginning scene of the part you want to play repeatedly by holding down the  or  button.
3. Press the  button, then the pointer starts to blink.
4. Move to the end scene; the part is marked in black.
5. Press the  button again to start repeated playback.
6. To cancel it, press the  button when the progress bar is displayed.

### 7.3.6 To play back recordings in sequence

You can play several recordings continuously in sequence by performing the following steps:

1. Press the  button or alternatively select the Recording > Recorded Program menu to display the list of recorded programmes.
2. Select each desired recording with the  button. Once a recording is selected, it gets numbered.
3. Press the  button to start playback.
4. The selected recordings are played in the sequence that they are numbered.
5. To jump to start of next selected recording, press the  button to display the progress bar, then press the  button.

### 7.3.7 To play back a scrambled recording

If you have recorded a programme of a pay service with the subscription card, you can play it as freely like one of a free service. Otherwise you need the subscription card to play it

back, because it has been recorded without unscrambling even though it may have been partially descrambled.

On the recorded programme list, a purely green \$ indicates the recording has been wholly descrambled; on the other hand, a yellowish green \$ indicates it has been partially descrambled, and a purely yellow \$ indicates it has not been descrambled at all.

Refer to §7.1.5 for how to record a pay service programme.

## 7.4 Editing a recording

You can cut out or save a part such as commercial from a recording by performing the following steps:

1. Press the  button to display the progress bar during a playback.
2. Move to the beginning scene of the part you want to edit by holding down the  or  button.
3. Press the  button, then the pointer starts to blink.
4. Move to the end scene; the part is marked in black.
5. Press the  button, then the edit options are displayed.
6. If you choose the Cut option, it will be removed from the original recording and discarded.
7. If you choose the Save option, the cut will be saved in a new file which is named after the original recording with a suffix of 'CUT' and a number.

### NOTE

Edited files cannot be fast-forwarded and rewinded. The  and  buttons are still active for this feature.

## 7.5 Copying a recording

When you record a pay service without the subscription card, the recorded file will not be descrambled. You can descramble and record the file in whole or in part during a playback by performing the following steps:

1. Start playback of a recording you want.
2. Move to a scene from which you want to start copy by holding down the  or  button.
3. Press the  button, then it will be copied in a new file which is named after the original recording with a suffix of 'COPY' and a number.
4. To stop copying, press the  button.

## 7.6 Formatting the hard disk

### NOTE

If a new hard drive is installed, it must be formatted because you can neither record nor use time-shift with an unformatted hard disk.

You can delete permanently all contents stored in a hard drive by formatting it. Select the **Installation > System Recovery > Format Hard Disk** menu; then select the hard drive you want to format. To format the built-in hard drive, select the option to **Internal**; otherwise, select the option to **External** to format the external hard drive which is connected to the digital receiver. With pressing the  button, you get asked for confirmation. Formatting will start with the choice of **Yes**.

### NOTE

The hard drive on the digital receiver will be formatted in the JFS file system.

## Chapter 8

# Entertainment

This digital receiver provides several special features for entertainment.

### NOTE

To fully enjoy all of the features described in this chapter, you had better configure the network settings properly. For how to configure the network settings, refer to [§9.2](#).

## 8.1 Copying files

### NOTE

If your external hard drive is formatted in the FAT16/32 or NTFS, it can only be read. To enable to write and read, the hard drive must be formatted in the JFS or Ext2/3 file system. For how to format hard drive on the digital receiver, refer to [§7.6](#).

You can copy files between the built-in hard drive and external hard drive.

To copy from internal to external hard drive perform the following steps:

1. Connect an external hard drive to the digital receiver.
2. Press the  button and then press the  or  button to select a desired file list except the External list.
3. Put the highlight bar on a desired file and press the  button.; then you get asked to select between the built-in and external hard drive.
4. Select External; then the folders are listed.
5. Select a folder and press the  button; then the selected file will be copied into the external hard drive.

To copy from external to internal hard drive, perform the following steps:

1. Connect an external hard drive to the digital receiver.
2. Press the  button and then press the  or  button to select the External List.
3. Put the highlight bar on a desired file and press the  button.; then the list of folders gets displayed.
4. Select a folder in the built-in hard drive.
5. Press the  button; then the selected file will be copied into the built-in hard drive.

## 8.2 Playing back MP3 files

You can enjoy music or audio books in MP3 format on the digital receiver.

Refer to §8.1 for how to copy a file from an external hard drive into the built-in hard drive of the digital receiver.

To play an MP3 file, perform the following steps:

1. Select the Entertainment > MP3 Player or press the  button and then the  or  button to display the MP3 file list.
2. Put the highlight bar on a desired file; if you want to play several files, select them with the  button.
3. Press the  button to start playback.
4. To stop playback, press the  button.

To play all MP3 files in a subfolder, put the highlight bar on a desired folder, and press the  button and to change from one file to the next or back use the  or  buttons.

### 8.3 Playing back video files

You can enjoy video files in DivX, vob, mkv, or mp4 format on the digital receiver.

#### NOTE

This digital receiver supports only version 3.x, 4.x, 5.x, and 6.x of the Divx format.

Refer to §8.1 for how to copy a file from an external hard drive into the built-in hard drive of the digital receiver.

To play a video file, perform the following steps:

1. Select the Entertainment > Media Player or press the  button, and then the  or  button to display the video file list.
2. Put the highlight bar on a desired file; if you want to play several files, select them with the  button.
3. Press the  button to start playback.
4. To stop playback, press the  button.

## 8.4 Network game

You can play a network game named Battle Tank on the digital receiver. You can play the game by yourself or with others via the network.


### 8.4.1 Single mode

To play the game in single mode, select the Entertainment > Game > Battle Tank (Single); then perform the following steps:

1. Select game mode.
2. Select a character.
3. Buy items as you desire.
4. Select a map. If you play the game by yourself, you do not need to select a map.
5. Start playing.

If you want to out of the game while playing, press the **EXIT** button on the remote control.

### Selecting game mode

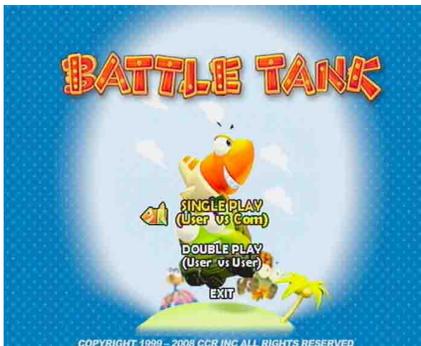

When you select the Entertainment > Game > Battle Tank (Single), you should see a screen like the left figure.

You can select game mode as you desire. If you want to out of the game, select the EXIT option.

There are two modes as below:

Single play playing by yourself.

Double play playing with another user.

Select a mode with the  and  buttons and press the  button.

### Selecting a character



After selecting game mode, you should see a screen like the left figure.

Select a character referring to Table 8.1.

If you select the , a character will be chosen randomly.

When you play the game for the first time, you can select only two characters. To get a new character, you have to play in single mode and clear all 13 stages.

**Table 8.1: Buttons for selection**

Action	1 Player	2 Player
Left		
Right		
Up		
Down		
Select		

You can see the selected character's information of the 1 Player on the left bottom of the screen. Also you can see the selected character's information of the COM or 2 Player on the right bottom of the screen.

**NOTE**

You have to select a character in 30 seconds; otherwise, the character will be selected automatically.

**Buying items**

After selecting a character, you should see a screen like the left figure. Buy a item referring to Table 8.1.

When you finish selecting items, select the READY on the screen as follows:

- **1 Player** : Select the READY using the **(MENU)** button and press the **(OK)** button.
- **2 Player** : Select the READY using the **(F1)** button and press the **(F2)** button.

**Selecting a map**

After buying items, you should see a screen like the left figure.

Select a map with the **(D)** and **(C)** buttons.

After selecting a map, select the START on the screen.

Select the START using the **(MENU)** button and press the **(OK)** button.

**NOTE**

If you play the game by yourself, you do not need to select a map.

**Playing the Battle Tank**

When you start the game, you should see a screen like the following figure. Play the game referring to Table 8.2.



- 1** The character's weapons.
- 2** The angle of the character.
- 3** You can see the direction and speed of wind.
- 4** You can see the information of the character as follows:  
ENERGY displays the character's energy.  
POWER displays the power of shot.  
MOVE displays the movement bar.
- 5** You can check your position and enemy's position on this mini-map.

- 6** You can use those items during playing game.
- 7** Displays current player.
- 8** Displays the turn time. If the time is over, turn will be changed to the other player.

Table 8.2: Buttons for playing

Action	Remote Control
Changing weapon	 
Changing angle	 
Moving character	 
Using items	   
Skipping turn	
Changing view of map	   
Firing a shot	

### 8.4.2 Network mode

To play the game in network mode, select the Entertainment > Game > Battle Tank (Network); then perform the following steps:

1. Select a game server.
2. Log on to the game server.
3. Joining a game.
4. Selecting a character, map and items for playing.
5. Start playing.

#### NOTE

Refer to the BATTLE TANK user guide for how to play Battle Tank in network mode. You can download the guide from the Topfield website, <http://www.i-topfield.com>.

## Chapter 9

# Accessing to The Digital Receiver via The Internet

### NOTE

The following section describes complex functions that should only be used by owners with advanced computer knowledge.

This digital receiver provides features of web service and FTP service, by which through the network you can make scheduled recordings, or transfer recording files to your computer.

Here you need a router, which will connect the digital receiver to your computer or to the Internet.

To use the network features of the digital receiver, you should take the following steps:

1. Configuring your router for the digital receiver.
2. Configuring the network settings on the digital receiver.
3. Accessing the home page of the digital receiver. Refer to §9.3 for detailed description about things you can do by using the web service of the digital receiver.

#### 4. Accessing the FTP Server of the digital receiver.

##### NOTE

The web server and FTP server of the digital receiver do not work in standby mode. So it must be powered up at all times if you wish to use the web service at any time.

## 9.1 Configuring the router

In this section, the setup program of *WRT54G*, which is a router manufactured by *Linksys*, will be referred to as an example of how to configure the router for network access.

##### NOTE

For detailed description about how to set up the router, refer to the manual of your router.

### 9.1.1 To access within the local area network

Once your router is powered up, a local area network gets created whether or not it is connected to the Internet.

Local IP Address :	<input type="text" value="192"/> . <input type="text" value="168"/> . <input type="text" value="1"/> . <input type="text" value="1"/>
Subnet Mask :	<input type="text" value="255"/> . <input type="text" value="255"/> . <input type="text" value="255"/> . <input type="text" value="0"/> <input type="button" value="v"/>
DHCP Server :	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Starting IP Address :	<input type="text" value="192.168.1"/> . <input type="text" value="100"/>
Maximum Number of DHCP Users :	<input type="text" value="50"/>
Client Lease Time :	<input type="text" value="0"/> minutes (0 means one day)
WINS :	<input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/>

You can let the router automatically assign a dynamic IP address to the computers or devices connected to the network by enabling the DHCP server of the router. In this case, you can access the digital receiver with the IP address which is assigned to the digital receiver by the router.

If the digital receiver reboots, a new dynamic IP address will be assigned to it. You had better assign a static IP address to the digital receiver to avoid this inconvenience. For how to assign a static IP address, refer to the manual of your router;


for how to specify a static IP address on the digital receiver, see §9.2.

### 9.1.2 To access over the Internet

When you are away from home, you can access the digital receiver inside your home if your router is configured to route access to the digital receiver by means of port forwarding. Via this feature, your router will lead you to the digital receiver when you access your router with its IP address.

Port Range					
Application	Start	End	Protocol	IP Address	Enable
PVRHTTP	80	to 80	Both	192.168.1.161	<input checked="" type="checkbox"/>
PVRFTP	20	to 21	Both	192.168.1.161	<input checked="" type="checkbox"/>
	0	to 0	Both	192.168.1.0	<input type="checkbox"/>
	0	to 0	Both	192.168.1.0	<input type="checkbox"/>

Your router may be assigned to a dynamic IP address by an Internet service provider. So if the router has rebooted, you cannot access it unless someone in your home can inform you of the changed IP address. However, many routers support Dynamic Domain Name System (DDNS) service, which can settle this problem. The following image is an example of one such DDNS service provider.

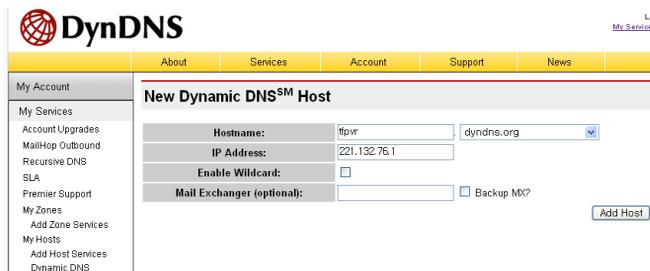

If you use a DDNS service, you can access your router with

a domain name. The instructions on how to use the DDNS service are as follows:

1. Make an account on a web site providing DDNS service, which should be supported by your router.
2. Configure your router with the account so that it can communicate with the web site.

DDNS Service :

---

User Name :

Password :

Host Name :


Internet IP Address : 221.132.76.3

Status : DDNS is updated successfully

Whenever a new dynamic IP address is assigned to the router, it will inform the DDNS service provider of the new IP address. This makes it possible that you access the router with a domain name at any time.

## 9.2 Configuring the network setting on the digital receiver

You should configure the LAN settings to enable the web service and FTP service.

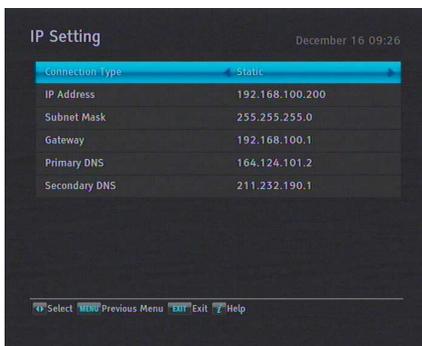

Select the Installation > Network Setting > IP Setting menu.

You may get the digital receiver to be assigned a dynamic IP address. If so, set the **Connection Type** option to DHCP.

You can view the dynamic IP address assigned to the digital receiver by your router at the **IP Setting** menu.

Sometimes when the digital receiver is restarted, the dynamic IP address will be changed and you will have to check it at the **IP Setting** menu to access the digital receiver. To avoid this cumbersome thing, you had better assign a static IP address rather than dynamic one.

To assign a static IP address, set the **Connection Type** option to **Static**, then the **IP Address**, **Subnet Mask**, **Gateway**, **Primary DNS** and **Secondary DNS** options become enabled. You have to set these options to match with the configuration of your router.

### 9.3 Accessing the web server

To Access to the web server, set the **Installation > Network Setting > Web Server** option to **Enable**.


Select the **Installation > Network Setting > User Info** menu. At this time, you have to enter **Personal Identification Number (PIN)**. Then, set the **User ID** and **Password** options as you desire. And select **OK** to save the settings. When you access to the web server, you will be asked for the account that was made with these options.

In way of the web server of the digital receiver, you can do the following:


- Download recording files.
- Create new recording timers.
- View information about the programme currently being recorded.
- View the system information of the digital receiver.

To access the digital receiver's home page through your web browser, enter its IP address, or domain name if you use a

DDNS service. For the DDNS service, refer to the user manual of your router.

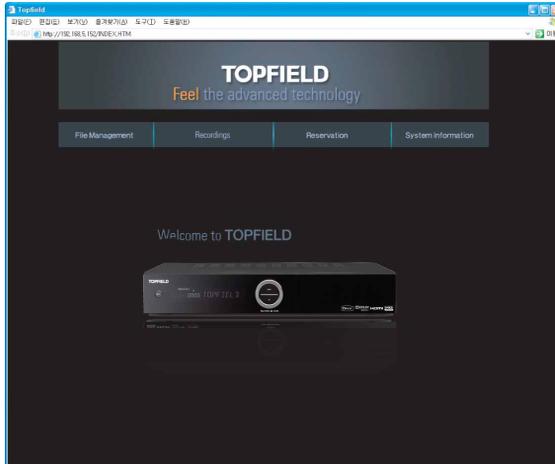

You cannot only download but also upload recording files or MP3 files in the File Management page. However, if you wish to download or upload a file of which size is 2 gigabyte or more, it is recommended using the FTP server rather than the web server.

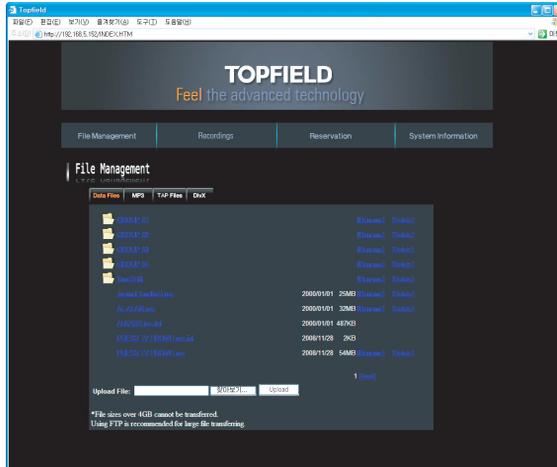

**NOTE**  
The maximum number of user connections is one. This means that you cannot access the web server while someone else is occupying it.

### 9.4 Accessing the FTP server


To Access to the FTP server, set the Installation > Network Setting > FTP Server option to Enable.

Select the Installation > Network Setting > User Info menu. At this time, you have to enter Personal Identification Number (PIN). Then, set the User ID and Password options as you desire. And select OK to save the settings. When you access to the FTP server, you will be asked for the account that was made with these options.


**NOTE**  
You can access the FTP server with an anonymous account.

However, with an anonymous account you can only download files. You cannot upload files.

You need an FTP client program to access the FTP server of the digital receiver.

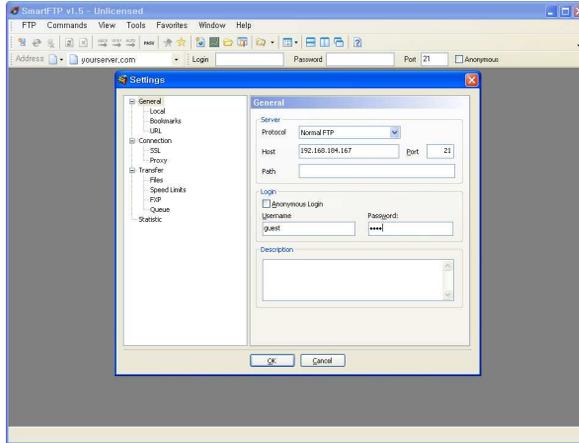

You can log into the FTP server with the user name and password specified in the Installation > Network Setting > User Info menu.

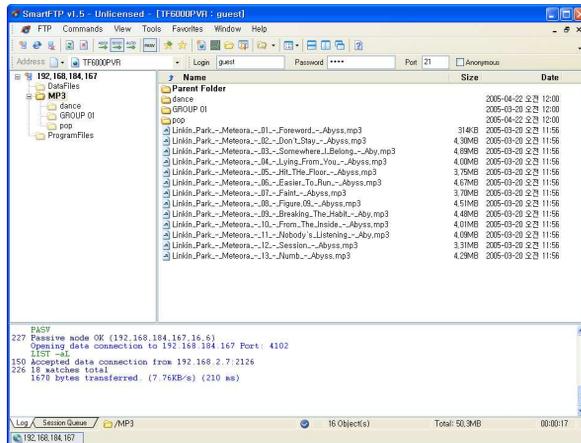

**NOTE**

The maximum number of user connections is one. This means that you cannot access the FTP server while someone else is occupying it.

## Chapter 10

# Firmware Update

The digital receiver has a stable and convenient firmware to use. However, once in a while a new firmware may be released to improve the digital receiver. You can get the latest firmware and a firmware update tool, which runs on most versions of Windows, from the Topfield website, <http://www.i-topfield.com>.

### 10.1 Checking the firmware information




You have to check the firmware information of your digital receiver before downloading a new firmware. Select the Information > System Status menu. You should see a screen like the left figure. Remember the number of the System ID item, and download the latest firmware with the same system identification.

**NOTE**

It is only allowed to update with the firmware of which system identification is identical to that of yours. Otherwise you will fail in firmware update.

## 10.2 From a USB memory

If you have a USB memory stick, you can update the firmware from it by performing the following steps:

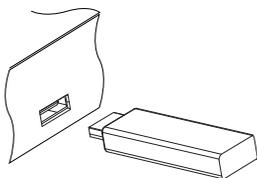


1. Download a new firmware from the Topfield website.
2. Copy the firmware file to your USB memory stick.
3. Insert the USB memory stick into the USB port on the digital receiver.
4. Select the **Installation > Firmware Upgrade > USB Firmware Upgrade** menu, and the files in the USB memory will be listed.
5. Place the highlight bar on the right firmware file and press the **OK** button, and a countdown will be displayed on the front display of the digital receiver.
6. When the 'END' message appears, restart the digital receiver.

## 10.3 From the firmware server via the Internet

You can update the firmware from the firmware server which is run by Topfield via the Internet. Make sure that the digital receiver is connected to your router before configuring the network settings on the digital receiver.

**NOTE**

For detailed description about how to set up the router, refer to the manual of your router.

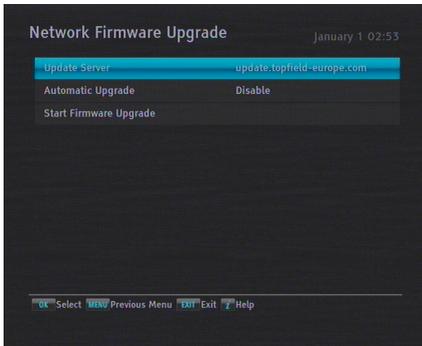


Select the Installation > Firmware Upgrade > Network Firmware Upgrade menu. You should see a screen like the left figure.

To enable the digital receiver to update the firmware automatically when a new firmware is available, set the Automatic Upgrade option to Enable. Otherwise if you want to do that by yourself, select the Start firmware upgrade option; then you get asked for confirmation. If you select Yes, it checks up whether a new firmware is available, and if any, it will start firmware update.

To change the update server name, press the **OK** button at the Update Server option; then, the on-screen keyboard appears. See §6.3 for how to use the on-screen keyboard. You can get the server name from the web site, <http://www.i-topfield.com>.

## 10.4 Over the air

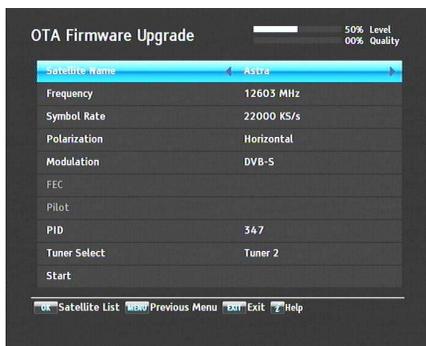

You can get a new firmware over the air. Select the Installation > Firmware Upgrade > OTA Firmware Upgrade menu. You should see a screen like the left figure. Selecting the Start command starts firmware update.

Satellite	<i>Astra (19.2°E)</i>
Frequency	12603 MHz
Symbol Rate	22000 KS/s
Polarisation	Horizontal
PID	347

On the left table is presented the transponder information appointed by the manufacturer, Topfield, for firmware update.

This transponder information can be changed. You can get the information from the website, <http://www.i-topfield.com>.

## Appendix A

# Universal Remote Control

The universal remote control allows you to operate the most important functions such as power on/off and volume control on your television, audio-video receiver, or DVD player. For the use of buttons, refer to Table A.1. To be able to control the device, you must adapt the remote control to the device first. Take the following steps:

1. Turn on the device you want to operate.
2. Point the remote control at the remote sensor on the device.
3. Hold down the **OK** and device button simultaneously for two seconds until LED lamp flashes on. For example, if you want to operate your television with the remote control, press the **OK** and **TV** buttons simultaneously.
4. Find the manufacturer of the device from the codes list.
5. Enter the three-digits code you have found for your device and press the **OK** button.
6. If the setting is finished correctly, LED lamp blinks twice and the device will be turned off. Otherwise, repeat from the step 2.

If you cannot find a code for your device, do as follows:

1. Turn on the device you want to operate.
2. Point the remote control at the remote sensor on the device.
3. Hold down the **OK** and device button simultaneously for two seconds until LED lamp flashes on. For example, if you want to operate your television with the remote control, press the **OK** and **TV** buttons simultaneously.
4. Press the **CHANNEL+** or **CHANNEL-** button until the device turns off.

If you want to find out the number which you set for your device, do as follows:

1. Hold down the **OK** and device button simultaneously for two seconds. For example, if you want to know the number which you set for your television, press the **OK** and **TV** buttons simultaneously.
2. Press the **i** button. Then LED lamp will show the number with blinks. For example, if the number is 3, LED lamp will blink three times. In case of 0, LED lamp will blink ten times.

You can reset the settings. To do that, do as follows:

1. Hold down the **TV** and **0** buttons simultaneously for more than five seconds.
2. Each device button blinks three times in the following order: **PVR** → **DVD** → **AUX** → **TV**
3. After that, all settings will be reset to the manufacturer's factory settings.

**NOTE**

Some buttons may not work properly depending on a device. If your device code is not listed on the following pages, you will not be able to use this remote as a universal remote for your specific device.

Table A.1: Operating buttons

PVR	TV	DVD	AUX
	Power on/off	Power on/off	Power on/off
	Volume up	Volume up	Volume up
	Volume down	Volume down	Volume down
	Mute	X	Mute
	X	X	Channel up
	X	X	Channel down
	0	0	X
	1	1	1
	2	2	2
	3	3	3
	4	4	4
	5	5	5
	6	6	6
	7	7	7
	8	8	8
	9	9	9
	TV INPUT	X	X
	X	Up	X
	X	Down	X
	X	OK	X
	Left	Left	X
	Right	Right	Right
	X	Menu	X
	X	Guide	X
	X	Exit	Exit
	X	Stop	X
	X	Rewind	X
	X	Pause	X
	X	Play	X
	X	Fast forward	X

## A.1 Code list for television sets

### A

ACCENT	049, 063
ACEC	112
ACURA	195
ADMIRAL	065, 076, 163, 171, 190, 307, 324, 369
ADYSON	379
AGASHI	076, 379
AGEF	324
AIKO	049, 063, 076, 102, 141, 172, 195, 225, 379
AIM	049, 063
AIWA	376, 377
AKAI	019, 049, 050, 055, 063, 076, 102, 107, 123, 133, 139, 141, 150, 172, 174, 182, 195, 209, 225, 326, 333, 379, 428, 432, 433, 437
AKIBA	006, 049, 063, 123, 380
AKITO	049, 063, 106
AKURA	006, 049, 076, 096, 123, 195, 419, 426
ALARON	042, 334
ALBA	018, 044, 049, 050, 107, 123, 134, 163, 179, 184, 195, 225, 228, 232, 239, 379, 413, 421, 431
ALBIRAL	121, 326, 372
ALCYON	407
ALLORGAN	050, 094, 236, 334
ALLSTAR	049, 063
AMPLIVISION	113, 379, 421, 425

AMSTRAD	004, 011, 049, 063, 076, 123, 131, 172, 195, 225, 426
ANAM	049, 063, 195
ANGLO	076, 195
ANITECH	049, 063, 076, 195, 407
ANSONIC	045, 049, 063, 107, 112, 195, 210, 242, 391, 413, 421
APOLLO	165
ARC EN CIEL	029, 034, 074, 182, 186, 415, 424
ARCAM	029, 379, 424
ARDEM	392
ARISTONA	049, 050, 063, 065, 079, 112, 158, 160, 188
A.R.SYSTEM	049, 063
ARTHUR MARTIN	075, 107, 127, 133, 136, 139, 148, 153, 307, 425
ASA	003, 020, 065, 078, 080, 091, 117, 146, 171, 197, 235, 307, 319, 324, 341, 375, 406, 408
ASBERG	049, 063, 407
ASORA	195
ASTRA	195
ASUKA	006, 050, 076, 123, 379
ATLANTIC	049, 050, 063, 113, 236, 242, 379
ATORI	195
AUCHAN	107, 425
AUDIOSONIC	031, 049, 063, 074, 076, 195, 213, 379, 392, 421
AUDIOTON	050, 076, 379, 392, 421
AUSIND	075, 090, 407
AUTOVOX	050, 071, 078, 079, 080, 083, 090, 147, 156, 236, 254, 305, 319, 323, 324, 379, 407, 413, 416

AWA	018, 049, 063, 131, 195, 206, 320, 379, 426, 433	BRANDT ELECTRONIQUE	029, 034, 074, 182, 186
AYOMI	411	BRINKMANN	049, 063, 163
<b>B</b>		BRION VEGA	049, 063, 065, 083, 167, 172, 173, 181, 196, 324, 356
BAIRD	074, 102, 182, 209, 321, 329, 379, 409	BRITANNIA	379
BANG & OLUFSEN	324	BROTHER	076
BARCO	107, 355, 371, 372, 422	BRUNS	056, 065, 324
BASIC LINE	006, 031, 049, 107, 123, 159, 195, 207, 226	BSR	094, 107, 110, 139, 168, 314
BASTIDE	379	BTC	123
BAUR	012, 049, 053, 063, 107, 150, 172, 244, 245, 246, 247, 301, 357, 414, 416	BUSH	006, 018, 049, 076, 094, 106, 107, 123, 134, 139, 142, 143, 172, 179, 195, 209, 223, 225, 226, 232, 239, 307, 379, 416
BAZIN	379	BUSH(UK)	107, 147, 168
BEKO	063, 184, 240, 241, 392, 421, 433	<b>C</b>	
BEON	049, 063, 163	CAPSONIC	076
BEST	213, 421	CARAD	049, 063
BESTAR	049, 063, 421	CARENA	049, 063, 380
BINATONE	379	CARREFOUR	018, 406
BLACK STAR	413	CARVER	177
BLACKTRON	006	CASCADE	049, 063, 064, 195
BLACKWAY	006	CASIO	049, 063
BLAUPUNKT	019, 053, 057, 060, 113, 118, 244, 245, 246, 247, 248, 249, 308	CATHAY	049, 063
BLUE SKY	006, 049, 063, 123, 195, 232	CCE	049, 063, 379
BLUE STAR	006	CENTURION	049, 063
BONDSTEC	413	CENTURY	044, 054, 065, 163, 189, 324, 411, 413
BOOTS	050, 106, 379	CGE	002, 044, 054, 090, 093, 094, 096, 107, 139, 142, 163, 168, 189, 369, 407, 413, 421
BPL	006, 049, 063	CIHAN	111
BRANDT	074, 182, 218, 415, 424, 436	CIMLINE	031, 123, 134, 195
		CITY	195

CLARIVOX	056, 121, 125, 163, 406	DATSURA	209
CLATONIC	076, 123	DAWA	049, 063
CLATRONIC	031, 045, 049, 063, 076, 113, 123, 195, 225, 379, 407, 413, 421, 431	DAYTRON	049, 063, 195, 226
CMS HIGHTEC	379	DE GRAAF	023, 107, 122, 139, 209, 307
COMTEL	111, 125	DECCA	049, 063, 102, 106, 111, 120, 200, 331, 379
CONCORDE	195	DECCA(UK)	046, 050, 102, 106, 131
CONDOR	006, 045, 049, 050, 063, 113, 163, 195, 210, 379, 413, 421	DEITRON	049, 063
CONTEC	018, 131, 195, 206, 302, 320, 379	DENKO	076
CONTINENTAL EDISON	029, 034, 074, 182, 186, 232, 415, 424	DENON	126, 212
COSMEL	195, 213	DER	321
CROSELY	044	DERWENT	105
CROSLEY	054, 065, 090, 093, 094, 104, 107, 139, 324, 407, 413	DESMET	049, 063, 113
CROWN	049, 063, 154, 163, 170, 195, 209, 232, 372, 407, 419, 421, 431	DIAMANT	049, 063
CS ELECTRONICS	031, 123, 379, 413	DIGILINE	049, 063
CTC	413	DIXI	063, 195, 379, 413
CTC CLATRONIC	045	DOMLAND	423
CURTIS MATHES	126, 190, 212	DORIC	104, 105
CYBERTRON	123	DREAN	049, 063
<b>D</b>		DTS	195
DAENYK	042	DUAL	049, 050, 063, 095, 107, 139, 156, 168, 182, 242, 243, 379, 414, 416, 423, 424
DAEWOO	063, 123, 140, 145, 161, 193, 195, 379	DUAL-TEC	195, 168, 050, 040
DAINICHI	123, 379	DUMONT	045, 065, 080, 102, 139, 146, 319, 324, 339, 341, 375, 379, 406, 408
DANSAI	063, 076, 141, 195, 379	DUMONT-FINLUX	020, 045, 061, 075, 078, 091, 104, 117, 147
DANSETTE	426	DUX	049, 063, 112
DANTAX	392, 421	DYNATRON	049, 063
		<b>E</b>	
		ELBE	049, 063, 107, 121, 123, 172, 194, 210, 242, 337, 368, 369, 391, 411, 421, 435

ELBIT	111
ELCIT	045, 046, 047, 062, 065, 104, 107, 150, 168, 324, 413
ELECTA	006, 076
ELECTRO TECH	195
ELEKTA	006, 076
ELEKTRONSKA	318
ELG	049, 063
ELIN	003, 020, 049, 063, 107, 139, 172, 195, 379, 408, 416
ELITE	031, 049, 063, 123
ELMAN	045, 168
ELTA	076, 195, 379
EMERSON	004, 006, 042, 044, 049, 063, 065, 113, 225, 324, 327, 406, 413
EMPEROR	006
ERRES	063, 112
ESC	049, 063
ETRON	049, 063, 107, 139, 195
EURO-FEEL	076
EUROMANN	049, 063, 076, 379, 421
EUROPA	049, 063
EUROPHON	044, 045, 046, 049, 050, 063, 068, 107, 120, 168, 318, 336, 379, 413
EXPERT	107, 236, 242, 425
EXQUISIT	049, 063, 413

**F**

FAMILY LIFE	049, 063
FENNER	063, 195

FERGUSON	001, 032, 050, 073, 074, 076, 080, 082, 102, 103, 121, 158, 182, 204, 218, 244, 245, 246, 251, 306, 319, 321, 322, 328, 329, 344, 409, 411, 436
FIDELITY	049, 050, 063, 076, 107, 158, 225, 307, 364, 379
FIDELITY(UK)	133
FILSAI	050, 379
FINHER	359
FINLANDIA	033, 122, 139, 172, 197, 209, 223, 307, 375, 419
FINLUX	003, 020, 042, 045, 049, 061, 063, 075, 078, 080, 090, 091, 102, 104, 107, 117, 139, 146, 147, 163, 197, 210, 235, 319, 324, 339, 341, 375, 379, 406, 407, 408, 428, 429, 437
FIRST LINE	045, 049, 063, 094, 102, 107, 134, 139, 191, 195, 209, 210, 379, 411, 413, 416
FISHER	018, 041, 050, 056, 065, 069, 102, 104, 107, 117, 139, 143, 156, 172, 189, 206, 209, 320, 324, 379, 408, 414, 416, 421
FLINT	031, 049, 063, 102, 123, 379, 380
FNR	045
FORGESTONE	158
FORMENTI	090, 107, 113, 139, 307, 324, 379, 407
FORMENTI-PHOENIX	050, 075, 104, 113, 148, 307
FORTRESS	190, 324
FRABA	049, 063, 421
FRIAC	045, 049, 063, 195

FRONTECH 076, 139, 195, 307, 379,  
413, 416

FUJITSU 042, 045, 102, 107, 195,  
236, 327, 379

FUJITSU GENERAL 195, 379

FUNAI 042, 076, 094, 314, 327

**G**

GALAXI 045, 049, 063

GALAXIS 045, 049, 063, 163, 421

GBC 031, 104, 107, 139, 143,  
168, 195

GE 006, 074, 182, 218

GEANT CASINO 107, 425

GEC 049, 063, 102, 104, 107,  
120, 171, 172, 192, 307,  
379, 416

GEC(UK) 046, 050, 102, 107, 150,  
162, 192

GELOSO 031, 047, 062, 104, 107,  
139, 168, 171, 195, 307,  
413

GENERAL 064, 074, 182

GENERAL TECHNIC 195

GENEXXA 049, 063, 123, 307, 426

GOLDHAND 379

GOLDLINE 213

GOODMANS 018, 042, 063, 076, 102,  
134, 139, 141, 143, 155,  
182, 195, 218, 225, 232,  
379, 428

GORENJE 124, 189, 421

GPM 123

GRADIENTE 049, 063, 170, 177

GRAETZ 049, 063, 090, 104, 136,  
139, 153, 159, 162, 171,  
172, 198, 225, 307

GRANADA 013, 018, 033, 041, 063,  
102, 104, 105, 112, 120,  
148, 164, 165, 171, 209,  
218, 237, 238, 240, 241,  
252, 307, 325, 363, 379,  
407, 418, 419

GRANADA(UK) 046, 050, 090, 107, 139,  
143, 162, 307

GRANDIN 006, 031, 049, 063, 107,  
113, 123, 195, 379, 380,  
425, 431, 435

GRONIC 045

GRUNDIG 005, 019, 049, 053, 063,  
080, 090, 101, 115, 118,  
166, 232, 244, 245, 246,  
247, 248, 249, 308, 340,  
341, 406, 407

**H**

HALIFAX 076, 379

HAMPTON 379

HANIMEX 094

HANSEATIC 006, 018, 049, 050, 063,  
094, 104, 107, 113, 143,  
172, 195, 324, 379, 391,  
416, 421, 423

HANTAREX 045, 046, 049, 063, 195

HANTOR 049, 063

HARLEY DAVIDSON 042

HARWOOD 049, 063, 195, 426

HAUPPAUGE 049, 063

HCM 006, 031, 049, 063, 076,  
123, 163, 195, 379, 426

HEMA 195, 379

HEMMERMANN 150, 416

HIFIVOX 029, 034, 074, 182, 186,  
304, 424

HIGASHI 050

HIGHLINE 049, 063, 076

HIKONA 123

HINARI	004, 018, 042, 049, 066, 094, 107, 119, 123, 133, 134, 139, 143, 179, 195, 209, 232, 307, 327	INGELEN	090, 104, 136, 139, 153, 159, 162, 171, 198, 232, 435
HISAWA	006, 031, 123, 380, 425	INGERSOL	195
HIT	342	INNO HIT	044, 046, 049, 050, 063, 066, 102, 123, 155, 195, 217, 379, 407, 413
HITACHI	007, 009, 018, 020, 023, 033, 049, 050, 063, 074, 086, 102, 104, 107, 110, 126, 127, 139, 143, 150, 162, 168, 171, 176, 182, 185, 186, 192, 212, 218, 231, 304, 307, 309, 315, 333, 334, 344, 361, 379, 416, 418	INNOVATION	049, 063
HITASHI FUJIAN	013, 164, 252	INTERACTIVE	210
HITSU	123, 195, 379	INTERBUY	076, 195, 413
HORNYPHON	049, 063, 112	INTERFUNK	049, 063, 065, 067, 074, 090, 104, 107, 112, 139, 150, 153, 159, 172, 182, 301, 302, 324, 363, 421
HOSHAI	123, 379	INTERVISION	006, 045, 049, 055, 063, 076, 107, 123, 225, 232, 378, 379, 380, 381, 382, 384, 385, 386, 387, 388, 389, 413, 421, 423
HUANYU	379	IRRADIO	031, 049, 063, 066, 075, 090, 123, 155, 195, 254, 407, 413
HYGASHI	379	ISUKAI	006, 049, 063, 123
HYPER	050, 168, 195, 254, 361, 379, 413	ITC	379
HYPERSONIC	172	ITS	006, 031, 049, 063, 076, 123, 225, 379
HYPSON	006, 049, 063, 076, 379, 380, 411, 425	ITT	042, 090, 107, 117, 134, 139, 150, 157, 159, 162, 165, 171, 172, 193, 197, 198, 209, 301, 307, 343, 350, 375, 416, 428
<b>I</b>		ITT-NOKIA	042, 090, 097, 104, 107, 117, 134, 136, 139, 150, 153, 159, 162, 165, 171, 172, 185, 193, 197, 198, 209, 301, 307, 343, 350, 375, 416, 428, 433, 435, 437
IBERRIA	049, 063	ITV	049, 063, 076, 413
ICE	049, 063, 076, 123, 195, 225, 379		
ICES	123, 379		
IMPERIAL	002, 044, 049, 054, 063, 090, 093, 094, 107, 142, 163, 168, 189, 301, 307, 369, 407, 413, 416, 421		
INDIANA	049, 063		

**J**

JEAN	018
JEC	141
JET POINT	365
JVC	018, 103, 123, 129, 143, 158, 170, 174, 182, 225, 364, 409, 433

**K**

KAISUI	006, 031, 049, 050, 063, 123, 195, 207, 379, 380
KAMOSONIC	050
KAMP	379
KAPSCH	107, 172, 236, 242, 408
KARCHER	003, 006, 020, 031, 045, 049, 050, 063, 068, 076, 107, 195, 207, 217, 421, 435
KATHREIN	124
KAWASHO	379
KB ARISTOCRAT	107
KENDO	044, 045, 049, 055, 063, 134, 172, 210, 413, 421, 435
KENNEDY	071, 079, 104, 107, 139, 236, 305, 323, 369
KINGSLEY	379
KLARMAX	371, 372
KNEISSEL	049, 063, 210, 242, 369, 391, 411, 421, 435
KOLSTER	045, 049, 063, 416
KONKA	031, 049, 063, 123, 225, 232
KORPEL	049, 063
KORTING	027, 065, 094, 113, 324, 421
KOSMOS	049, 063

KOTRON	076, 426
KRAKING	411
KRIESLER	050, 063, 065, 079, 112, 158, 160, 188
KTV	050, 379
KYOSHU	076, 163
KYOTO	107
KYUSHU	426

**L**

LECSON	049, 063
LEMAIR	210
LENCO	049, 063, 107, 195, 408
LENOIR	050, 195
LESA	413
LEYCO	049, 063, 076, 094, 102, 431
LEYEO	076
LG(GOLDSTAR)	023, 049, 050, 055, 063, 107, 139, 152, 155, 168, 172, 195, 202, 203, 219, 254, 379, 413, 421
LIESENKOTTER	049, 063, 112
LIFETEC	049, 063, 076, 123, 195
LLOYD'S	195
LOEWE	049, 063, 089, 324, 391, 421
LOEWE OPTA	035, 046, 049, 052, 063, 065, 120, 144, 213, 324
LOGIC	331
LOGIK	032, 131, 158, 225, 364
LOGIX	195
LUMA	063, 107, 110, 133, 171, 172, 195, 210, 236, 242, 307
LUMATRON	049, 063, 076, 107, 172, 236, 242, 329, 379
LUX MAY	049, 063, 195

LUXOR 042, 050, 090, 107, 122,  
127, 133, 139, 150, 155,  
159, 165, 172, 185, 197,  
209, 307, 312, 330, 416,  
418, 428, 429

LYCO 076

**M**

M ELECTRONIC 003, 235, 375

MAAZ 371, 372

MADISON 049, 063

MAGNADYNE 045, 046, 047, 062, 065,  
104, 107, 120, 139, 150,  
168, 318, 324, 413

MAGNAFON 045, 046, 050, 068, 075,  
090, 120, 235, 336, 379,  
407

MAGNAVOX 018, 042, 049, 063

MANDOR 076

MANESTH 063, 076, 094, 113, 134,  
141, 379

MANHATTAN 049, 063, 195

MARANTZ 063

MARELLI 324

MARK 063, 195, 379

MASUDA 123, 195, 225

MATSUI 001, 004, 018, 041, 049,  
050, 063, 094, 100, 102,  
106, 107, 131, 134, 141,  
143, 150, 171, 179, 180,  
195, 209, 218, 225, 229,  
232, 244, 245, 246, 307,  
314, 331, 379, 380, 416,  
431

MAXIMAL 119, 139

MAXWELL 371, 372

McMICHAEL 192

MEDIATOR 049, 063, 112

MEDION 049, 063, 195

MEGAS 435

MEGATRON 126, 212

MELECTRONIC 003, 049, 063, 074, 182,  
195, 210, 375, 379, 408,  
413, 416, 428, 429

MELVOX 425,

MEMOREX 099, 195

MEMPHIS 102, 195, 213

MERCURY 049, 063, 195

METZ 019, 049, 051, 053, 065,  
067, 070, 092, 118, 244,  
245, 246, 247, 324, 412

MICROMAXX 049, 063, 195

MINERVA 019, 053, 080, 090, 118,  
232, 244, 245, 246, 247,  
248, 249, 340, 341, 406,  
407

MINOKA 049, 063, 419, 426

MISTRAL 158

MITSUBISHI 013, 018, 019, 021, 049,  
063, 065, 105, 124, 131,  
132, 143, 157, 164, 183,  
190, 244, 245, 246, 252,  
326, 330, 331

MIVAR 043, 046, 050, 058, 072,  
081, 090, 120, 155, 318,  
337, 379, 391, 407, 421,  
434

MONACO 195

MORGAN'S 049, 063

MOTION 407

MOTOROLA 190

MTC 049, 063, 379, 416, 421

MTEC 106

MULTISTANDARD 045

MULTITEC 049, 063, 195

MULTITECH 031, 045, 046, 049, 050,  
063, 120, 189, 195, 379,  
392, 413, 416, 421

MURPHY	102, 104, 105, 107, 117, 171, 254, 307, 379, 408	NOGAMATIC	029, 034, 074, 182, 186, 424
MURPHY(UK)	162	NOKIA	090, 104, 107, 117, 134, 136, 139, 150, 153, 157, 159, 162, 165, 171, 172, 193, 197, 198, 209, 301, 307, 330, 343, 350, 416, 419, 428, 429, 433, 437
MUSIKLAND	123	NORDMENDE	017, 029, 034, 038, 049, 063, 074, 083, 130, 150, 165, 174, 182, 186, 218, 244, 245, 246, 304, 307, 333, 334, 424
<b>N</b>		NOVATRONIC	003, 020, 049, 063
NAD	172, 209	<b>O</b>	
NAIKO	049, 063	OCEANIC	086, 094, 104, 107, 108, 109, 116, 139, 159, 172, 209, 425
NAKIMURA	049, 063	OCEANIC(F)	150
NAONIS	036, 040, 071, 079, 110, 171	ODEON	076
NAT	085, 149, 151	OKANO	049, 063, 076, 102, 421
NATIONAL	033, 085, 104	OMEGA	076
NEC	018, 049, 063, 113, 131, 143, 177, 195, 379, 380	ONCEAS	050
NECKERMANN	002, 012, 049, 050, 063, 065, 107, 133, 139, 163, 180, 189, 210, 247, 250, 307, 312, 324, 357, 379, 413, 416, 421	ONWA	031, 123, 225, 432
NEDIATOR	063	OPERA	049, 063
NEI	063, 125, 225	OPTIMUS	099, 315
NESCO	042, 413	OPTONICA	190
NETSAT	049, 063	ORBIT	049, 063
NETWORK	213	ORION	004, 042, 045, 049, 051, 063, 076, 094, 113, 131, 134, 139, 150, 179, 191, 195, 199, 216, 314, 331, 366, 367, 426
NEUFUNK	049, 063, 195, 435	ORLINE	049, 063, 123
NEW WORLD	123	ORMENTI-PHOENIX	104
NEWTECH	049, 050, 063, 182, 195, 379	ORMOND	195
NICAMAGIC	379	OSAKA	066
NIKKAI	018, 049, 063, 076, 102, 123, 139, 141, 195, 213, 379	OSAKI	049, 063, 066, 076, 102, 106, 123, 379, 426
NIKKIA	066		
NOBLEX	049, 063, 076, 359, 360		
NOBLIKO	044, 045, 050, 075, 080, 090, 235, 379, 406, 407		

OSIO	049, 063, 155	PHILHARMONIC	379
OSO	123	PHILIPS	015, 022, 049, 050, 063, 065, 079, 089, 111, 112, 157, 158, 160, 175, 182, 188, 192, 215, 217, 220, 221, 247, 250, 313, 324, 337, 342, 350, 363, 374, 427
OSUME	018, 102, 123, 302	PHOENIX	049, 050, 063, 075, 102, 104, 107, 113, 148, 324, 379, 392, 421
OTTO VERSAND	012, 018, 049, 050, 053, 063, 074, 094, 104, 107, 113, 134, 139, 143, 172, 190, 244, 245, 246, 247, 250, 312, 357, 362, 379, 413, 414, 416	PHONOLA	022, 050, 063, 065, 079, 112, 158, 160, 188, 250, 324, 379
<b>P</b>		PILOT	049, 063
P.T ACTRON	111	PIONEER	049, 063, 074, 172, 182, 209, 218, 227, 307, 421, 427
PAEL	050, 075, 379	PIONIER	392, 421
PALLADIUM	012, 049, 063, 107, 163, 210, 247, 324, 357, 379, 413, 416, 421	PLANTRON	049, 063, 076, 195
PALSONIC	049, 055, 063, 076, 379, 426	PLAYSONIC	379
PANAMA	049, 063, 076, 195, 379, 413	POLICOM	074
PANASONIC	049, 063, 099, 104, 107, 137, 139, 149, 151, 172, 397, 398, 400, 401, 405	POPPY	195
PANAVISION	049, 063, 210	POWERPOINT	232
PATHE CINEMA	107, 113, 121, 379, 391, 411, 416, 425	PRANDONI-PRINCE	044, 046, 075, 090, 120, 171, 172, 307, 407, 413
PATHE CINEMA(F)	050, 168	PRECISION	379
PATHE MARCONI	029, 034, 074, 182, 186, 415, 424	PREMIER	142
PAUSA	195	PRIMA	076, 195, 307
PAUZA	195	PRINCE	044, 046, 075, 171
PERDIO	049, 063, 102, 107, 113	PRINZ	102, 185, 416
PERFEKT	049, 063	PROFEX	107, 139, 195
PERSHIN	425	PROFI-TRONIC	045, 049, 063
PHILCO	002, 016, 044, 049, 054, 063, 065, 090, 093, 094, 104, 107, 126, 142, 163, 168, 189, 212, 324, 369, 407, 413, 421	PROLINE	030, 049, 102, 112, 191, 366, 436
		PROSONIC	049, 063, 085, 149, 151, 195, 225, 379, 421, 431
		PROTECH	045, 063, 076, 139, 163, 195, 379, 413, 416

PROVISION 049, 063  
 PYE 050, 063, 065, 079, 112,  
 157, 158, 160, 188, 250  
 PYMI 049, 063, 112, 195, 324

**Q**

QUADRA VISION 425  
 QUASAR 045, 046, 068, 075, 099,  
 155, 413  
 QUELLE 003, 018, 019, 020, 049,  
 050, 053, 063, 074, 075,  
 076, 078, 080, 090, 091,  
 094, 113, 115, 117, 118,  
 131, 139, 146, 147, 150,  
 153, 155, 172, 195, 206,  
 235, 244, 245, 246, 247,  
 254, 301, 319, 320, 340,  
 341, 379, 406, 408, 413,  
 416  
 QUESTA 018

**R**

RADIALVA 049, 063, 074, 107, 123  
 RADIOLA 050, 063, 065, 079, 112,  
 158, 160, 188, 250, 342  
 RADIOMARELLI 045, 046, 047, 062, 063,  
 065, 104, 105, 150, 168,  
 324, 413  
 RADIONETTE 003, 020, 117, 150  
 RADIO SHACK 049, 063  
 RADIOTONE 049, 063, 076, 163, 195,  
 421, 426, 431  
 RAMK 341  
 RANDT 029  
 RANK 147, 406  
 RBM 341  
 RBM(UK) 147  
 RCA 190, 218, 436

RECOR 049, 063  
 RECTILIGNE 049, 063  
 REDIFFUSION 018, 059, 105, 139, 171,  
 172, 307, 343  
 REDIFFUSION(UK) 150, 162  
 REDIFUSION 104, 105  
 REDSTAR 049, 063  
 REFLEX 049, 063  
 REVOX 049, 063, 421  
 REX 036, 040, 063, 071, 079,  
 095, 107, 110, 171, 210,  
 236, 242, 243, 305, 307,  
 323, 338, 413  
 RFT 076, 102, 390, 391, 392,  
 393, 394, 395, 421  
 R-LINE 049, 063  
 ROADSTAR 031, 049, 063, 076, 163,  
 195  
 ROBOTRON 056, 065, 324  
 RODEX 049, 063  
 ROTEL 302  
 ROWSONIC 050  
 ROYAL LUX 421, 426  
 RTF 056, 065

**S**

SABA 014, 017, 029, 034, 038,  
 046, 065, 074, 077, 107,  
 120, 133, 139, 172, 182,  
 186, 218, 304, 307, 324,  
 333, 334, 424, 436  
 SACCS 121  
 SAGEM 006, 380, 435  
 SAISHO 004, 050, 076, 084, 107,  
 131, 132, 134, 179, 195,  
 233, 307, 330, 331, 379

## 114 Universal Remote Control

---

SALORA	033, 075, 107, 127, 133, 136, 139, 148, 150, 153, 171, 172, 185, 198, 209, 301, 307, 312, 416, 418, 419	SEL SINUDYNE	250
SAMBERS	045, 046, 068, 075, 090, 120, 155, 336, 407	SELECO	036, 040, 063, 071, 079, 095, 107, 110, 171, 172, 210, 236, 242, 243, 305, 307, 323, 338, 339, 369
SAMSUNG	050, 063, 066, 076, 102, 155, 189, 195, 217, 359, 360, 365, 379, 421	SENCORA	195
SANDRA	379	SENTRA	123, 139, 141, 195
SANELA	411	SERINO	380, 435
SANSUI	049, 063, 225	SHARP	018, 094, 143, 170, 190, 206, 214, 302, 362, 364
SANTON	195	SHORAI	042, 094
SANYO	003, 018, 020, 041, 049, 050, 056, 063, 065, 102, 107, 117, 131, 143, 189, 195, 198, 201, 206, 209, 302, 320, 325, 331, 351, 379, 391, 408, 421	SIAM	049, 063
SAVE	049, 063	SIAREM	045, 046, 065, 104, 107, 120, 139, 324
SBR	063, 112, 157, 158, 192, 313	SICATEL	121
SCHAUB LORENZ	090, 104, 136, 139, 153, 159, 162, 171, 198, 307, 416, 433	SIEMENS	003, 018, 019, 023, 049, 053, 063, 066, 113, 118, 206, 244, 245, 246, 247, 248, 249, 302, 307
SCHNEIDER	031, 040, 050, 063, 065, 069, 079, 095, 104, 107, 112, 114, 139, 148, 156, 158, 160, 168, 172, 182, 188, 195, 225, 242, 243, 250, 307, 328, 342, 379, 413, 414, 416, 423	SIERA	050, 063, 065, 079, 112, 158, 160, 188
SCOTT	042, 327	SIERRA	049, 063, 112
SEARS	042	SIESTA	421
SEG	018, 045, 049, 050, 056, 063, 076, 107, 172, 195, 232, 379, 413	SILVA	049, 063, 379
SEI	004, 045, 049, 051, 063, 094, 107, 139, 236, 314, 324, 357, 416	SILVER	018, 042, 049, 063, 076, 172
		SINGER	045, 047, 049, 063, 065, 104, 195, 324, 369, 413, 425
		SINUDYNE	004, 031, 045, 051, 063, 065, 094, 104, 107, 134, 139, 150, 172, 210, 216, 236, 314, 324, 357, 366, 367, 416
		SKANTIC	307, 418
		SKY	049, 063
		SOGERA	113
		SOLAVOX	066, 102, 107, 123, 139, 172, 307

SONITRON	209, 379, 421
SONNECLAIR	049, 063
SONOKO	006, 050, 063, 076, 195, 379
SONOLOR	012, 107, 139, 159, 172, 209, 357, 425
SONTEC	049, 063, 094, 421
SONY	012, 018, 028, 045, 131, 143, 204, 208, 211, 331, 357, 358, 370
SOUND & VISION	031, 045, 123
SOUND WAVE	049, 113, 163
SOUNDESIGN	042
SPECTRA	195
SSANGYONG	195
STANDARD	049, 050, 063, 113, 123, 195, 379
STARLIGHT	049, 063, 076, 107, 195
STENWAY	006, 031, 123
STERN	036, 040, 063, 071, 079, 095, 107, 110, 171, 236, 242, 243, 305, 307, 323, 338
STRATO	049, 063, 076, 195
SUNKAI	049, 063, 094, 123, 134, 179, 191, 232, 314, 367
SUNSTAR	049, 063, 195, 225, 431
SUNWOOD	049, 063, 195
SUPERLA	379
SUPERTECH	049, 063, 123, 195, 379
SUPRA	195
SUSMU	218
SUTRON	195
SWISSLINE	413
SYDNEY	379
SYTONG	425

**T**

TACTUS	106
TANDBERG	065, 074, 078, 172, 182, 210, 213, 304
TANDY	050, 096, 102, 123, 190, 307, 379, 413
TASHIKO	018, 050, 107, 143, 177, 192, 201, 379, 419
TATUNG	049, 050, 063, 102, 106, 111, 120, 131, 200, 253, 331, 379
TEAC	049, 063, 076, 195, 380, 416, 426
TEC	040, 050, 064, 168, 195, 213, 218, 242, 243, 379, 413
TECH LINE	049, 063, 195
TECHICA	123
TECHNEMA	113
TECHNICS	099, 315
TEDELEX	379
TEIRON	195
TEKNIKA	042, 327
TELEAVIA	029, 034, 074, 182, 186, 415, 424
TELECOR	049, 063, 107, 123, 242, 379, 423
TELEFUNKEN	032, 049, 063, 064, 074, 082, 182, 186, 187, 218, 392, 424, 436
TELEFUSION	049, 063
TELEGAZI	049, 063, 076, 107, 123, 242
TELEMEISTER	049, 063, 113
TELESONIC	049, 063
TELESTAR	049, 063
TELETECH	049, 063, 195, 213, 413

## 116 Universal Remote Control

---

TELETON	018, 067, 107, 236, 242, 379, 416	TRANS CONTINENS	044, 046, 049, 063, 075, 171, 307, 379
TELEVIDEON	050, 075, 104, 107, 113, 148, 379	TRANSONIC	049, 063, 380
TELEVISIO	425	TRANSTEC	379
TEMCO	094	TRIDENT	379
TEMPEST	049, 063, 195	TRISTAR	123, 364
TENNESSEE	049, 063	TRIUMPH	004, 046, 049, 063, 128, 147, 197, 235, 339, 375
TENSAI	003, 020, 050, 055, 063, 094, 113, 117, 123, 195, 225, 379, 408, 413	<b>U</b>	
TETUNG	046	UHER	049, 063, 069, 080, 090, 113, 147, 148, 163, 236, 242, 307, 392, 407, 414, 421
TEVION	049, 063, 195	ULTRAVOX	044, 045, 047, 049, 050, 063, 065, 104, 107, 133, 139, 324, 379, 413
TEXET	050, 195, 379	UMA	305
THOMSON	008, 010, 017, 024, 029, 034, 049, 063, 064, 074, 134, 147, 174, 182, 186, 218, 230, 234, 304, 309, 333, 334, 415, 424, 436	UNIC LINE	049, 063, 165
THORN	049, 053, 063, 103, 106, 141, 158, 218, 222, 321, 329, 408, 409, 411, 419	UNITED	049, 063
THORN-FERGUSON	032, 073, 074, 076, 080, 082, 103, 121, 158, 306, 319, 321, 322, 328, 329, 357, 358, 364, 375	UNIVERSUM	003, 004, 012, 018, 020, 049, 063, 074, 076, 094, 107, 131, 155, 163, 165, 172, 195, 202, 206, 210, 213, 235, 244, 245, 246, 320, 357, 375, 379, 406, 407, 408, 413, 416, 421, 428, 429, 437
THRON	117	UNIVOX	049, 063, 107, 121, 213, 324, 409, 411
TMK	143	UTAX	050
TOKAI	049, 063, 102, 107, 195, 213, 379	<b>V</b>	
TOKYO	141, 379	VEGAVOX	163
TOMASHI	006, 031, 123	VESTEL	049, 063, 107, 125, 364, 379
TOSHIBA	001, 018, 045, 128, 141, 143, 147, 205, 341, 369, 379, 406	VEXA	063, 195
TOWADA	045, 379, 416	VICTOR	174
TOYODA	195	VIDEO SYSTEM	049, 063
TRAKTON	076	VIDELOGIQUE	031, 123, 379

VIDEO SYSTEM	049, 063	WESTINGHOUSE	063, 094
VIDEOTECHNIC	113, 379	WESTON	168
VIDEOTON	107, 418	WHARFEDALE	049, 063
VIDIKRON	045	WHITE	045
VIDTECH	018	WHITE WESTINGHOUSE	049, 050, 063, 113, 213, 379
VIPER	213	WINCO	426
VISIOLA	379	WINDSTAR	006
VISION	049, 063, 113	WINTERNITZ	361
VISTAR	172, 236		
VOLTEC	074	<b>X</b>	
VORTEC	063	XRYPTON	049, 063
VOXSON	049, 063, 065, 090, 163, 171, 307, 324, 407	<b>Y</b>	
		YAMISHI	006, 049, 063, 123, 379, 380
<b>W</b>		YOKAN	049, 063
WALTHAM	049, 063, 163, 182, 307, 379, 418	YOKO	049, 050, 063, 076, 123, 195, 379, 413, 421
WATSON	049, 063, 107, 113, 123, 195, 244, 245, 246, 423, 431	YORX	123
WATT RADIO	045, 050, 068, 104, 107, 121, 139, 150, 336, 379, 416	<b>Z</b>	
WEGA	018, 049, 063, 139, 143, 324	ZANUSSI	036, 040, 063, 071, 079, 095, 110, 171, 236, 305, 307, 323, 338, 379
WEGA COLOR	065, 088	ZOPPAS	036, 040, 071, 079, 110, 171, 307
WEGAVOX	195		
WELTBlick	063, 113		

## A.2 Code list for DVD players

<b>3</b>					
	3 DLAB		072		
<b>A</b>					
	AIWA		075		
	ALBA		087		
	AMSTRAD		085		
	A-TREND		086		
<b>B</b>					
	BLUE SKY		080		
	BUSH		078, 079, 082, 085		
<b>C</b>					
	CINE ULTRA		082		
	CYBER HOME		086		
<b>D</b>					
	DAEWOO		083		
	DENON		002, 019, 022, 034, 051		
	DENVER		082		
	DENZEL		077		
	DIGITOR		079		
	DIVIDO		083		
	DUAL		076, 077		
<b>E</b>					
	ELTA		079		
	ENZER		077		
<b>G</b>					
	GE		003, 004		
	GRUNDIG		072, 080		
<b>H</b>					
	HARMAN KARDON		001, 066		
	HITACHI		077		
<b>J</b>					
	JMB		080		
	JVC		006		
<b>K</b>					
	KENWOOD		007, 034, 043, 050, 069		
	KISS		077		
<b>L</b>					
	LAWSON		083		
	LECSON		081		
	LENCO		082		
	LG(GOLDSTAR)		005, 055, 064, 070		
	LIFETEC		076		
	LOGIX		083		
<b>M</b>					
	MAGNAVOX		009, 033, 056		
	MANHATTAN		083		
	MARANTZ		033, 059, 072		
	MATSUI		076, 080		
	MEDION		076, 083		
	MICROMEDIA		009		
	MICROMEGA		072		
	MINOWA		083		
	MITSUBISHI		023, 036		
	MONYKA		077		
<b>N</b>					

NAD	010, 062	SHINCO	087
NEUFUNK	077	SM ELECTRONIC	079
<b>O</b>		SONY	015, 029, 043, 045, 067
ONKYO	009, 015, 048	STANDARD	076
OPTIMUS	050	<b>T</b>	
ORION	080	TEAC	087
ORITRON	076	TECHNICS	034
<b>P</b>		TENSAI	076, 079
PANASONIC	024, 025, 030, 034, 035, 044, 052	TEVION	076
PHILIPS	009, 033, 056, 072	THOMSON	003, 004, 073
PHONOTREND	082	TOKAI	077
PIONEER	010, 012, 020, 038, 041, 046, 065, 071, 074	TOKIWA	083
PROLINE	076	TOSHIBA	009, 010, 033, 057, 058
PROSCAN	003, 004, 037	TV PROJECT	008
PROVISION	082	<b>U</b>	
<b>R</b>		UNIVERSUM	085
RAITE	077	<b>W</b>	
RCA	003, 004, 018, 037	WALKVISION	087
REC	034, 078	WESDER	082
REVOY	082	WHARFEDALE	081
ROADSTAR	078, 079, 082	<b>Y</b>	
<b>S</b>		YAMAHA	016, 017, 030, 034, 063
SANSUI	080	YAMAKAWA	077, 084
SCAN	083	<b>Z</b>	
SCHNEIDER	076	ZENITH	005, 009, 033, 055, 064, 083
SEG	077, 085		
SHARP	021, 028, 050		

### A.3 Code list for audio-video receivers

<b>A</b>			FLEXTRONICS	207
ADCOM	082, 092, 225, 161, 023, 148, 149		FOSGATE_AUDIONICS	231, 134
AIWA	170, 018, 104, 202, 203, 213, 211, 188		<b>G</b>	
AKAI	189		GOLDSTAR	008
ANTHEM	127, 128		<b>H</b>	
ARCAM	141, 255		HARMAN_KARDON	231, 233, 153, 154, 118, 119
ATLANTIC_TECHNOLOGY	134		HITACHI	020
AUDIO_FILE	071		<b>I</b>	
<b>B</b>			INTEGRA	029
B&K	096, 097		<b>J</b>	
BOSE	070, 170, 224, 147, 227, 199		JVC	163, 191, 114, 034, 091
BOSTON_ACOUSTICS	246		<b>K</b>	
<b>C</b>			KENWOOD	026, 066, 145, 192, 182, 005, 037, 196, 252
CARVER	006, 028, 061, 071, 201, 214, 226, 185, 022, 077, 050		KLH	123
CLARION	026		KRELL	150, 072, 197, 222
<b>D</b>			<b>L</b>	
DELPHI	251		LEXICON	120, 235, 236, 237, 159, 160
DENON	109, 215, 230, 234, 002, 121, 133		LINN	124, 206
<b>E</b>			LUXMAN	137, 139, 052, 165, 115, 004, 009
ELAN	057, 090		<b>M</b>	
ESCIENT	229		MAGNAVOX	086, 164, 152, 208
<b>F</b>			MARANTZ	006, 028, 031, 040, 063, 185, 186, 015, 056
FISHER	047, 214, 182		MCINTOSH	238, 053

MERIDIAN	100, 012, 013
MITSUBISHI	242, 243, 204
MONDIAL	157, 158, 042, 043, 081, 112
MYRYAD	030, 099

**N**

NAD	186, 113, 038, 216, 210
NAKAMICHI	111, 244, 245, 172, 183, 054
NIRO	135
NILES	241

**O**

ONKYO	029, 017, 046, 108, 080, 209
OPTIMUS	026, 041
OUTLAW	134

**P**

PANASONIC	032, 195, 219, 177, 098, 221
PARASOUND	129, 130, 132, 003, 103, 105, 125, 126
PHILIPS	249, 250, 063
PIONEER	014, 039, 044, 069, 168, 116, 035, 078
POLKAUDIO	251
PROCEED	144, 021

**R**

RCA	010, 048, 117, 156, 067, 055
REALISTIC	019, 073, 075
ROTEL	074, 083, 085
RUSSOUND	223, 239

**S**

SAMSUNG	016
SANSUI	040, 048, 110, 065, 228, 063
SANYO	047, 059
SCOTT	019
SHARP	026, 094, 131, 175
SHERWOOD	024, 102, 106, 246
SONY	018, 247, 248, 166, 101, 184, 218, 025, 179, 180, 220
SOUNDESIGN	036
SUNFIRE	142, 143, 146

**T**

TEAC	005, 019, 049, 111, 212, 217
TECHNICS	122, 193, 219, 178, 177, 200, 254, 007
THETA.DIGITAL	136
TOSHIBA	060, 087, 033

**Y**

YAMAHA	026, 253, 169, 067, 173, 205, 011, 232, 089, 027, 051, 181
--------	--

# Index

1st Audio Language, [33](#)  
1st Subtitle Language, [33](#)  
2nd Audio Language, [33](#)  
2nd Subtitle Language, [33](#)  
4:3, [35](#)  
16:9, [35](#)  
22 kHz, [21](#)

## A

A/V Output, [34](#)  
Access Control, [41](#)  
Active, [46](#)  
Add to Fav, [49](#)  
Advanced, [27](#)  
After next program, [64](#)  
After this program, [64](#)  
ALL, [28](#)  
Alphabetic, [49](#), [58](#), [70](#)  
Animation, [45](#)  
*Astra*, [98](#)  
AUDIO L, [16](#)  
AUDIO L/R, [11](#)  
AUDIO R, [16](#)  
Auto, [26](#)  
Automatic Power Down, [46](#)

## B

Battle Tank (Network), [85](#)  
Battle Tank (Single), [81](#)  
Brightness in Operation Mode, [46](#)  
Brightness in Standby Mode, [46](#)  
Button, [4](#)  
Buttons, [102](#)

## C

C band, [20](#)  
CAM, [7](#)  
CAS Only, [38](#)  
CAS only, [28](#)  
CAS–FTA, [49](#), [58](#)  
Censorship, [41](#)  
Center, [35](#)  
Center extract, [36](#)  
Change PIN Code, [41](#)  
CI, [7](#)  
COAXIAL, [17](#)  
Common Interface, [7](#), [8](#)  
Component, [34](#)  
Connection Type, [21](#), [90](#)  
Cut, [76](#)

**D**

Date, [67](#)  
Daylight Saving Time, [39](#)  
Default, [49](#), [58](#)  
Delete, [49](#), [58](#)  
Descramble Mode, [44](#)  
DHCP, [90](#)  
DiSEqC, [21](#)  
DiSEqC 1.0, [22](#)  
DiSEqC 1.1, [22](#)  
DiSEqC Command Mode, [23](#)  
Display Format, [35](#), [36](#)  
DivX, [44](#)  
Dolby Digital, [37](#)  
Duration, [64](#), [67](#)  
DVB, [1](#)  
DVB-S2 8PSK, [26](#), [27](#), [29](#)  
DVB-S2 QPSK, [26](#), [27](#), [29](#)

**E**

Edit Favorite List, [59](#)  
Edit Service List, [57](#)  
ENERGY, [84](#)  
EPG Gathering Time, [42](#)  
eSATA, [11](#), [62](#)  
Every Day, [66](#)  
Every Weekday, [67](#)  
Every Weekend, [67](#)

**F**

Factory Setting, [30](#)  
Fav–NoFav, [49](#), [59](#)  
FEC, [26](#), [27](#), [29](#)  
File Management, [91](#)  
File Name, [67](#)  
Font Color, [44](#)  
Font Size, [44](#)  
Format Hard Disk, [77](#)

Frequency, [23](#), [25–28](#)  
Front Display, [45](#)  
FTA + CAS, [28](#)  
FTA only, [28](#)  
FTA/Scrambled, [28](#)  
FTA–CAS, [49](#), [58](#)  
FTP Server, [92](#)  
Full, [35](#)  
Full Scroll, [45](#)

**G**

Gateway, [90](#)  
GMT, [38](#)  
GMT Collection, [38](#)  
Goto, [23](#)  
Goto the position, [25](#)

**H**

Hard of hearing, [33](#)  
HD Output, [34](#)  
HDMI, [11](#), [14](#), [34](#)  
high definition, [34](#)  
Home Transponder, [42](#)

**I**

.idx, [44](#)  
Info Box Display Time, [45](#)  
Info Box Position, [45](#)  
information box, [51](#)  
Instant Recording Duration, [43](#)  
IP Address, [90](#)  
IP Setting, [89](#), [90](#)

**J**

Jump Time Interval, [44](#)

**K**

$K_u$  band, [20](#)

keyboard, 61

## L

LAN, 12

Language, 32

Letter Box, 36

LNB, 20

LNB 1 IN, 11, 13, 21

LNB 1 OUT, 11, 13, 14, 21

LNB 2 IN, 11, 13, 14, 21

LNB 2 OUT, 11, 14

LNB Frequency, 21

LNB Power, 21

LNB Setting, 20

Local Time, 39

Lock, 49, 58, 71

Locked, 71

Loop Through, 21

## M

Main Display Scrolling, 45

Manual, 26

Media Player, 80

Media Subtitle, 44

MediaHighway EPG, 42

Menu Language, 32

Mini A, 22

MKV, 44

Mode, 38, 39, 66, 67

Modulation, 26, 27, 29

mono, 37

Motor Control, 23

Motorized DiSEqC 1.2, 23

Motorized DiSEqC 1.3, 24

MOVE, 84

Move, 25, 58

Movement, 23

MP3 Player, 80

MP4, 44

multifeed, 54

My Latitude, 24

My Longitude, 24

## N

Network Firmware Upgrade, 97

Network Search, 26

NEW, 59

No block, 41

Normal, 38

normal-screen television, 35

## O

ON/OFF, 12

Once, 46

One Time, 66

OPTICAL, 17

OSD, 44

OSD Transparency, 44

OTA Firmware Upgrade, 98

Other, 21

Others, 46

## P

Parental Control, 40

Part Scroll, 45

Passive, 46

Password, 90, 92

PID, 27

Pilot, 26, 27, 29

PIN, 40

Playback, 43

Polarization, 26, 27

port forwarding, 88

POWER, 84

Primary DNS, 90

progress bar, 68

Provider, [49](#), [59](#)

## R

radio services list, [58](#)

Record, [66](#)

Recorded Program, [65](#), [70](#), [72](#),  
[75](#)

recorded programme list, [70](#)

Recording, [42](#)

Recording Drive, [43](#)

Recover System Data, [31](#)

Rename, [49](#), [58](#), [71](#)

Reservation, [66](#)

Reset Service List, [31](#)

## S

S/PDIF, [37](#)

S/PDIF COAXIAL, [12](#)

S/PDIF OPTICAL, [12](#)

SAT Name Edit, [29](#)

SAT/TP Edit, [29](#)

Satellite, [38](#), [48](#), [49](#), [58](#), [66](#)

Satellite Angle, [24](#)

satellite list, [20](#)

Satellite Name, [20](#), [21](#), [23](#), [24](#), [26](#)–  
[29](#), [42](#)

Save, [76](#)

SCART, [34](#)

SCART Output, [36](#)

Search Mode, [26](#)–[28](#)

Searching, [25](#)

Secondary DNS, [90](#)

Separated, [21](#)

Service, [66](#)

Services Copy, [28](#)

services list, [47](#)

Show Provider, [49](#)

Size, [70](#)

SMATV, [25](#), [28](#)

.smi, [44](#)

Sort, [58](#)

Sorting, [49](#), [70](#)

Sound Mode, [37](#)

specifications, [12](#)

.srt, [44](#)

Standby Mode, [46](#)

Start, [98](#)

Start firmware upgrade, [97](#)

Start Search, [28](#)

Start Time, [67](#)

Starting Position, [43](#)

stereo, [37](#)

Store, [23](#)

Store System Data, [30](#)

.sub, [44](#)

Sub Display Content, [46](#)

Subnet Mask, [90](#)

Symbol Rate, [26](#)–[28](#)

Sync, [44](#)

System ID, [95](#)

System Status, [95](#)

## T

television services list, [58](#)

Text Scroll, [45](#)

Time, [38](#), [41](#), [70](#)

time format, [39](#)

Time Offset, [38](#)

Time Padding of Timer Record-  
ing, [43](#)

Time Shift Storage, [43](#)

Time Shifting, [42](#), [55](#), [64](#)

timer list, [66](#)

Timer Recording Duration, [43](#)

Total block, [41](#)

Transponder, [23](#), [25](#), [38](#), [49](#), [59](#)

Trick Mode Level, [44](#)  
Tuner, [48](#)  
Tuner 1, [21](#)  
Tuner 1 to Tuner 2, [28](#)  
Tuner 2, [21](#)  
Tuner 2 to Tuner 1, [28](#)  
Tuner Select, [21](#), [23](#), [24](#), [42](#), [66](#)  
TV, [11](#), [15](#)  
TV Aspect Ratio, [35](#)  
Type, [66](#)

## U

USALS, [24](#)  
USALS Setting, [24](#)  
USB, [12](#), [62](#), [96](#)  
USB Firmware Upgrade, [96](#)  
User, [23](#)  
User ID, [90](#), [92](#)  
User Info, [90](#), [92](#), [93](#)  
User Select, [38](#)

## V

VCR, [11](#), [17](#)  
VCR SCART Type, [37](#)  
VIDEO, [11](#), [16](#)  
Video Format, [34](#)  
VOB, [44](#)

## W

Web Server, [90](#)  
Weekly, [67](#)  
wide-screen television, [35](#)

## Y

Y/Pb/Pr, [11](#)





Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



DivX<sup>®</sup> is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit <http://www.divx.com> for more information and software tools to convert your files into DivX video.

About DivX Video-On-Demand: This DivX Certified<sup>®</sup> device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in the device setup menu. Go to <http://vod.divx.com> with this code to complete the registration process and learn more about DivX VOD.



#### **Correct disposal of this product**

This marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product or their local government office for details of where and how they can dispose this product for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

Topfield continues to improve the digital receiver which this guide explains. So some explanations and illustrations in this guide could be different from the actual digital receiver.